ADVANCED TECHNOLOGY SOLUTIONS

STATE OF THE ART REMOTE ACCESS CCTV

2010 ATS User's Manual V.5.4.0

www.atscctv.com

Technical Support: alex4ats@yahoo.com

Phone: 323.658.5005

ADVANCED TECHNOLOGY SOLUTIONS

STATE OF THE ART REMOTE ACCESS CCTV

Software Installation

STEPS

1. INSERT ATS CD
2. DOUBLE-CLICK “ATS.ENGLISH”

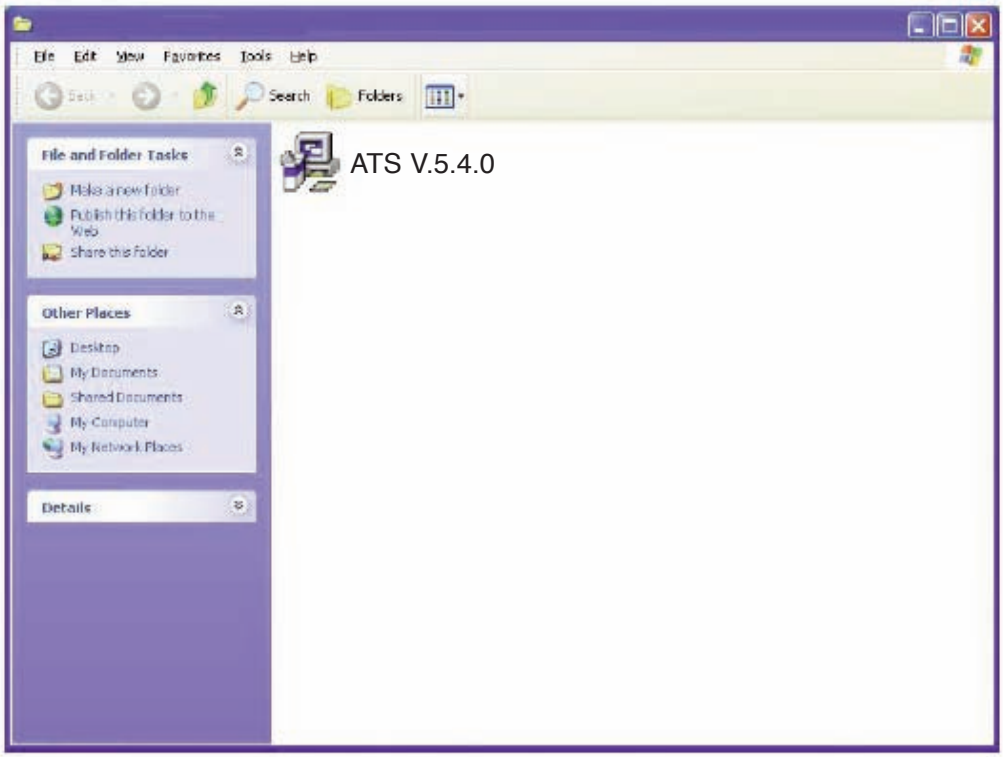

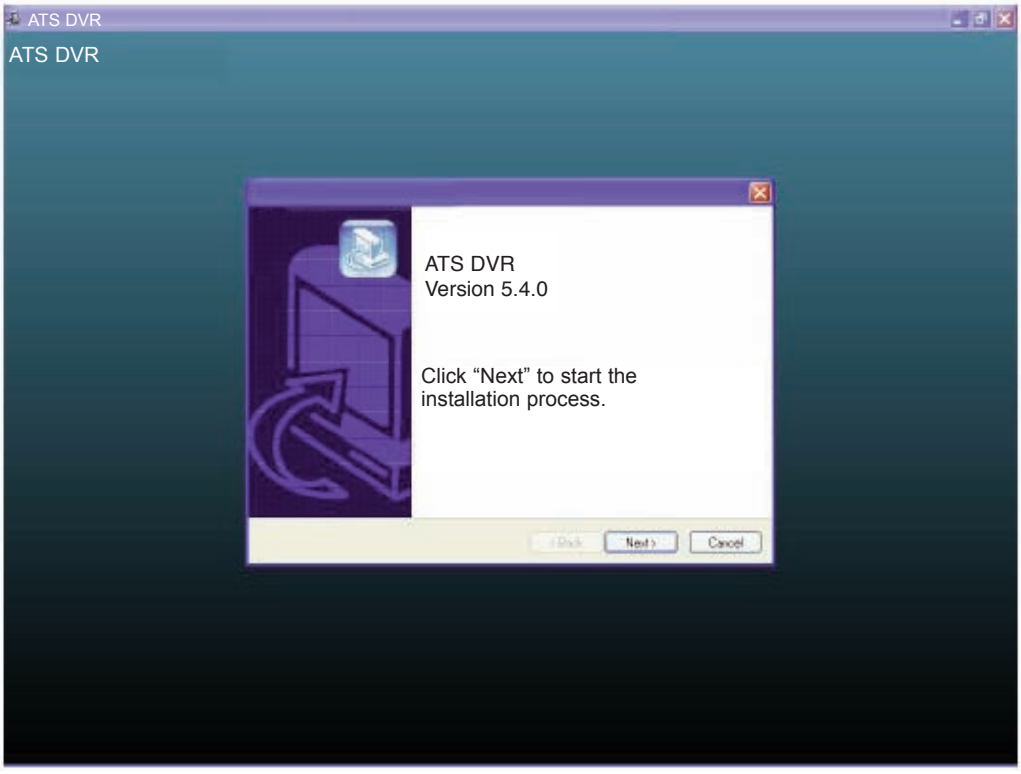

Automatic Installation

Definition: It is a method to install all the relevant softwares automatically. Select "Automatic Installation" at all times unless only "ATS Client" is to be installed.

•Installation Method Selection

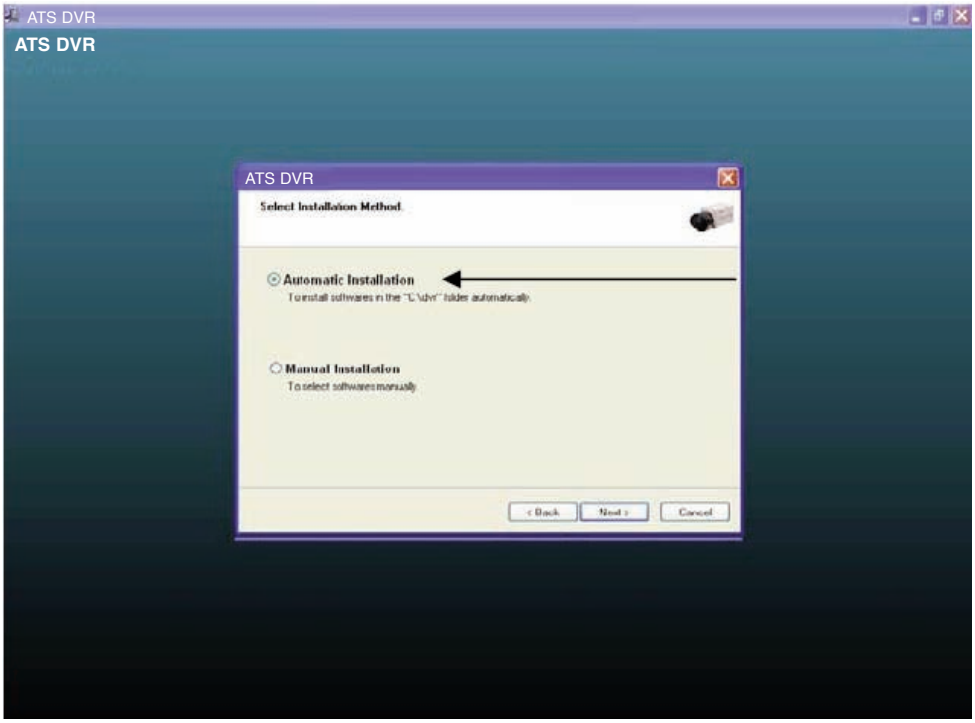

•Installing Drivers

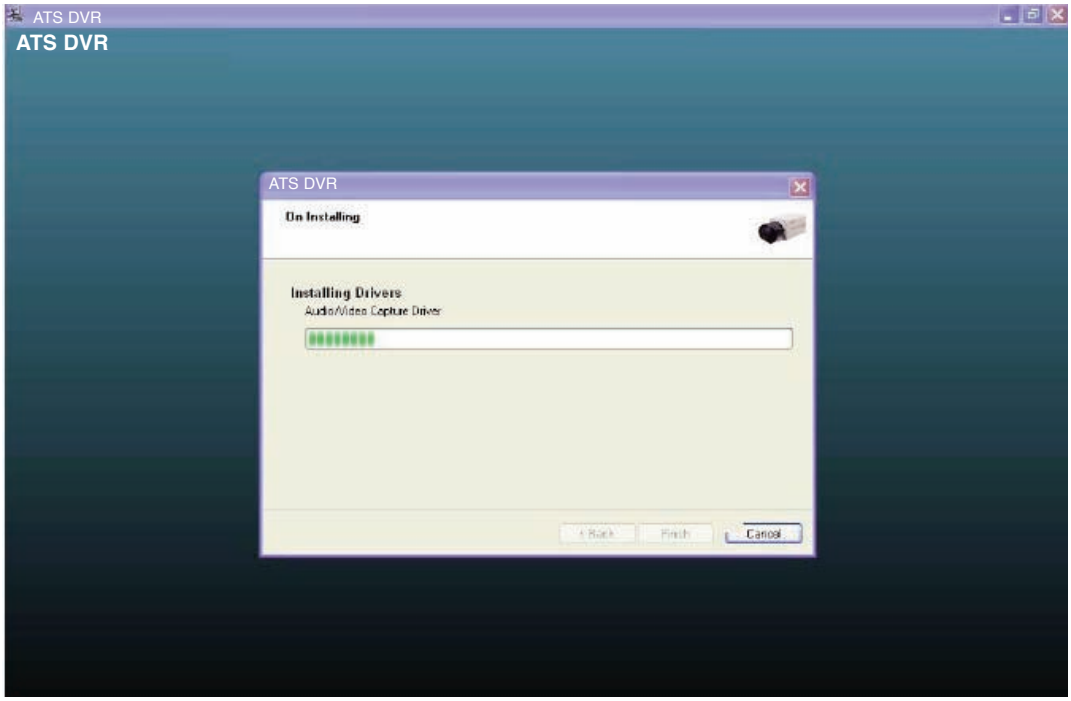

DVR File System Installation

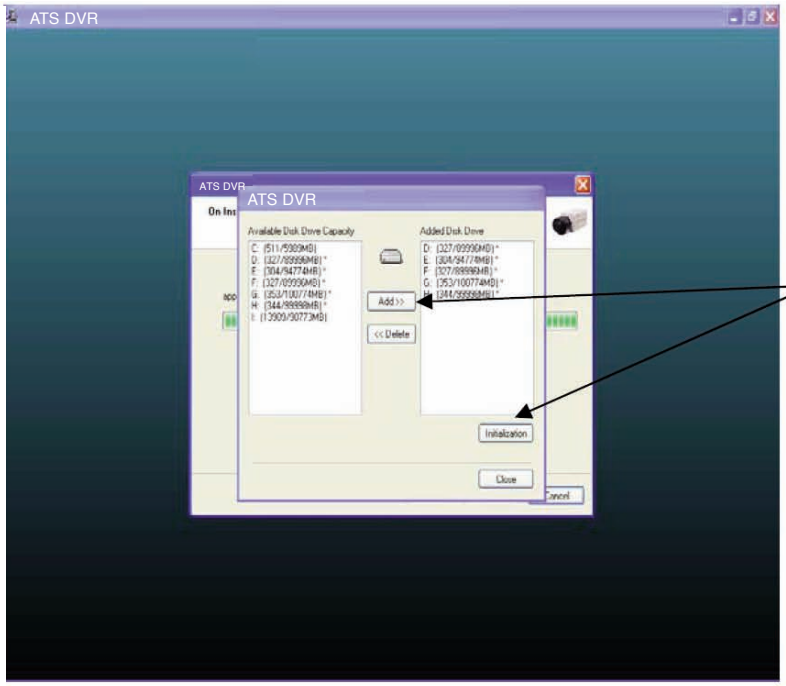

Definition:
Occupying disc capacity to record data.

Steps:
1. Select drives from "Availabl Disk Drive Capacity"
2. Click "Add"
3. Click "Initialization"

Caution:
1. Be very careful not to add "C Drive", for it is used for O/S and DVR softwares.
2. HDD has to be initialized to record data.

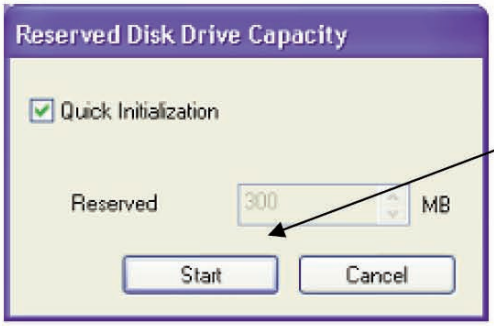

Selecting "Quick Initialion" will lead to the initialion of entire disk capacity added. Otherwise, put in desireable number to initialize. Note that the number can not exceed total capacity added.

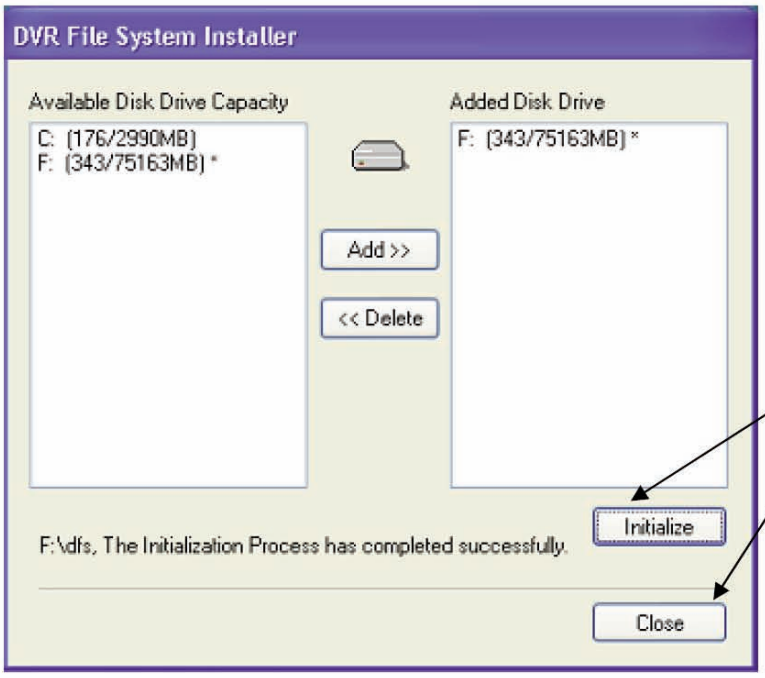

Initialization process will be performed automatically. Click "Close" upon completion.

Completion and Retry

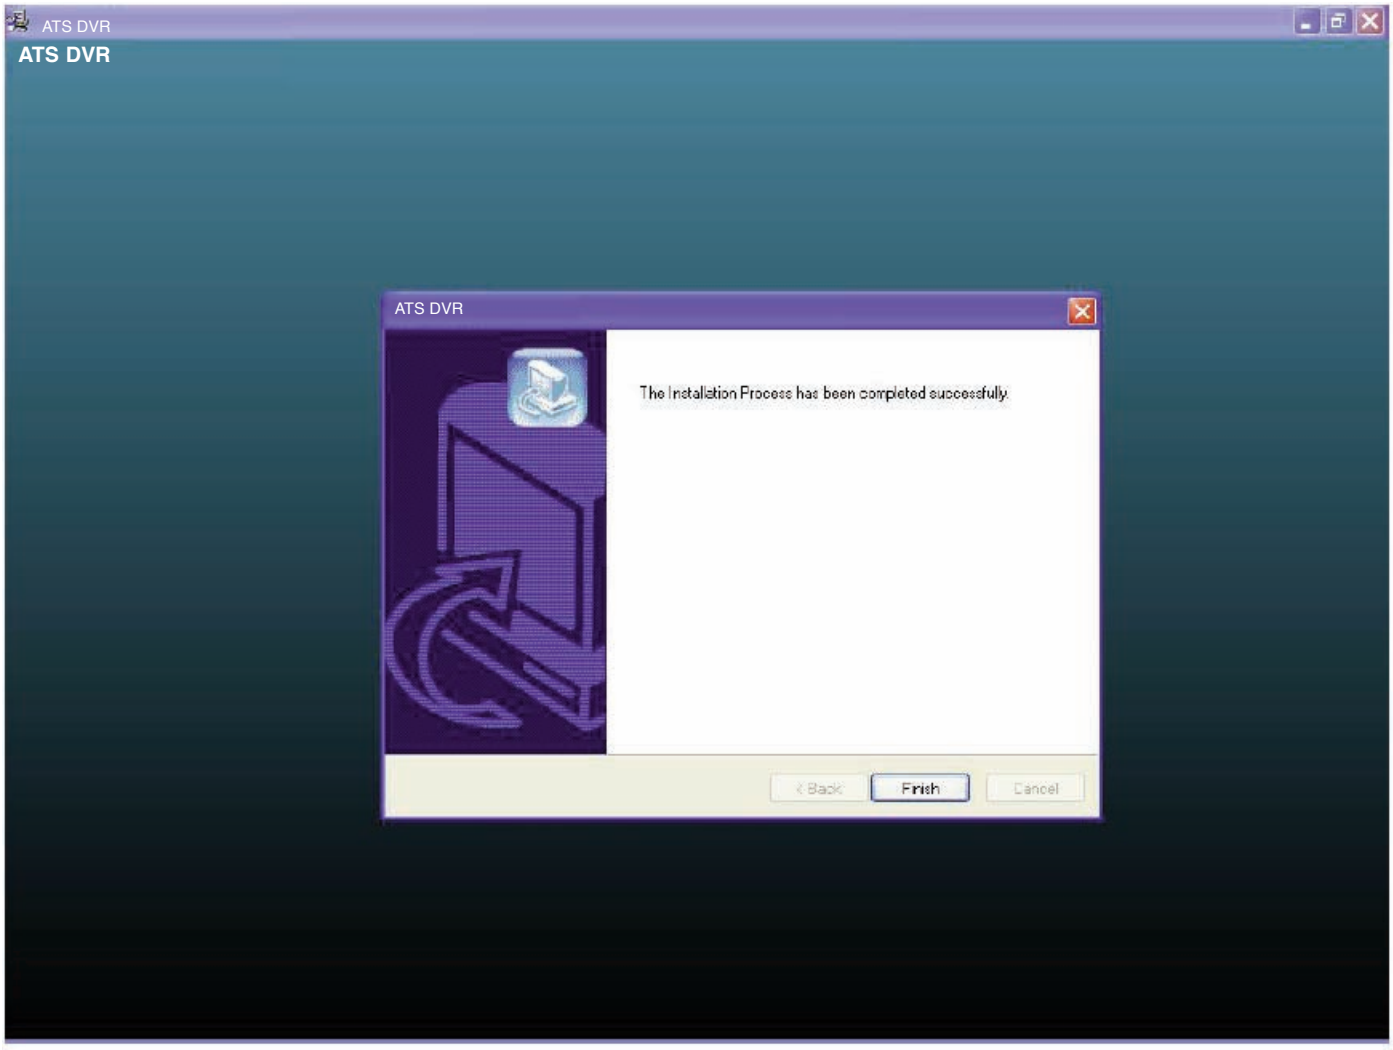

••• Retry the entire procedure if an error message is displayed

Manual Installation

Definition: It is a method to install selected softwares manually.
Select "Manual Installation" only in the case of "ATS Client" Installation.

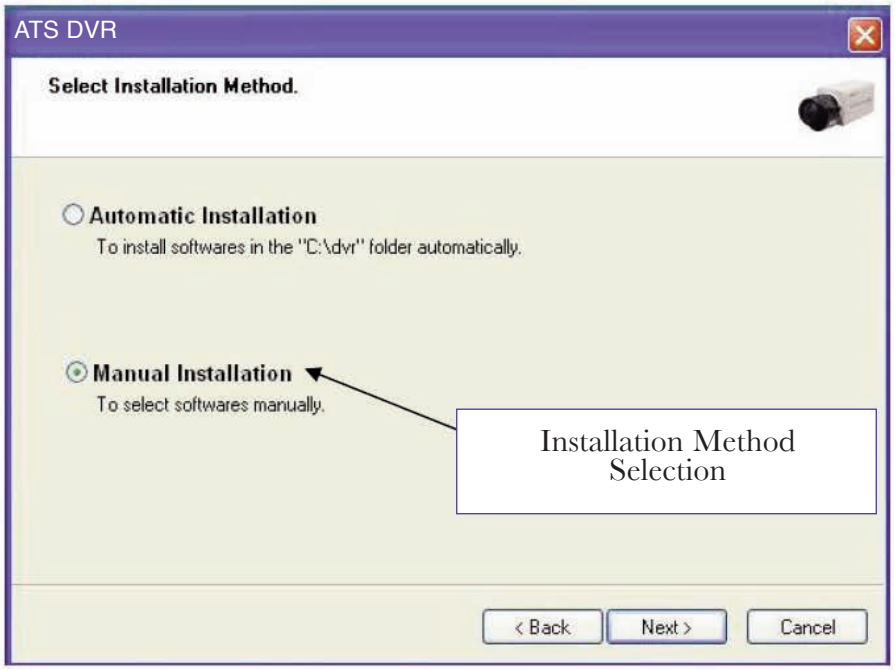

Software Selection

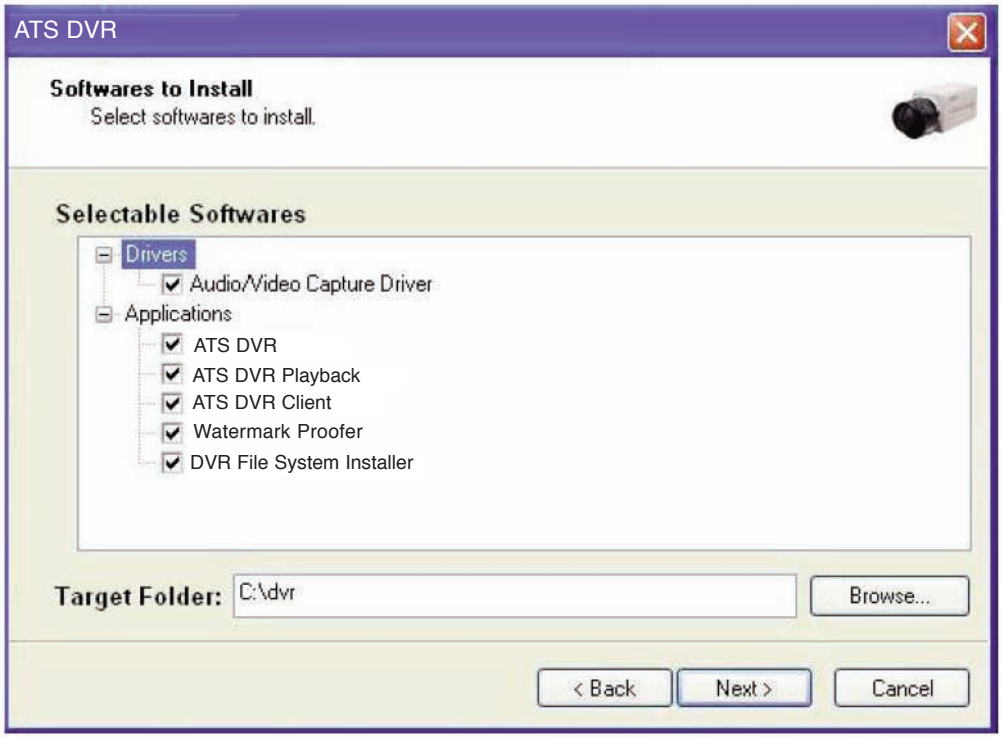

Note: The rest of the procedures are the same as "Automatic Installation".

USING WEB BROWSER

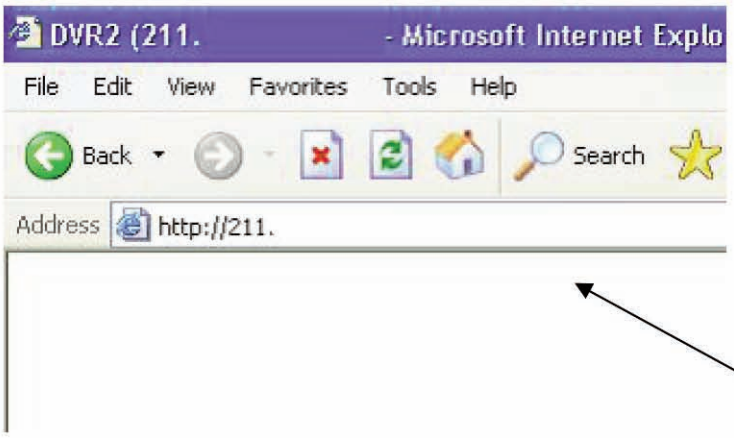

1. TYPE IN THE IP ADDRESS OF DVR SERVER.

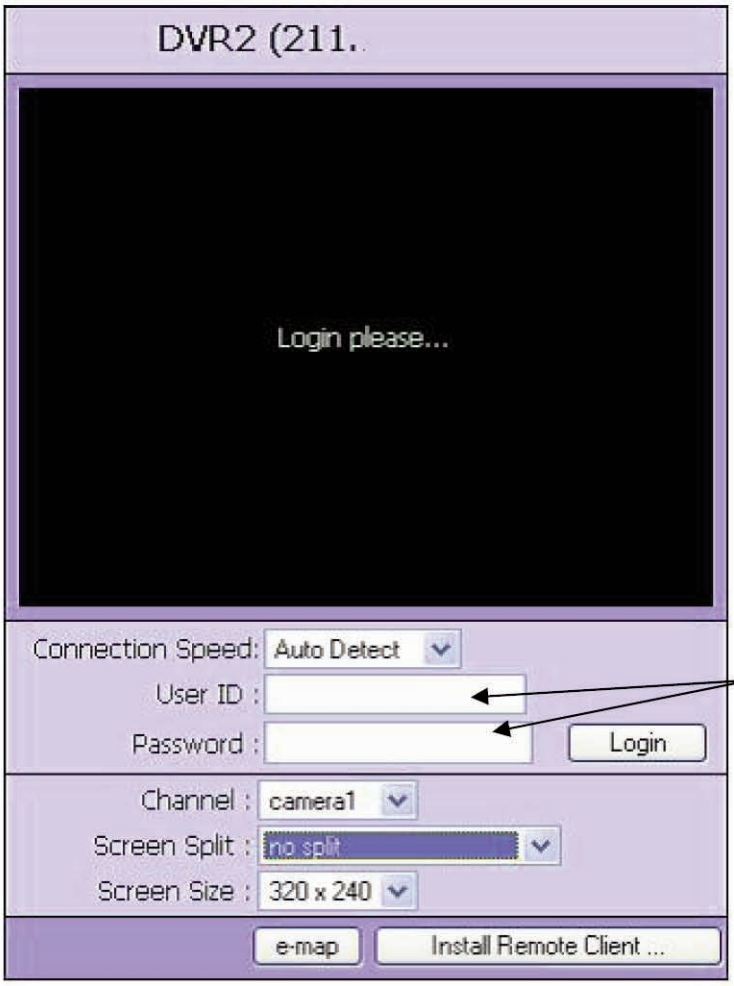

2. LOG IN FIRST BEFORE DOWNLOADNG REMOTE CLIENT PROGRAM.

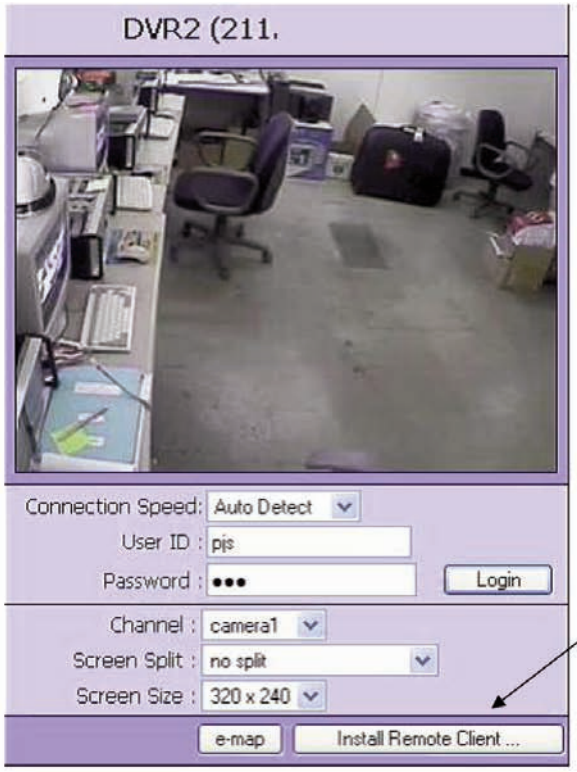

3. CLICK THE "INSTALL REMOTE CLIENT" BUTTON FOR DOWNLOADING.

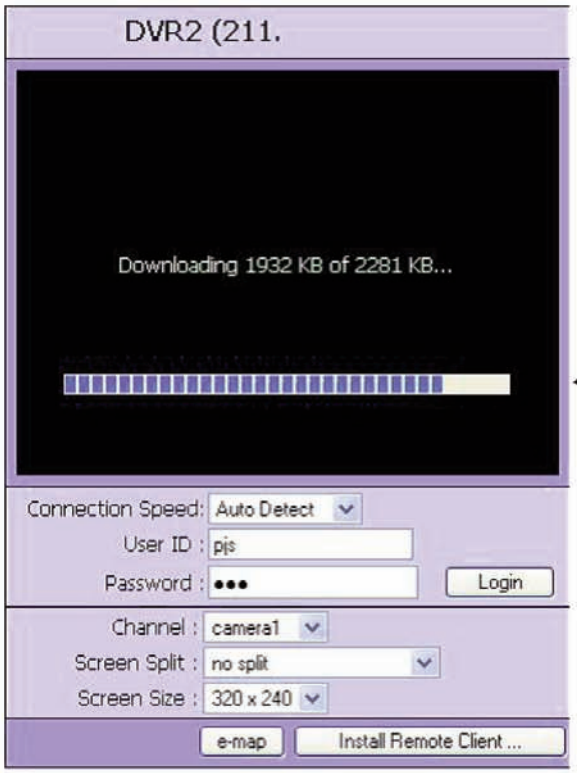

4. DOWNLOADING IN PROGRESS

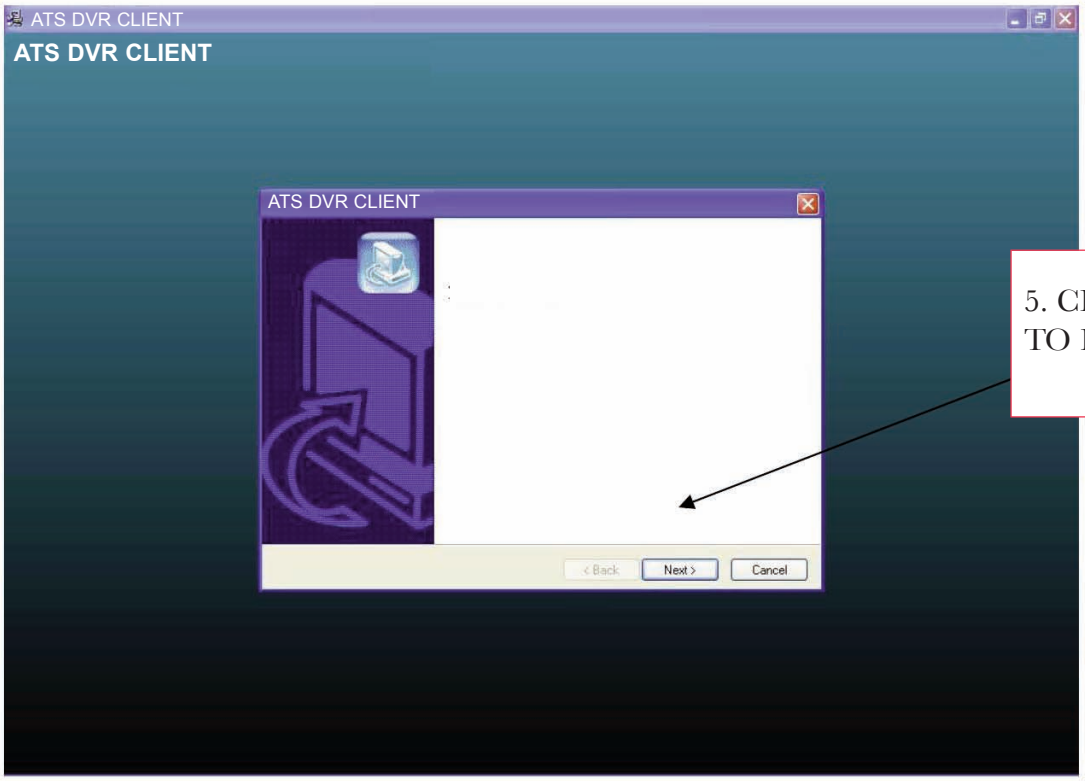

5. CLICK "NEXT" TO PROCEED.

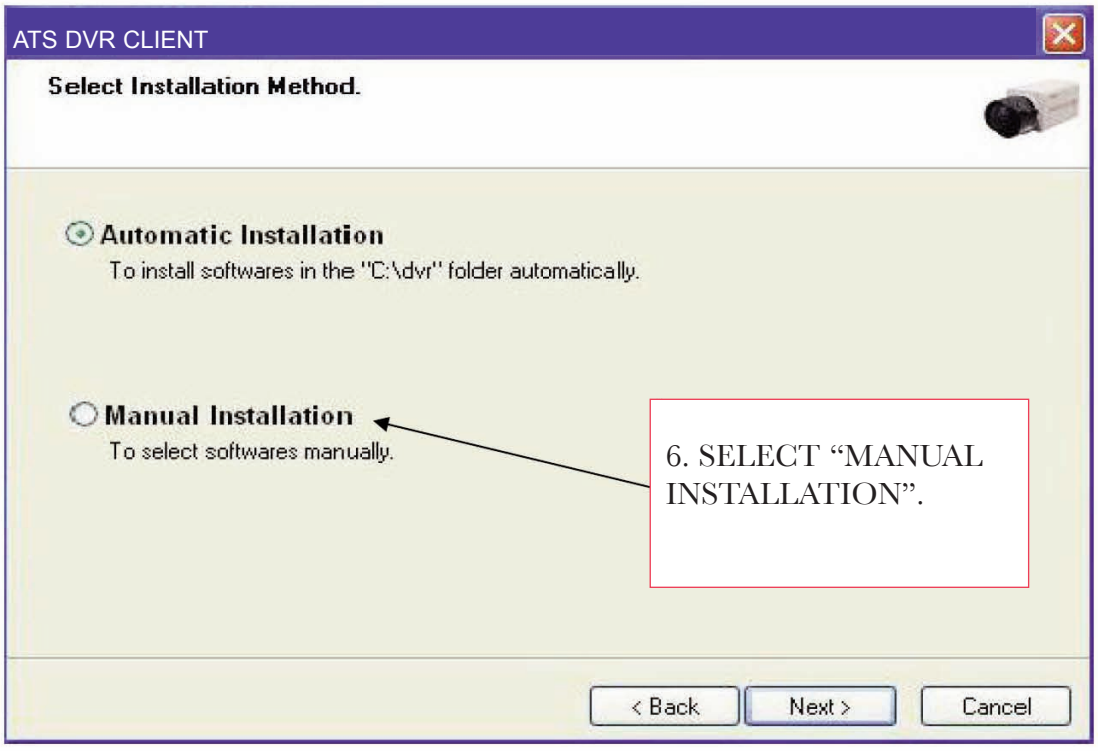

6. SELECT "MANUAL INSTALLATION".

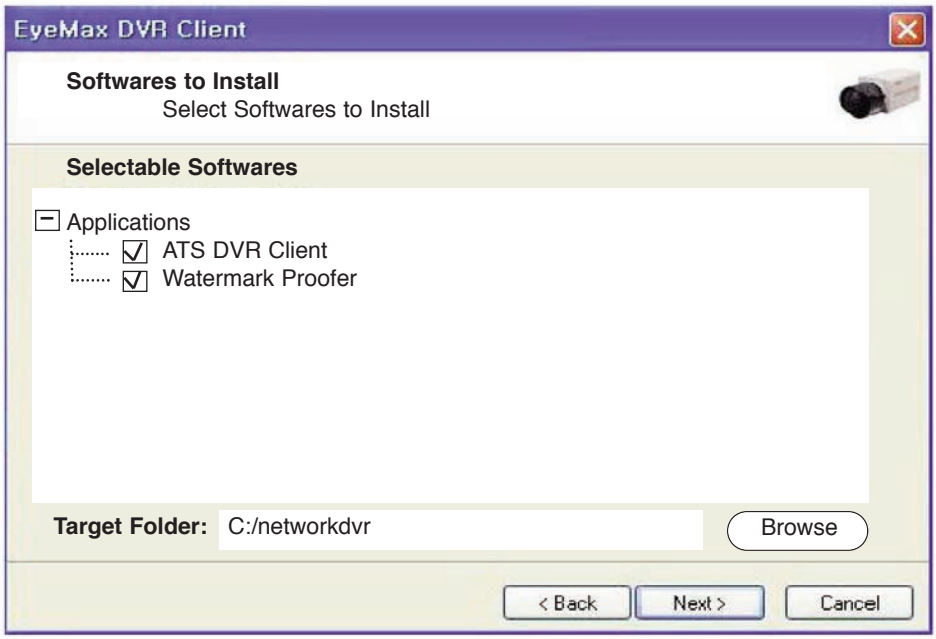

7. CLICK "NEXT" TO FINISH INSTALLATION PROCESS.

UNINSTALLATION

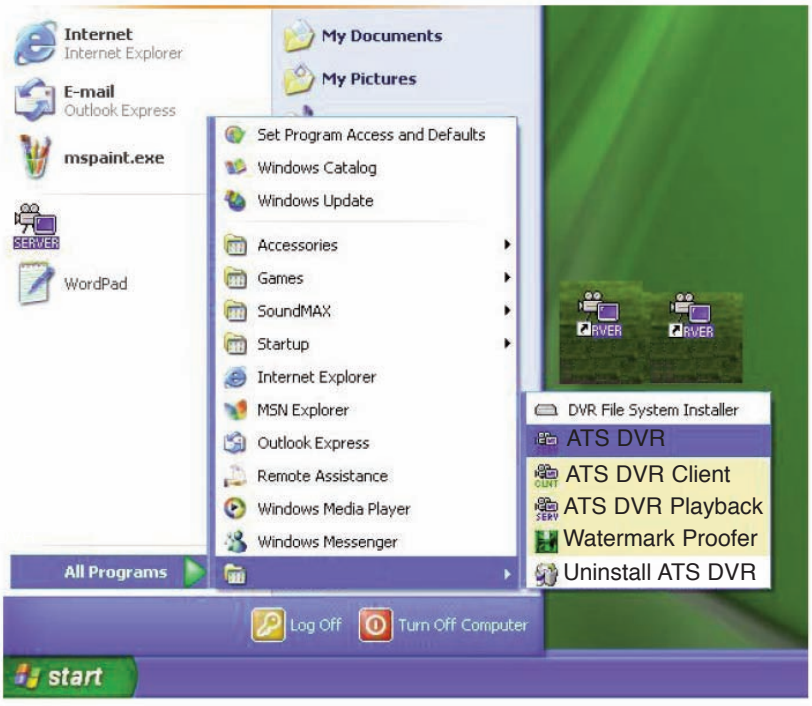

PROGRAM EXECUTION

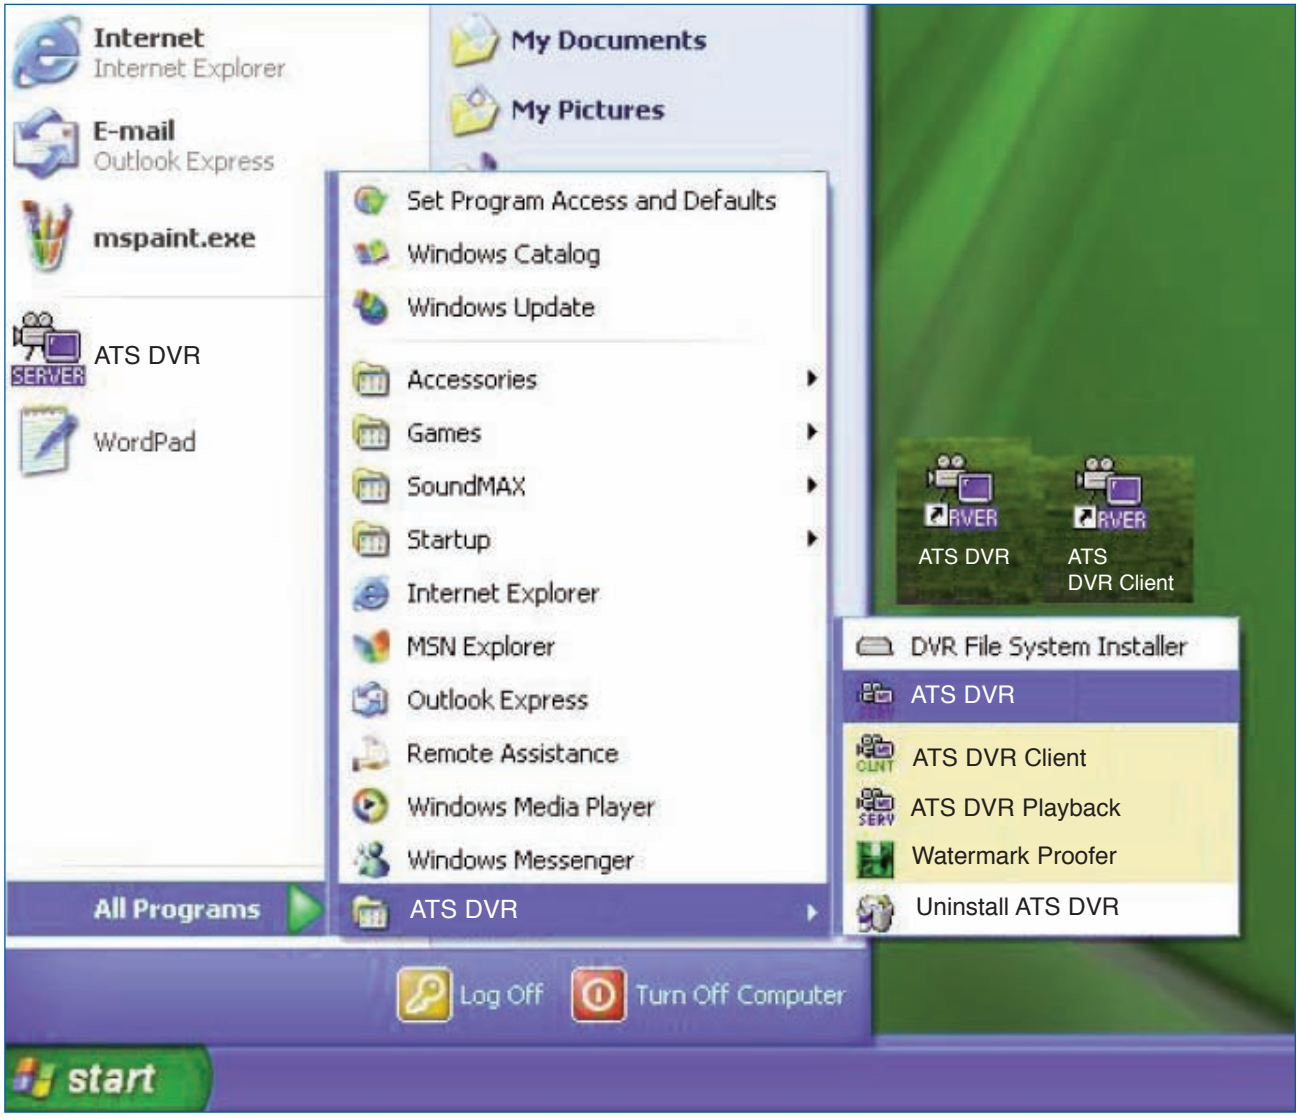

Find the icons on the desktop to execute "**ATS DVR**" and "**ATS DVR Client**".
Or find "**ATS DVR**" under "**All Programs**".

Main System Applicayion (Control)

STARTUP SCREEN

THE ABOVE SCREEN WILL APPEAR AS ATS DVR SYSTEM STARTS UP.

LOGIN

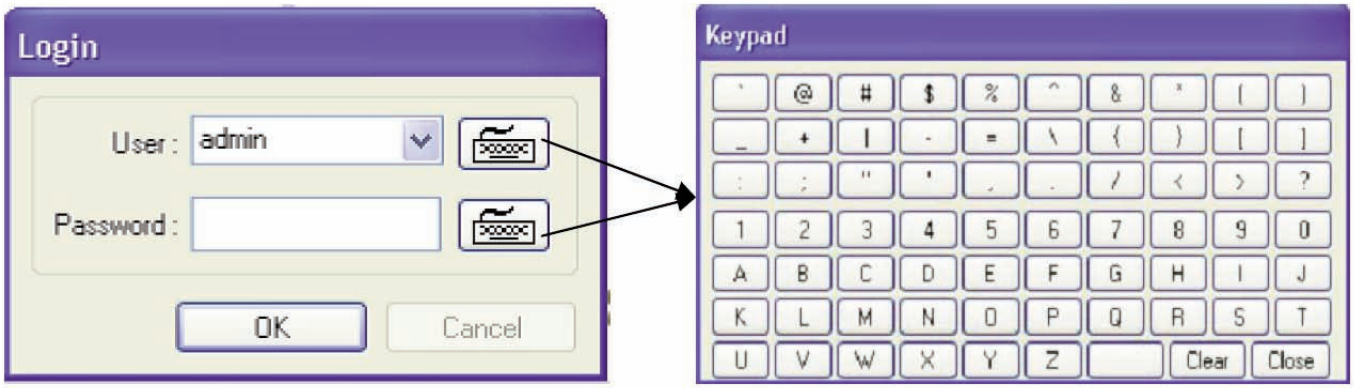

THE DEFAULT VALUES FOR USER AND PASWORD ARE "ADMIN AND "NO PASS-WORD". CLICK "OK" TO EXECUTE ATS DVR SYSTEM. TO GIVE "ADMIN" A PASS-WORD AND TO CREATE NEW USERS, CERTAIN CONFIGURATIONS ARE REQUIRED (SETUP/USER). ONLY "ADMIN" AND USERS WITH APPROPRIATE AUTHORIZATION HAVE ACCESS TO THE SETUP MENU.

NOT: VERTUAL KEYPAD IS AVAILABLE WHEREVER TYPING IS REQUIRED.

EXIT/ LOGOUT

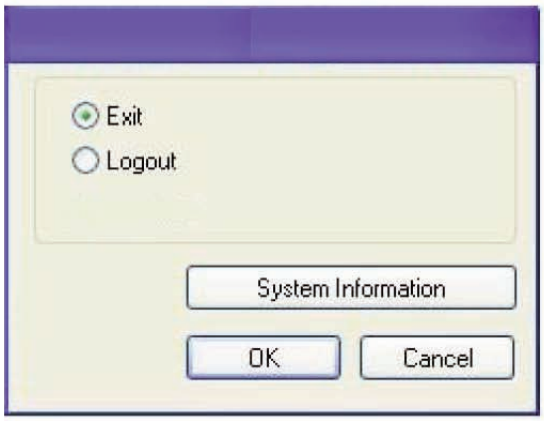

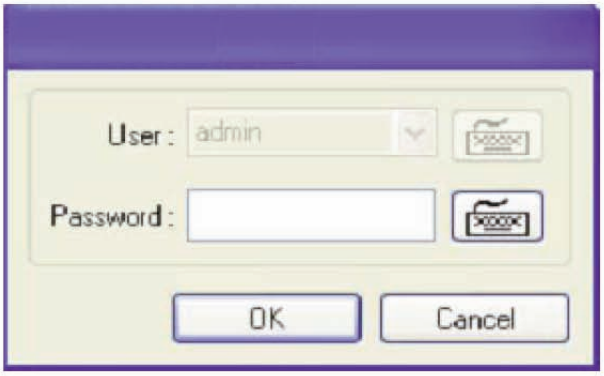

TO END ATS DVR SYSTEM, SELECT "EXIT" AND TYPE IN PASSWORD

SYSTEM INFORMATION

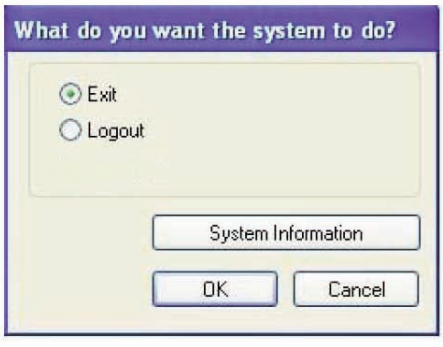

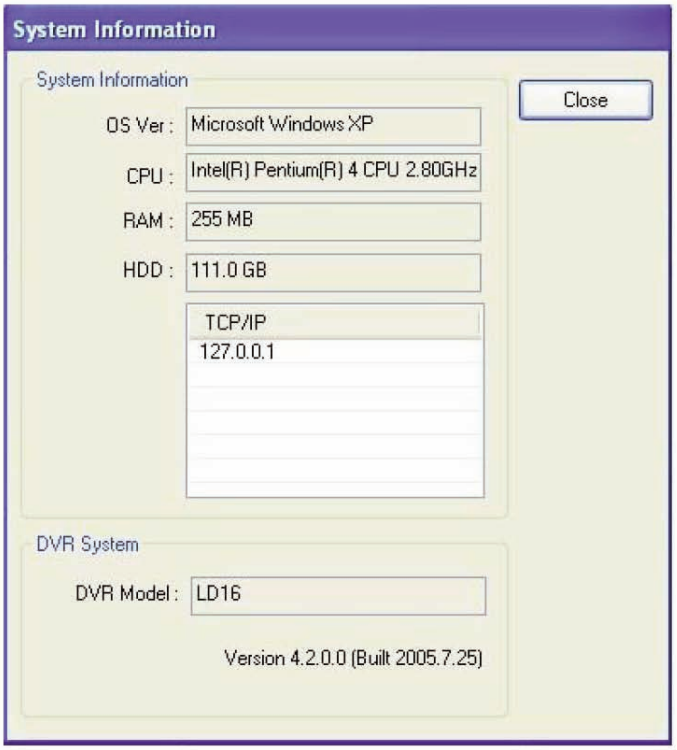

Click on System Information to see DVR system information, such as OS version, CPU, RAM, HDD, IP address, DVR model and DVR software.

Control Screen

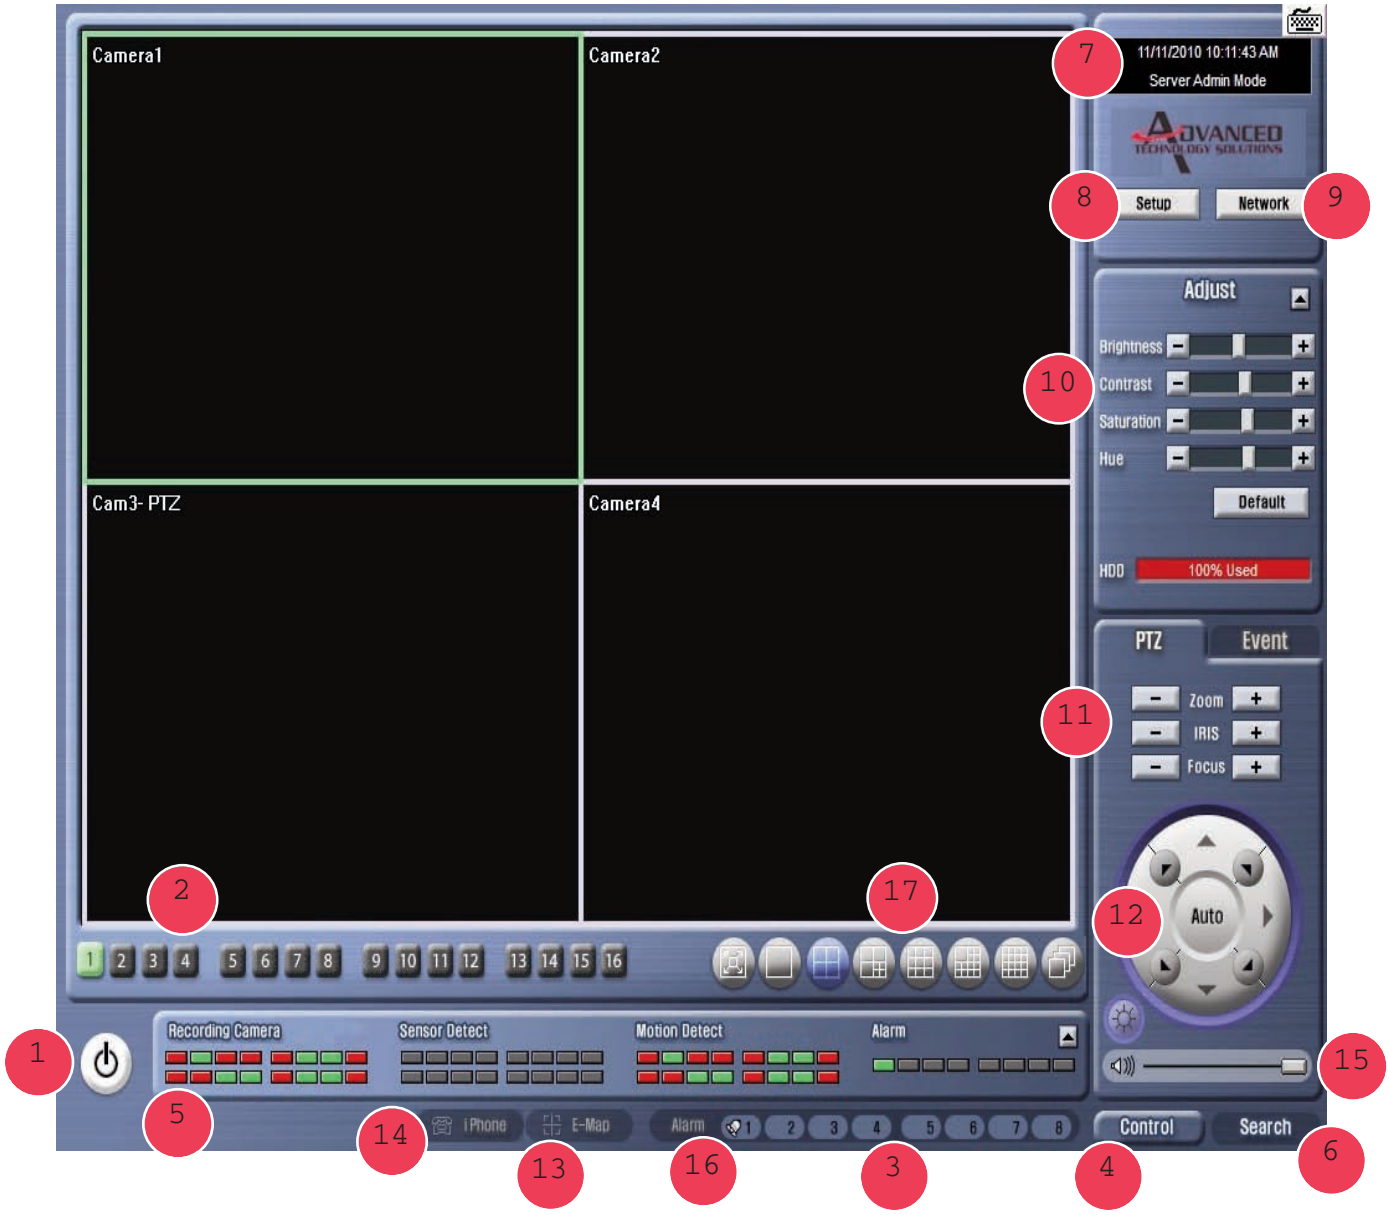

1. Power	7. Model	13. E-Map
2. Camera Selection Panel	8. Set up	14. I-Phone
3. Manual Output Panel	9. Network	15. Volume
4. Control	10. Adjust	16. Alarm
5. Status	11. PTZ Adjust	17. Camera Layout Panel
6. Search	12. PTZ Control	

SETUP

SYSTEM

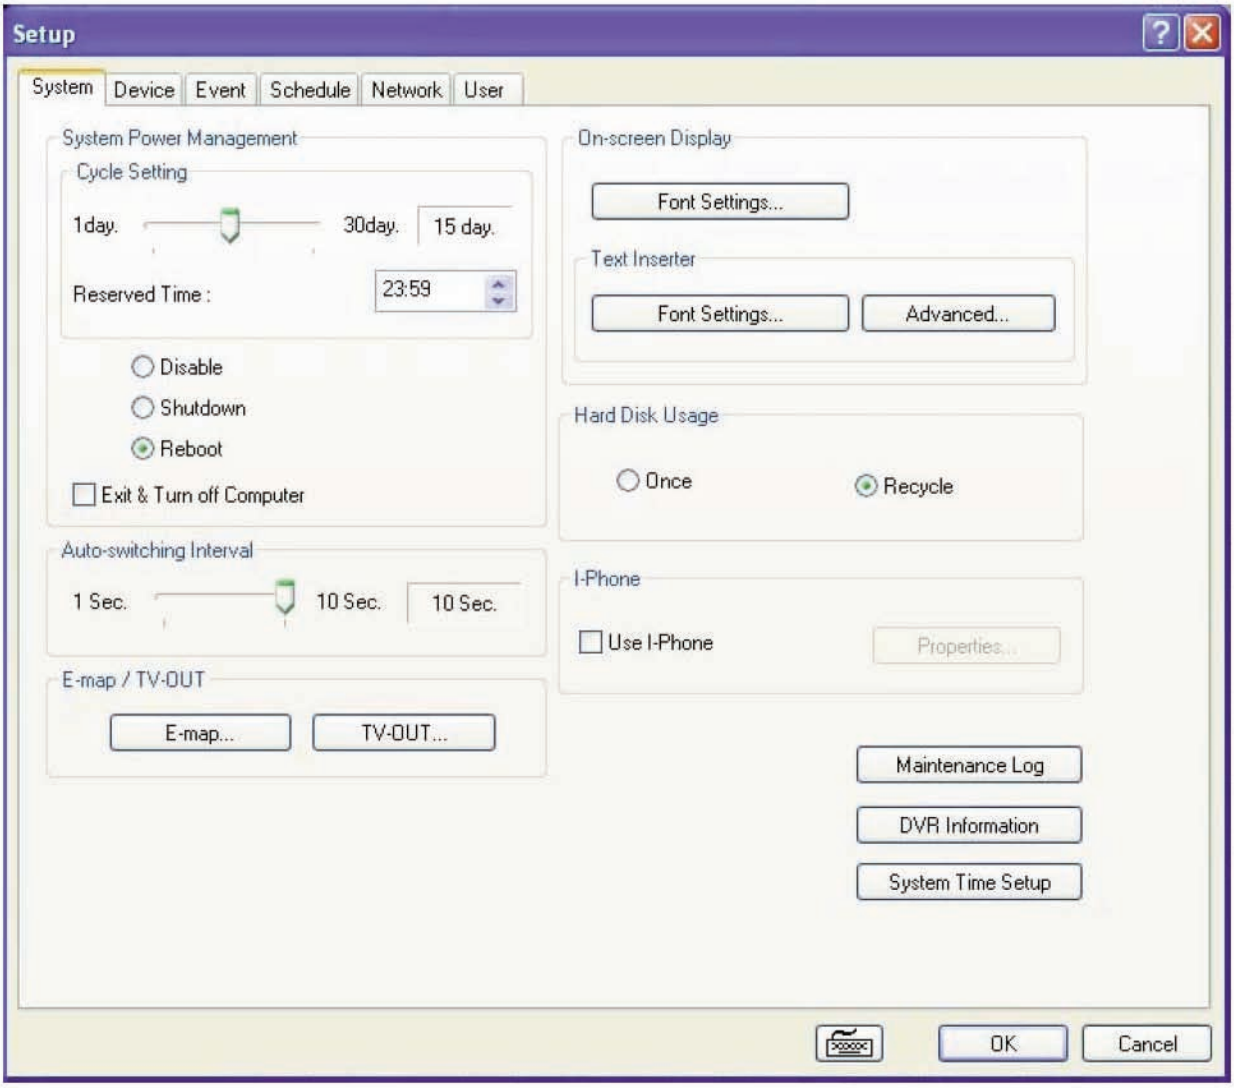

System Information

CREATE A DVR name and put in admin. info. They will be displayed on outgoing e-mails.

System Time Setup

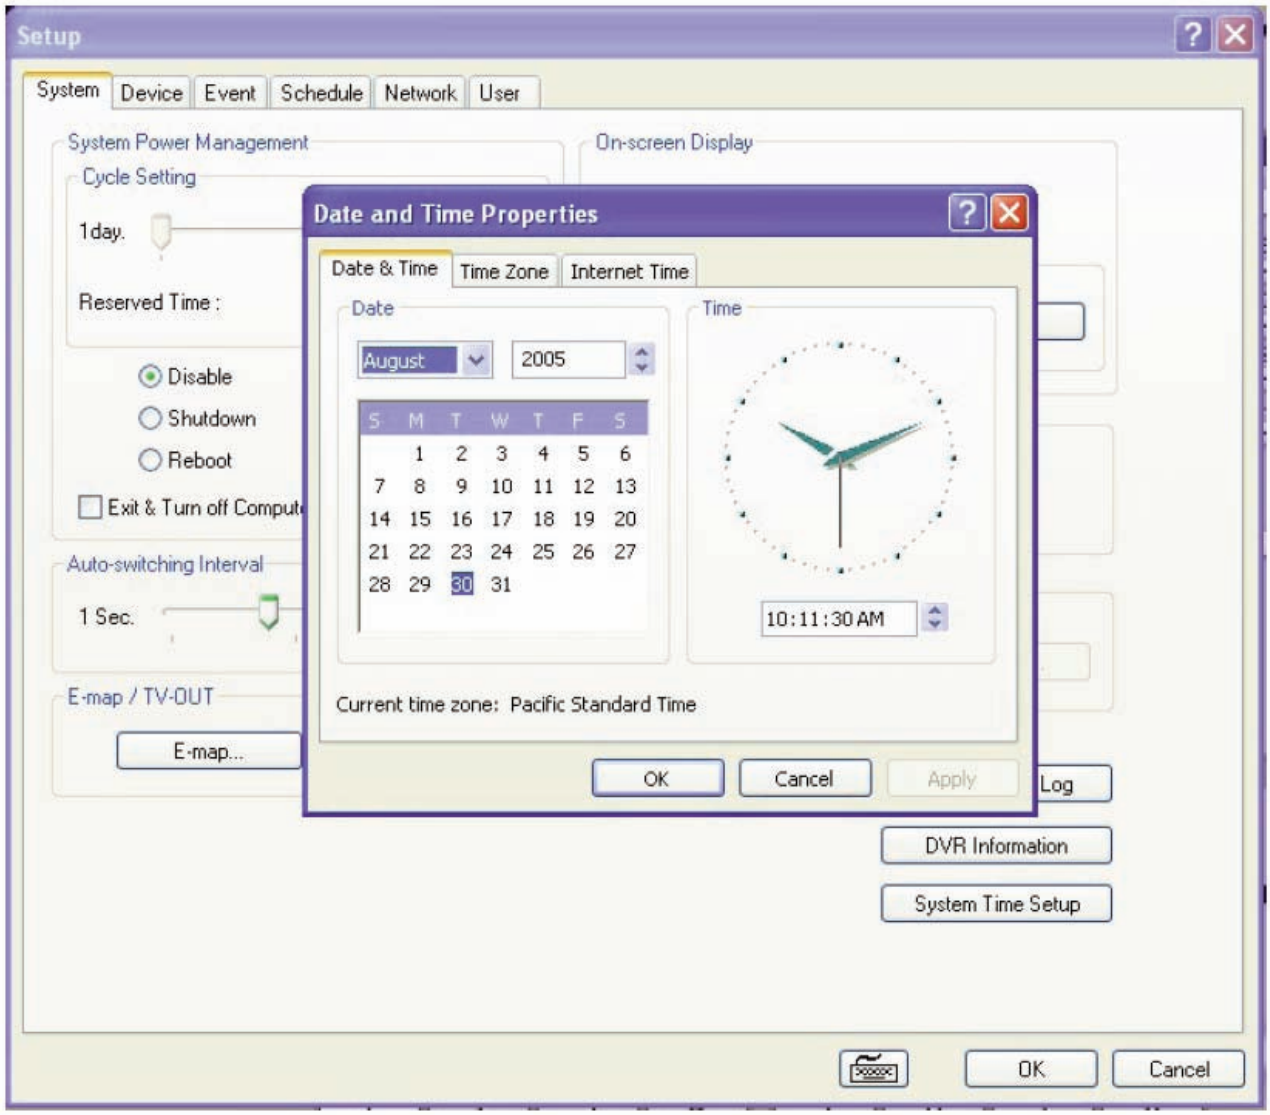

By clicking System Time Setup, users can set Date and Time in DVR software.

System Power Management

Reserved Time: Time set to shut down or to reboot computer.

Disabled: selected when System Power Management is not to be used.

Shutdown: selected when shutting down computer is required at the time set.

Reboot: selected when rebooting computer is required at the time set.

Exit & Turn off Computer: By checking the box, computer will be turned off automatically as a user exits from EyeMax DVR system.

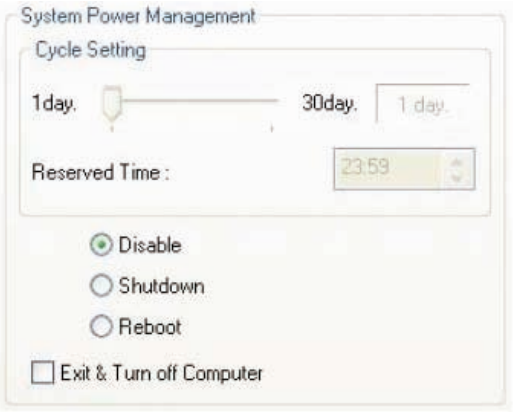

AUTO-SWITCHING INTERVAL

AUTO-SWITCHING INTERVAL is a function that allows the green square around the selected camera to move to the next one at the interval set.

example: Camera 1 -> 10 sec -> Camera 2 -> 10 sec. -> Camera 3 -> 10 sec ...

E-map

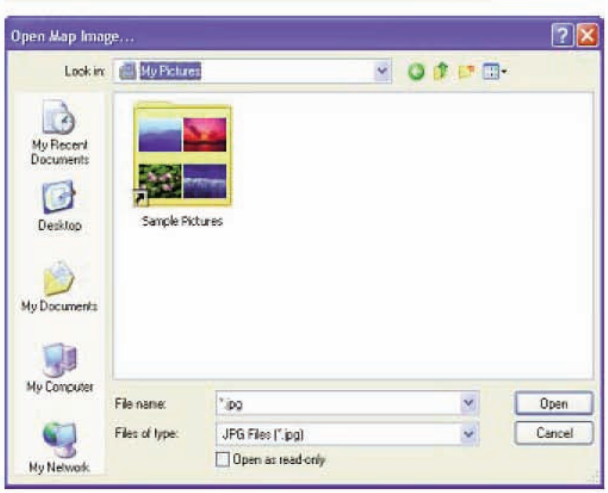

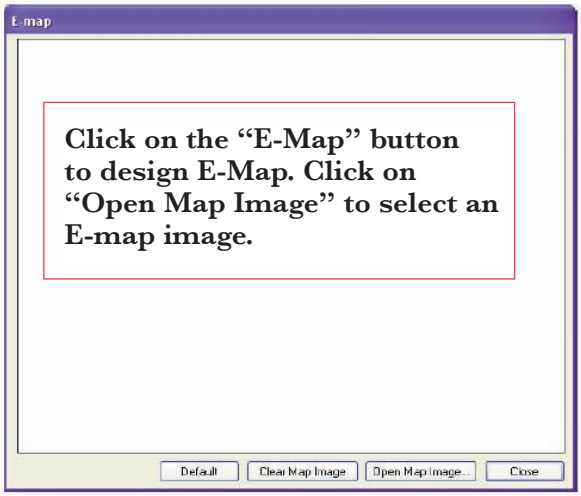

Click on the "E-Map" button to design E-Map. Click on "Open Map Image" to select an E-map image.

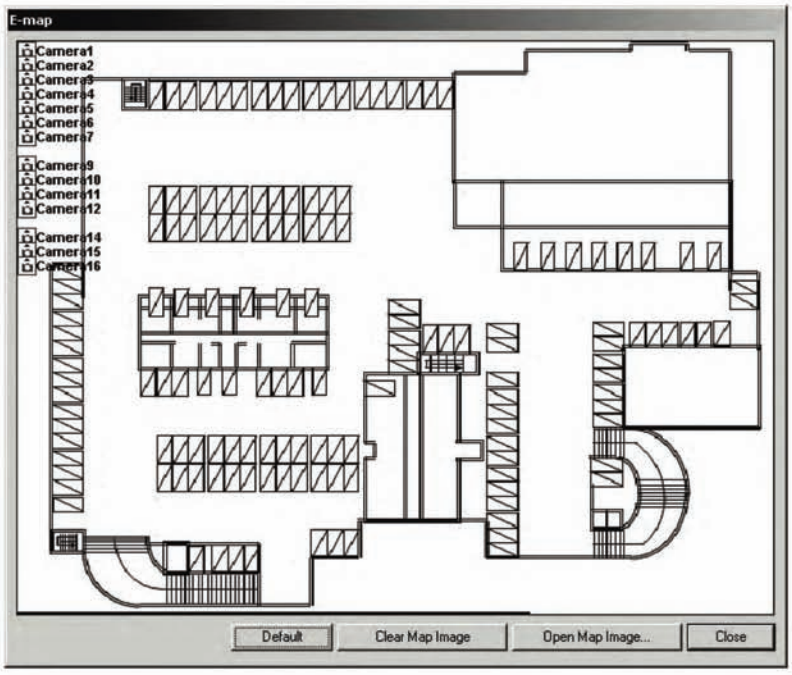

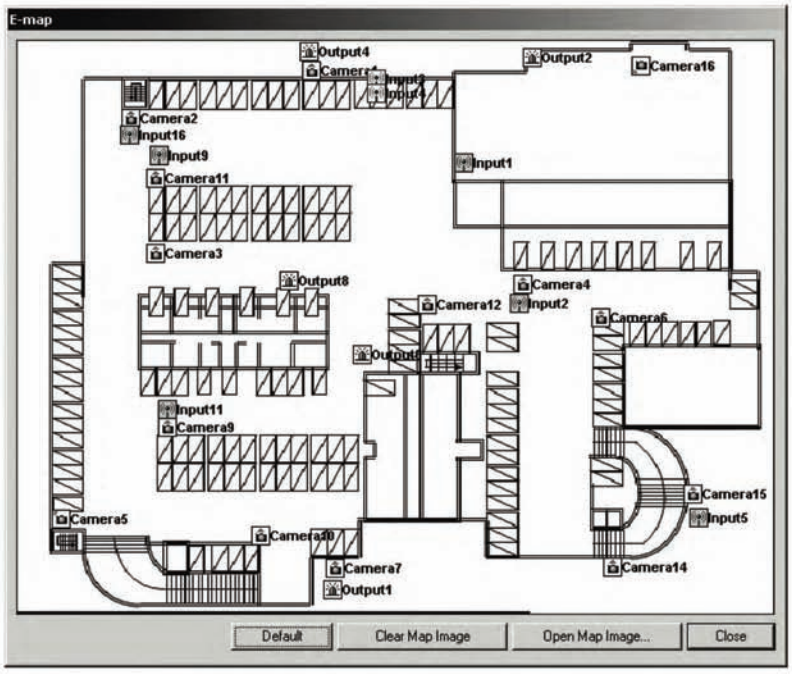

The above is a designed E-map sample. Drag mouse to position Camera/ Input/ Output and design E-Map.

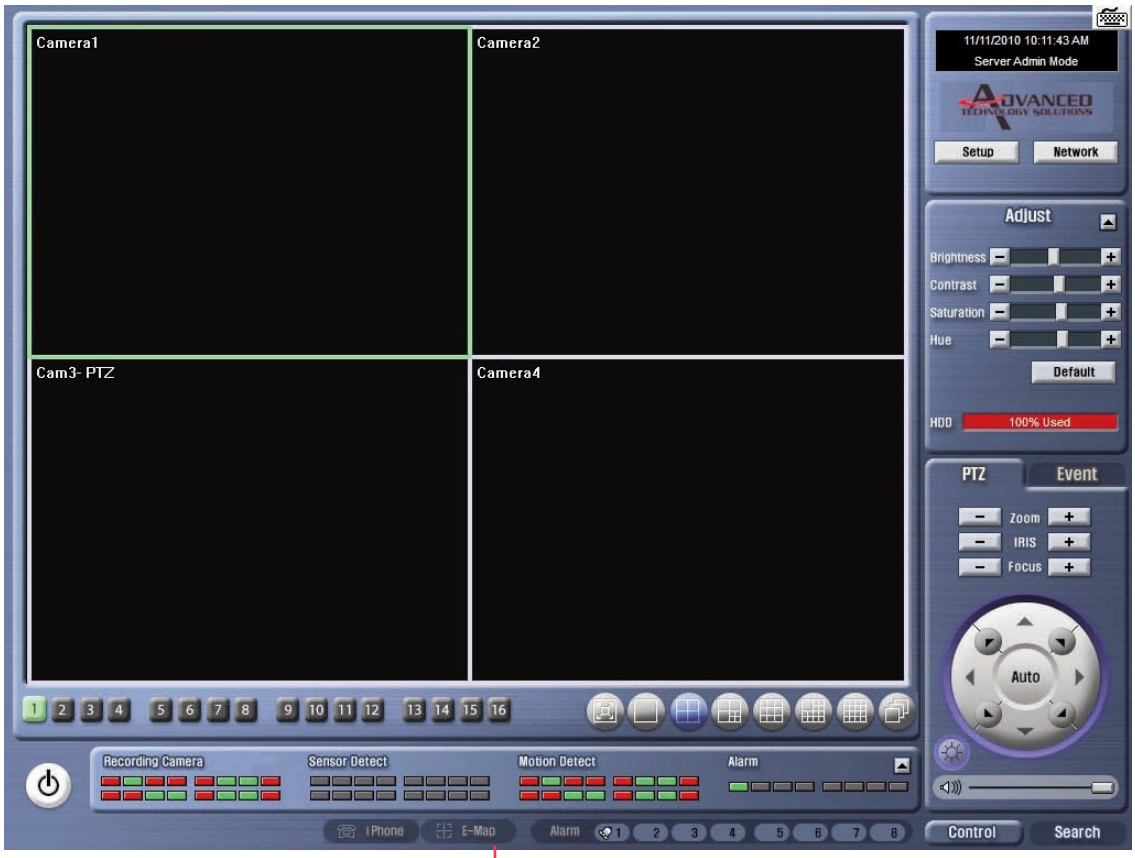

Click on the E-map button positioned next to the I-phone button to open E-map.
White Camera: Not on Recording, Yellow Camera: On Recording,
White Input/White Output: Not Activated, Yello Input/ Yellow Output: Activated.

TV - OUT

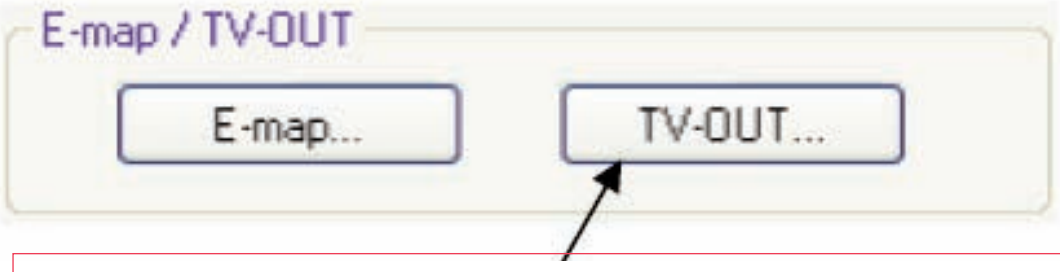

TV-OUT is a function that sends selected cameras to a call monitor (external analog monitor). Click on the "TV-OUT" button for setup.

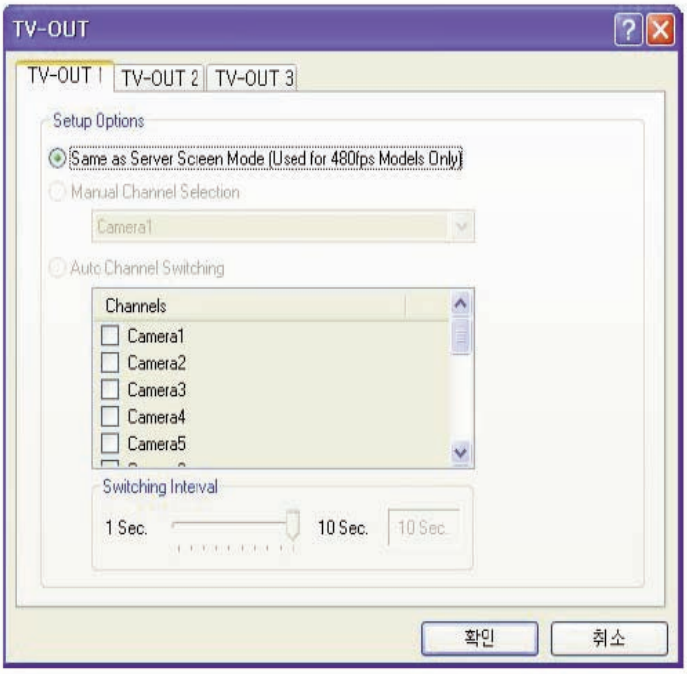

The Number of TV-out Supported			
5030	5060	5120	5240
1	1	1	2
5480	5424		
2	3		

The models such as 5240 (340FPS/340FPS) and 5480 (380FPS/220FPS) support 2 TV-OUTs. 5424 (380FPS/440FPS) support 3 TV-OUTs and the rest of the models support 1.

Setup Options:
1. Same as Server Screen Mode (For 5480 (280FPS/120FPS) only) - TV-OUT Monitor displays what's on DVR Server. Manual Channel Selection - Channels are selected manually. Once "Manual Channel Selection" is selected, channels can also be selected manually on Control Screen by placing mouse on camera picture and clicking the right mouse.
2. auto Channel Switching - Selected channels rotate to display at the switching interval set.
*Switching Interval: The length of time to stay at one camera.

On-Screen Display

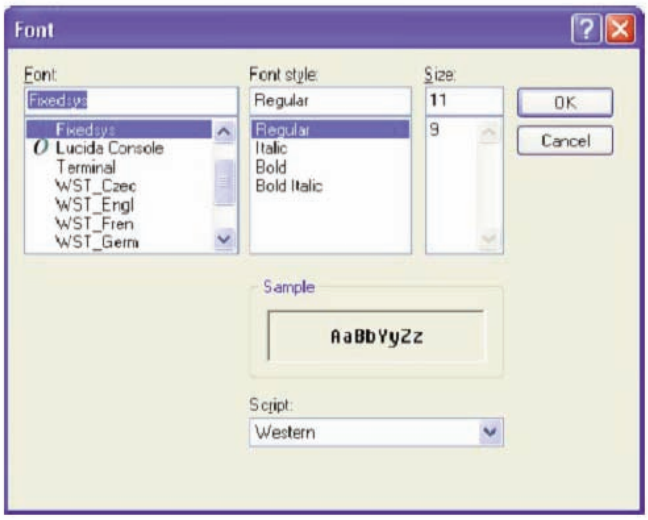

* Show Camera Names and Status: by checking it, camera names and status will be displayed on camera pictures.
* Show Motion Detection Blocks: by checking it, green motion detection blocks will be displayed on camera pictures when recording schedule is set as "M" (Setup/ Schedule).
* Show Object Detection Blocks: By checking it, blue object detection blocks will be displayed on camera pictures.

Note: One right mouse click can be a very useful tool. Manual TV-out and OSD setup can be done. Additionally, instant recording can start by one click.

Text Inserter

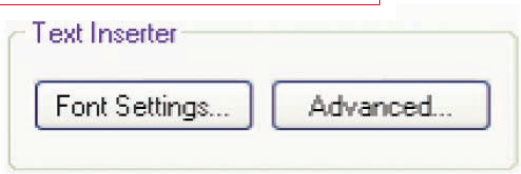

Text Inserter is a function that allows ATS DVR system to integrate with POS machines. Simply install "text_inserter_plugin_for_pos" on DVR Server, and transactions that occur will be displayed on selected camera pictures. Transaction recording and text search are possible as well. For more detailed installation and information.

Hard Disk Usage

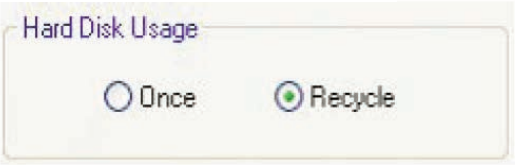

Hard Disk Usage is to select data storage method. If "Once" is selected, data will be stored up to the point where HDD reaches its maximum capacity. If "Recycle" is selected, data will be overwritten from the point HDD reaches its maximum capacity based on "First in First Out".

I-Phone

I-Phone is "Two-Way Audio Communication". Check the box, go to Control Screen, and click on the I-Phone button for audio communication. For more detailed I-Phone setup, refer to Appendix 2.

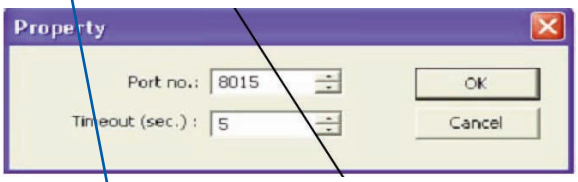

*Port No.: The port number for I-Phone use has to be set up. Normally the default value is good to use.
*Timeout: It indicates the maximum length of connection trial. If there is no response within the value set, call will be cancelled.

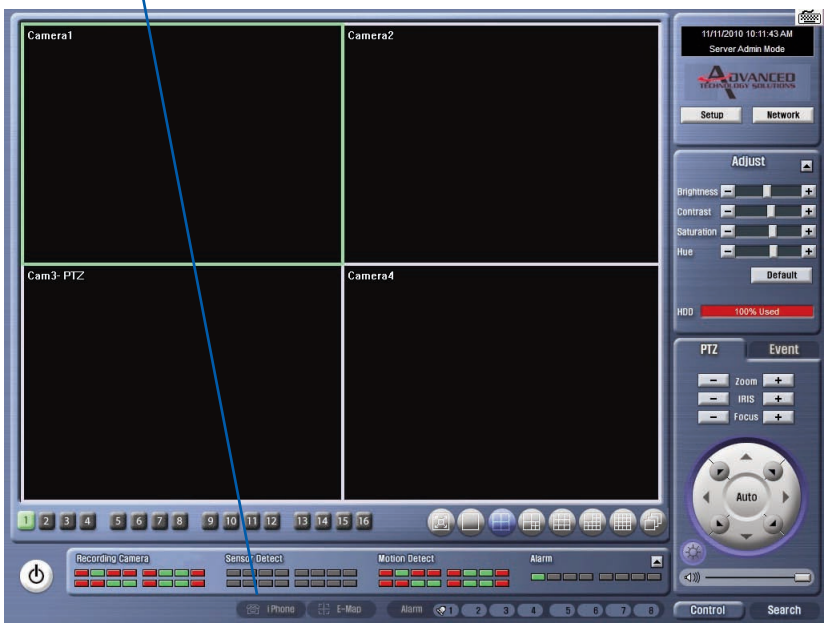

DEVICE

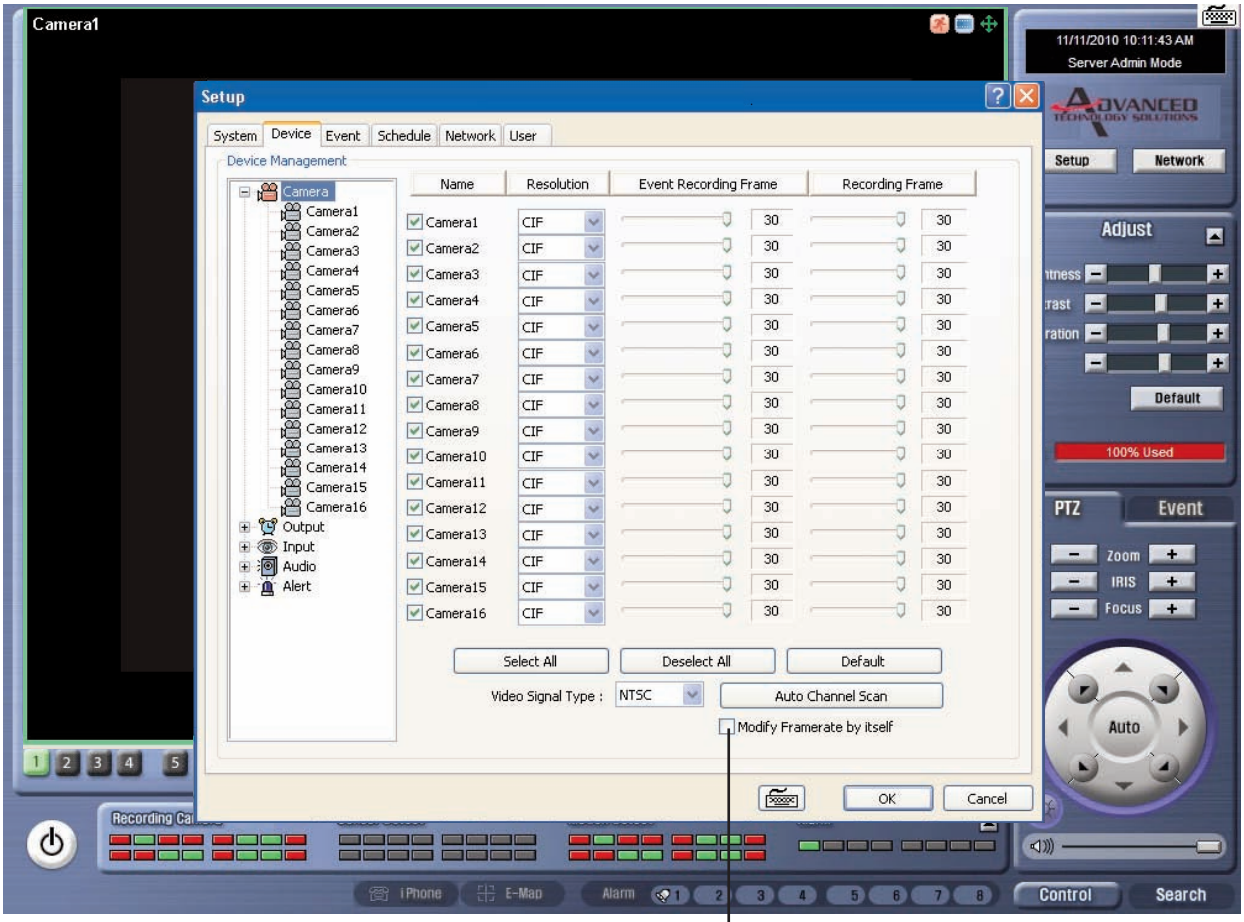

Device sub-screen is divided into 5 different setup categories; Camera, Output, Input, Audio and alert. all devices in each category can be set up on one same program.

Modify Framerate itself: by ticking it, DVR software will automatically allocate proper frames to channels.

CAMERA

CAMERAS will be eneabled by checking the boxes.

Different resolutions and recording frame rates can be set up for different cameras.

* Video Signal Type:
Select either NTSC or PAL.
* Auto Channel Scan:
It automatically identifies all the active video channels. Make sure to always click and scan after S/W version change.
* Default:
It sets "Event Recording Frame" and "Recording Frame" as default values.

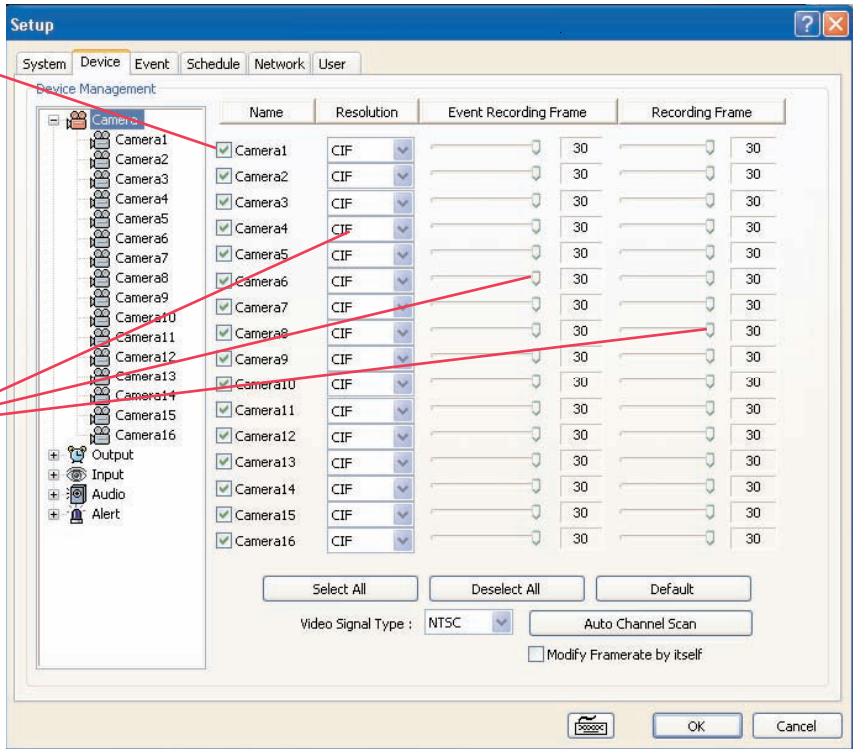

Double-Click on "Camera" for more individual Camera Setup.

Select recording picture quality.

Use Still Image:
It is a function that captures still image when Recording schedule mode is set as M or H.
(Caution) under R mode at Recording schedule, this function stops recording channel.

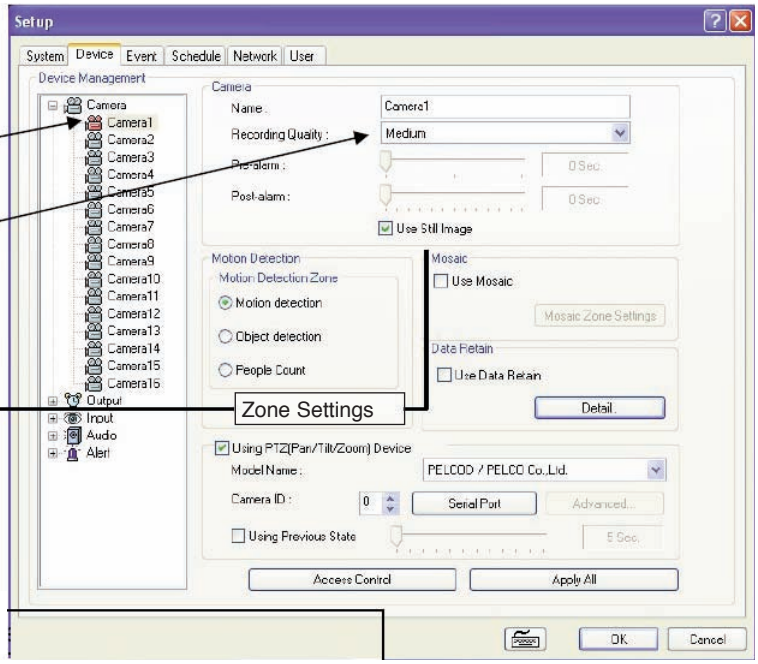

* Pre-alarm (max 10 sec): Length of time to be recorded before event.
* Post-alarm (max 60 sec): Length of time to be recorded after event.

{MOTION DETECTION}

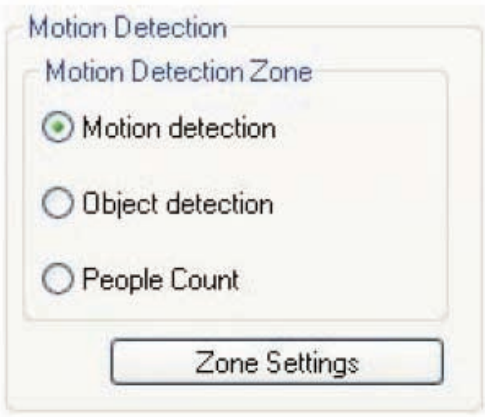

Motion detection is a function that DVR software detects every movements or motions by comparinga frame with the previous frame.

ZONE SETTINGS:
1. Drag mouse on desired place to set motion detection zones.
2. Select "Sensitivity" according to user's need, and click OK.
3. To clear the zones set, drag mouse again.

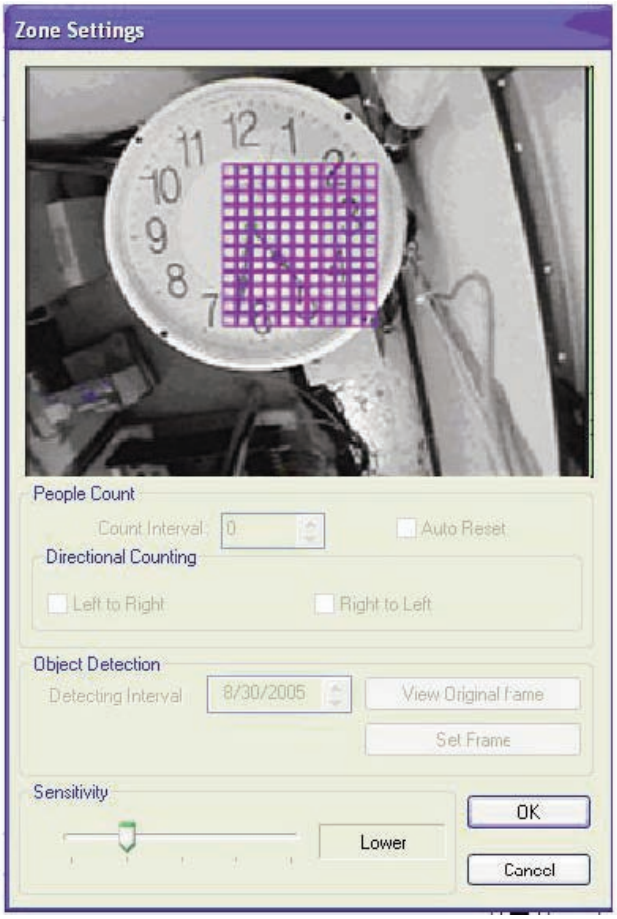

{OBJECT DETECTION}

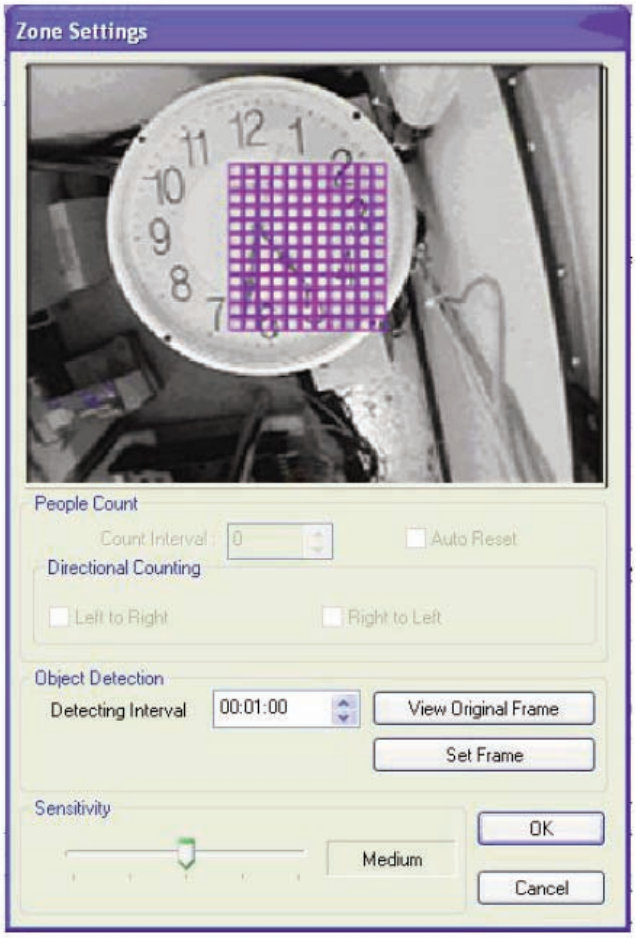

IT IS A FUNCTION THAT MARKS ALL OF THE CHANGES OCCUREED FROM THE ORIGINAL SCENE. ATS WILL DETECT NEW AND MISSING OBJECTS AFTER A CERTAIN PERIOD OF TIME (DETECTING INTERVAL).

How to Set up:

* Click the "Object Detection" box and click on "Zone Settings".
* Drag the mouse to select object detection zone (same as "Motion Detection").
* Click on the "Set Frame" button to select original (default) image.
* Go to "Detection Interval" and determine when to mark new object after its pause.
* Go to "Setup/ Schedule" and select "M"
* Go to the "Control Screen" and find the red-squared "Object Detection" symbol.
* One click on the "View Original Frame" button will display original image set.
* Click it again to reactivate the "Set Frame" button.

PEOPLE COUNTER

IT IS A FUNCTION THAT COUNTS PEOPLE COMING IN AND OUT OF A CERTAIN PLACE

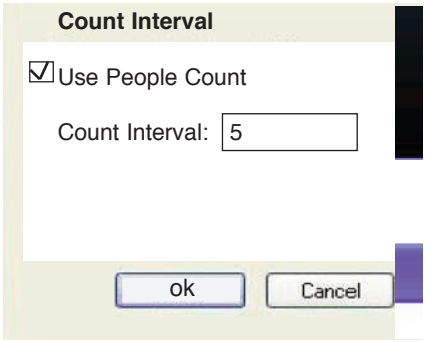

How to set up:
1. Click on the “People Count” button.
2. Tick the “Use People Count” box.
3. Set “Count Interval”.
4. Go to “Zone Settings and set “People Counting Zone”.
5. Go to the Setup/Schedule and select “M”.
6. Go to the “Control Screen” and find the word, “Counting”.

*CAUTION: “Object Detection” and “People Counter” can not be used simultaneously.

{Mosaic}

IT IS A FUNCTION THAT WEILS RESTRICTED AREAS TO KEEP REGULAR USERS UNINFORMED.

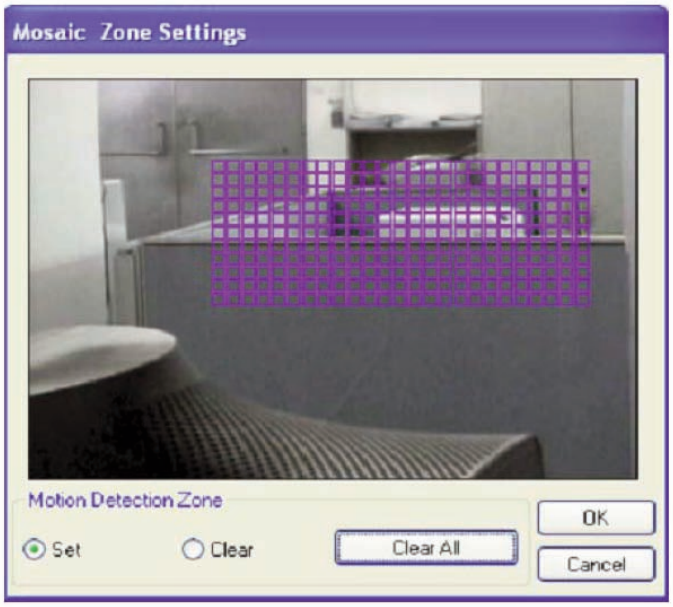

HOW TO SET UP:
1. Tick the "Use Mosaic" box
2. Click on "Mosaic Zone Settings".
3. Set "Mosaic Zone".
4. Go to the "Control Screen" and find veiled areas.

NOTE:
1. While using Mosaic, "Save" or "Print" can not be performed.
2. T see unveiled area, logging in as "Admin" or "Admin Mode" is required.

{Data Retain}

IT IS A FUNCTION THAT RETAINS DATA ONLY FOR THE PERIOD SET. FOR EXAMPLE, IF 10 DAYS IS SET, ATS WILL DELETE ALL PREVIOUS DATA BEFORE 10 DAYS REGARDLESS OF THE CAPACITY REMAINING ON HDD.

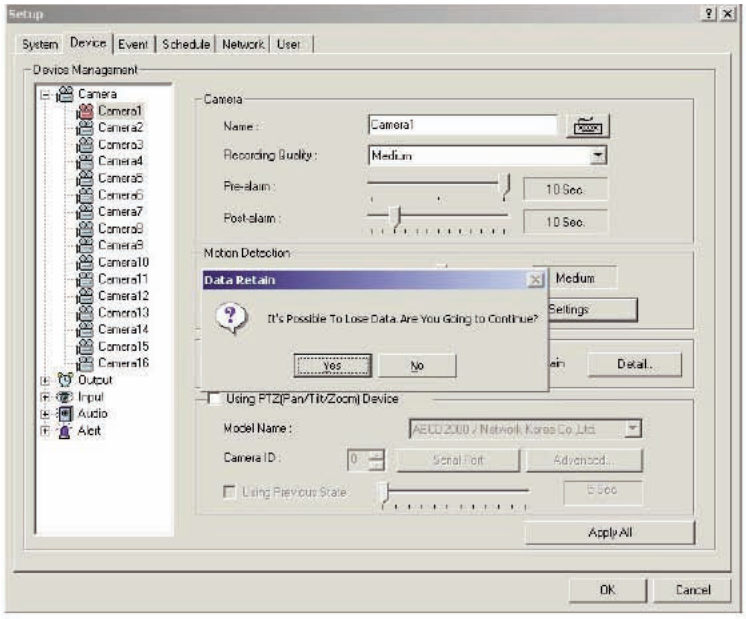

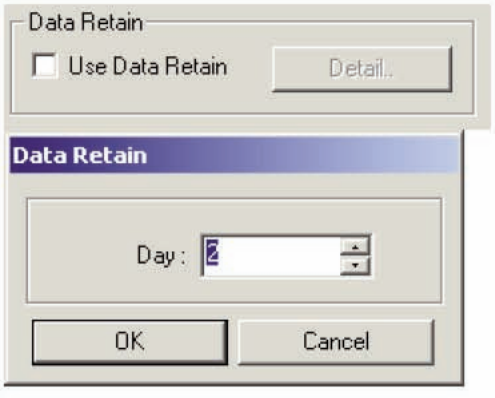

{PTZ CAMERA SETUP}

When using a PTZ camera, check the box and select a model name. ATS DVR system supports nearly 40 different protocols.

* Camera ID: Leave it as it is if only one PTZ camera is used. Otherwise, give each camera a different number.

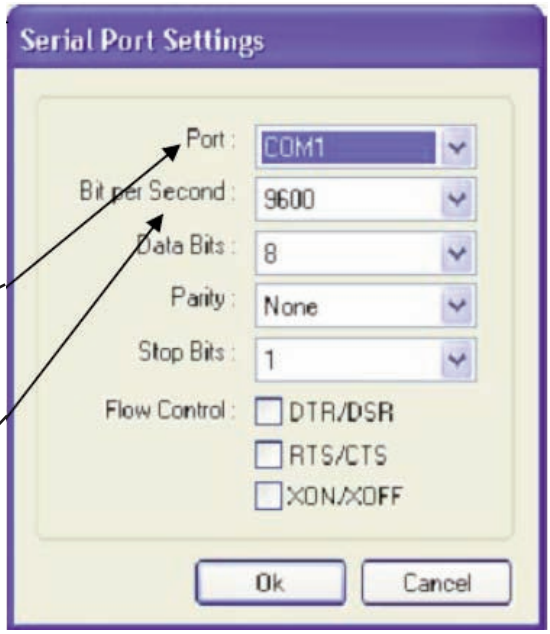

Select the port used for PTZ camera.

* Bit per Second: It is 9600 for most of PTZ cameras. But a few ccan have different values. Refer to camera manual.

* Apply All: The same settings will be applied to the rest of the cameras by clicking on "Apply All".

PRESET AND TOURING

Either click the right mouse on camera picture or click on the Preset (Touring) button for Preset (Touring) setup and use.

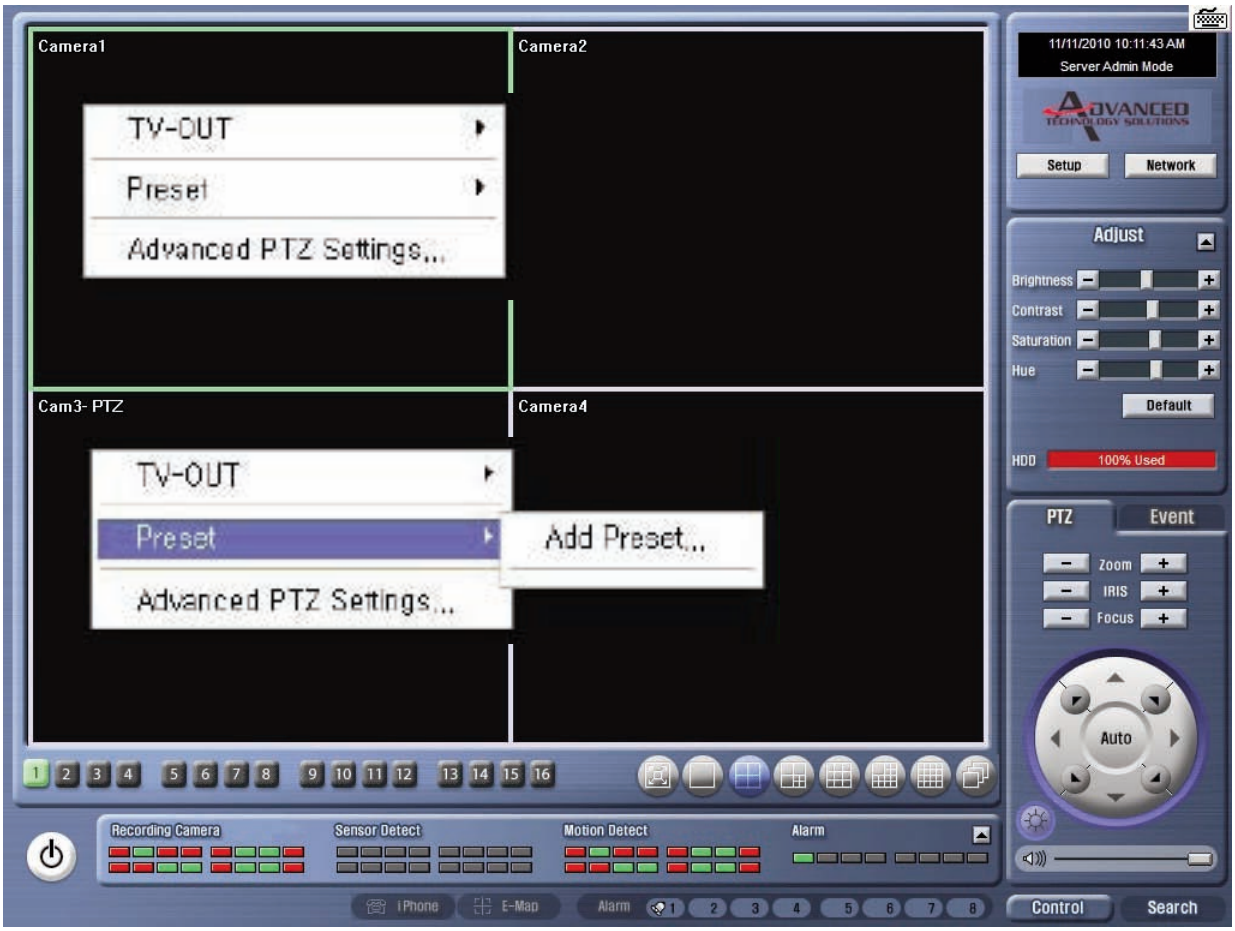

"Preset" is a function that enables a camera to move from position to another automatically.

STEPS TO SETUP PRESETS

1. Move Camera to a desired position using the PTZ Control on Control screen.
2. Click the right mouse.
3. Name the Preset.
4. Repeat the above for setting up as many as 256 presets.
5. Click the right mouse to run preset and click the "Auto" button to stop it.

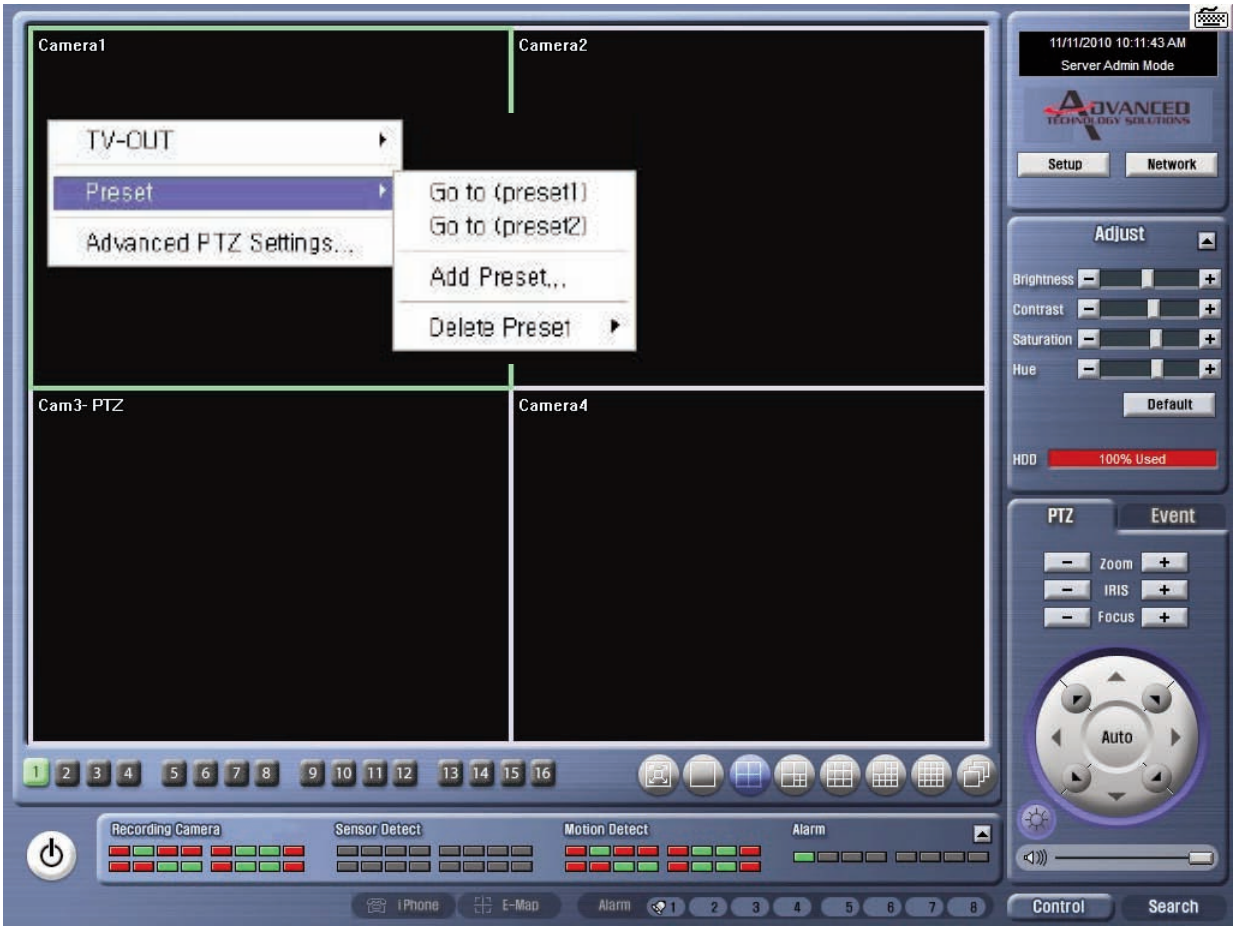

Touring

TOURING IS A FUNCTION THAT ENABLES A GROUP OF SELECTED PRESETS TO WORK REPEATEDLY.

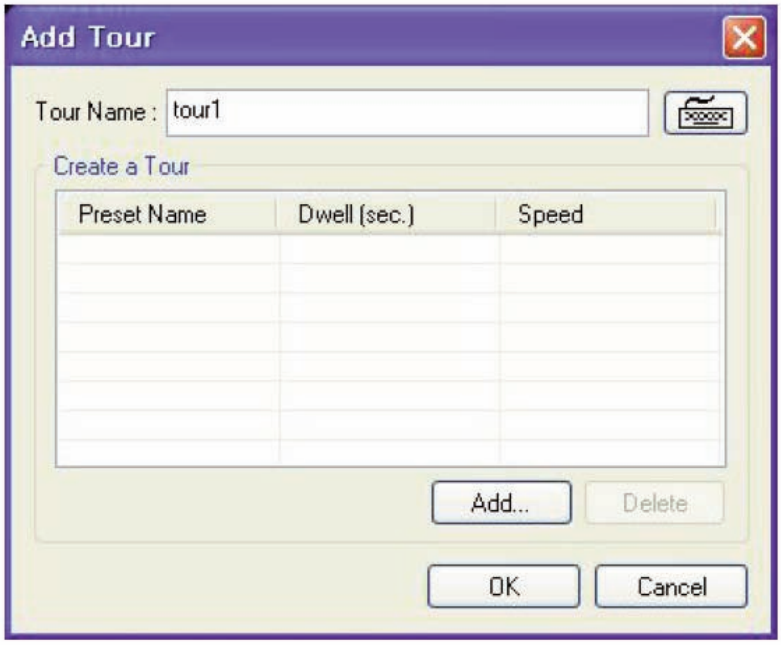

STEPS TO SETUP A TOUR:
1. Click the right mouse.
2. Name the tour.
3. Click on “Add”.
4. Select Preset.
5. Click “OK”.
6. Repeat the above to have more than 1 preset in the tour.
7. click the right mouse to run the tour.

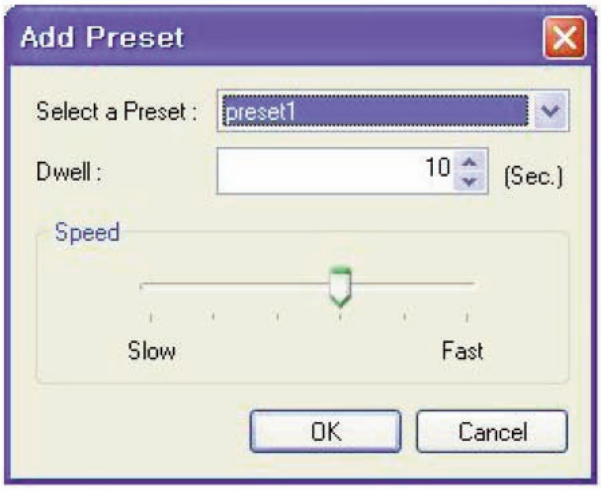

* Dwell: The length of time that camera will pause before moving to the next preset.
* Speed: Moving speed for selected preset.

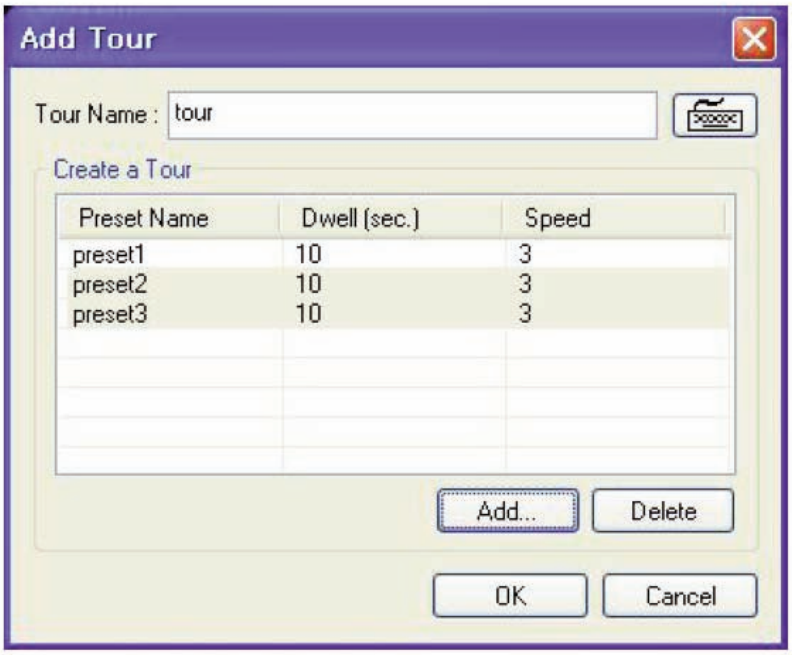
Add Tour
Tour Name : tour
Create a Tour
Preset Name
Dwell (sec.)
Speed
preset1 10 3
preset2 10 3
preset3 10 3
Add...
Delete
OK
Cancel

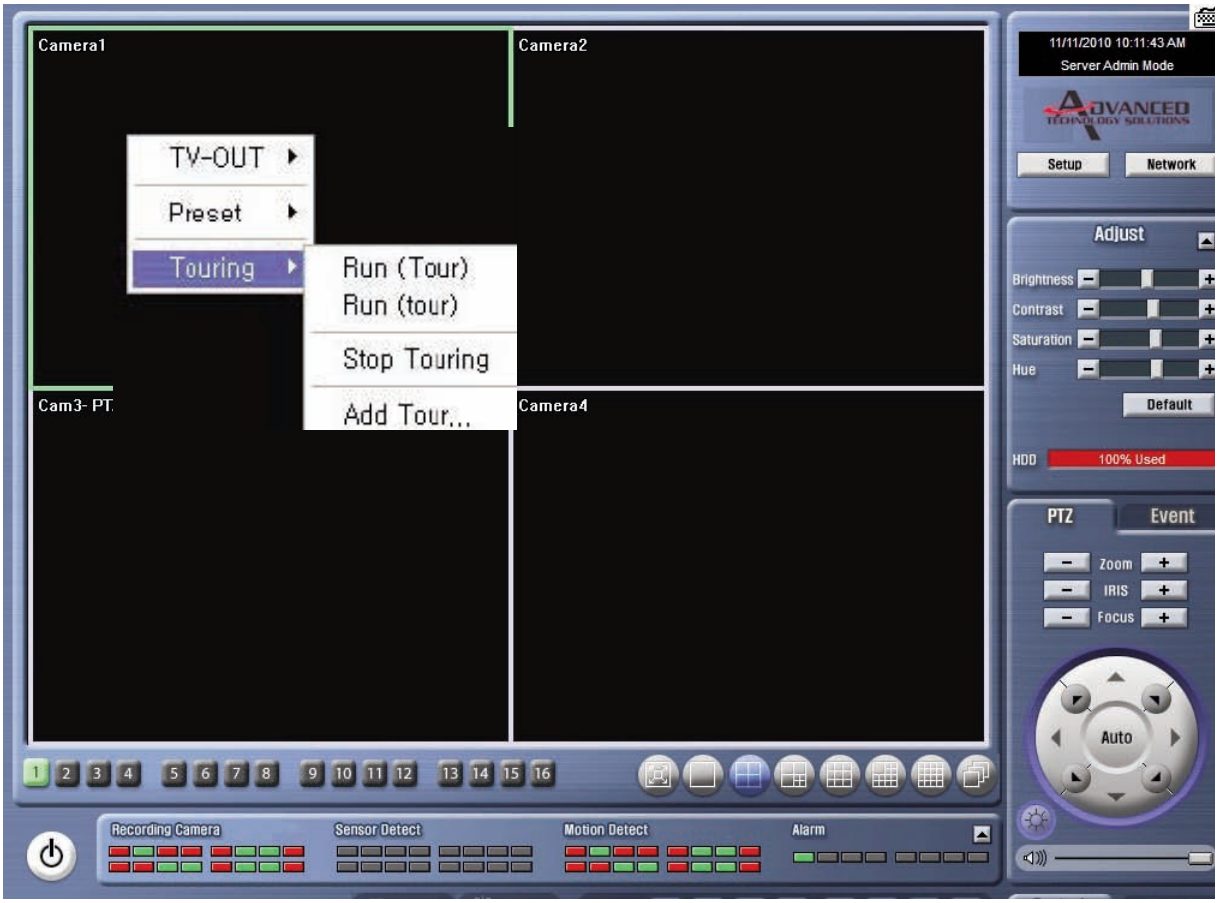
Camera1
Camera2
Cam3- PT
Camera4
TV-OUT
Preset
Touring
Run (Tour)
Run (tour)
Stop Touring
Add Tour...
11/11/2010 10:11:43 AM
Server Admin Mode
Setup
Network
Adjust
Brightness
Contrast
Saturation
Hue
Default
HDD
100% Used
PTZ
Event
Zoom
IRIS
Focus
Auto
Recording Camera
Sensor Detect
Motion Detect
Alarm

Advanced PTZ set up can be done by one right mouse click. Make sure that the PTZ camera to set up supports advanced PTZ control funcitons first.

OUTPUT DEVICE

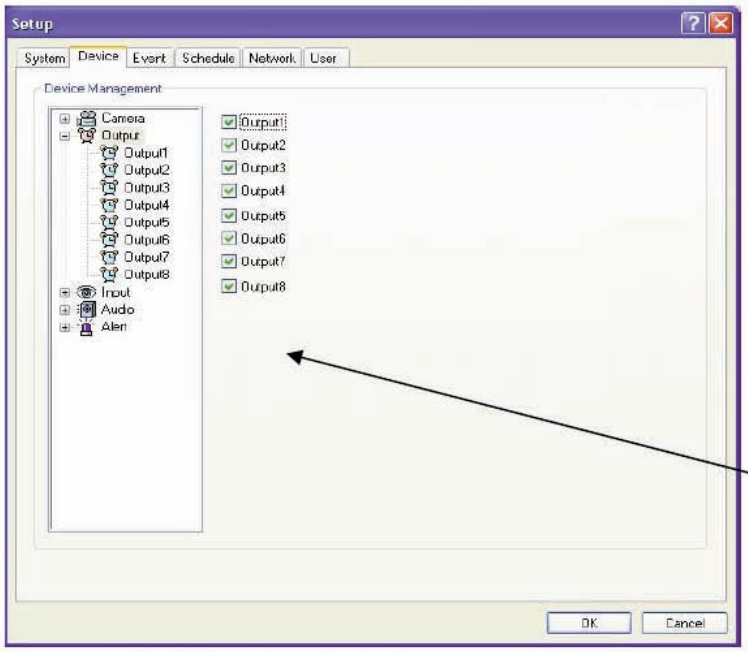

ATS DVR SYSTEM CAN BE EQUIPPED WITH AS MANY AS 8 OUTPUT DEVICES. SIMPLY CHECK THE BOXES FOR USE. IN ADDITION, OUTPUTS CAN BE MANUALLY ACTIVATED FROM CONTROL SCREEN (MANUAL ALARM).

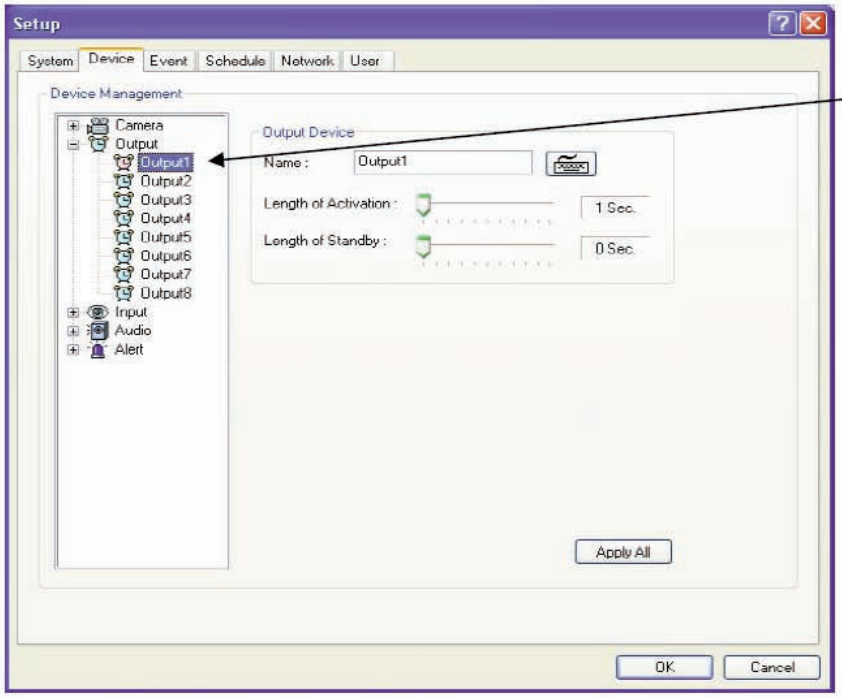

DOUBLE-CLICK ON "OUTPUT" FOR INDIVIDUAL OUTPUT SETUP.

* NAME: OUTPUT DEVICE NAME.
* LENGTH OF ACTIVATION: THE LENGTH OF OUTPUT ACTIVATION (1-60 SEC.).
* LENGTH OF STANDBY: THE LENGTH OF OUTPUT DEACTIVATION UNTIL REACTIVATION (0-60 SEC.).
* APPLY ALL: THE SAME SETTINGS WILL BE APPLIED TO THE REST OF THE OUTPUT DEVICES.

INPUT DEVICE

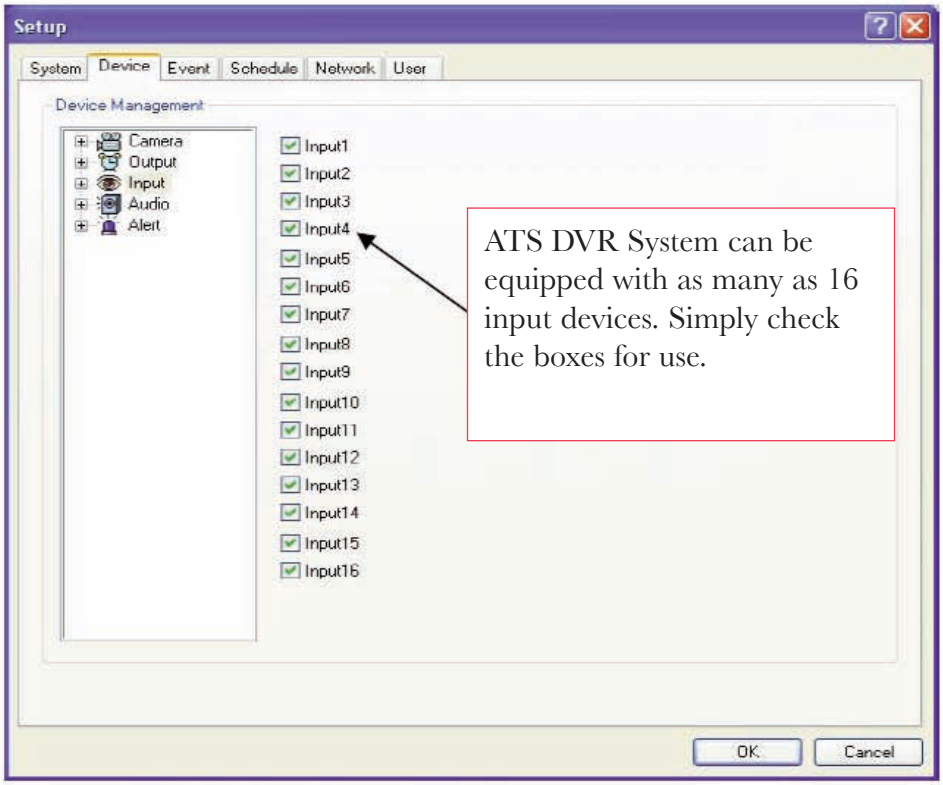

ATS DVR System can be equipped with as many as 16 input devices. Simply check the boxes for use.

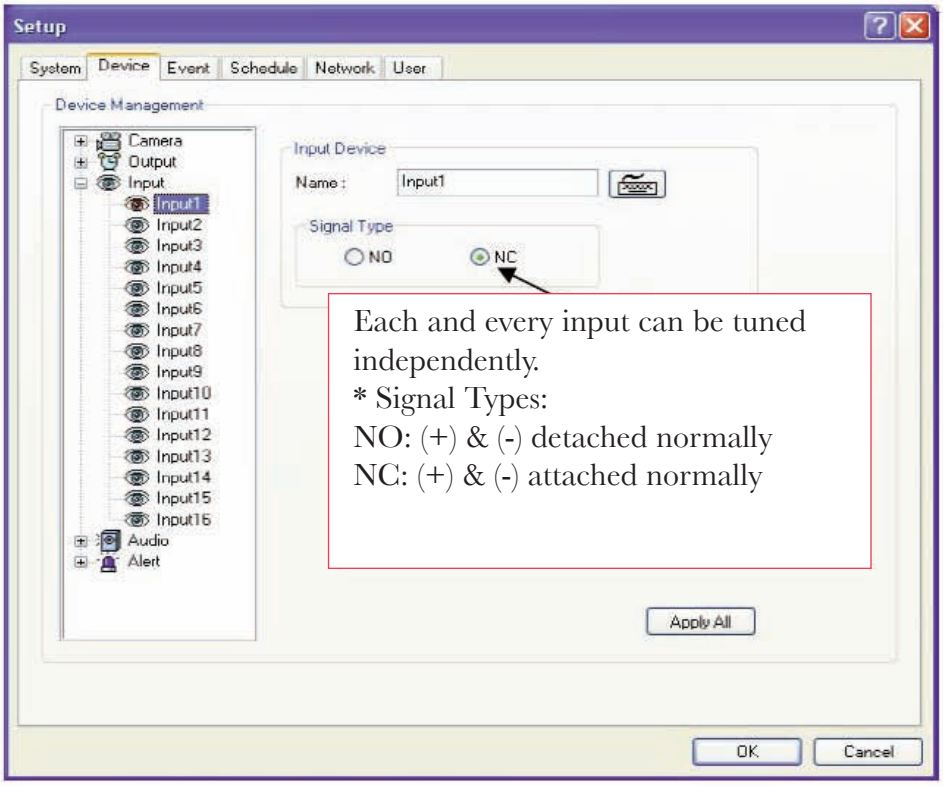

Each and every input can be tuned independently.
* Signal Types:
NO: (+) & (-) detached normally
NC: (+) & (-) attached normally

AUDIO

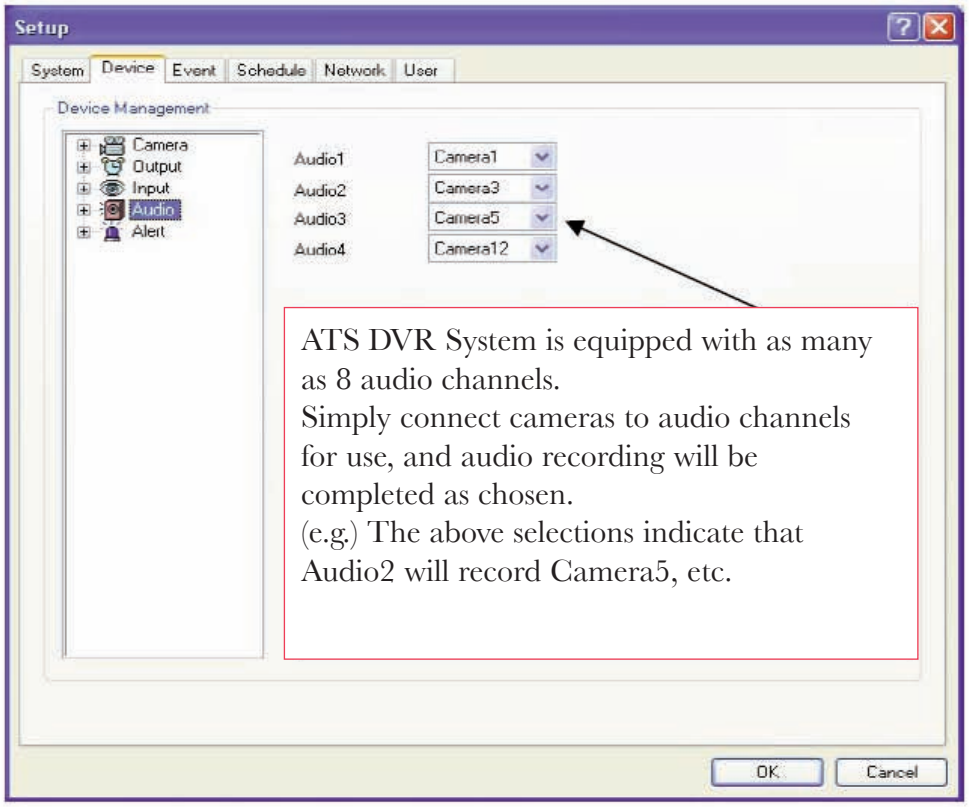

ATS DVR System is equipped with as many as 8 audio channels.
Simply connect cameras to audio channels for use, and audio recording will be completed as chosen.
(e.g.) The above selections indicate that Audio2 will record Camera5, etc.

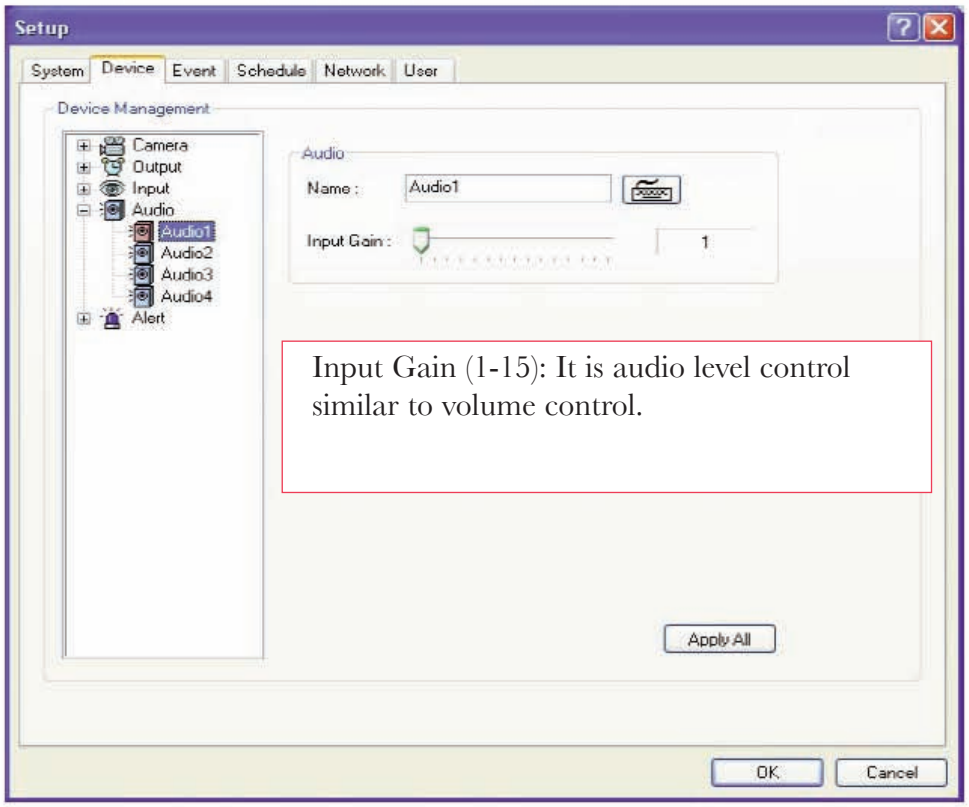

Input Gain (1-15): It is audio level control similar to volume control.

Alert

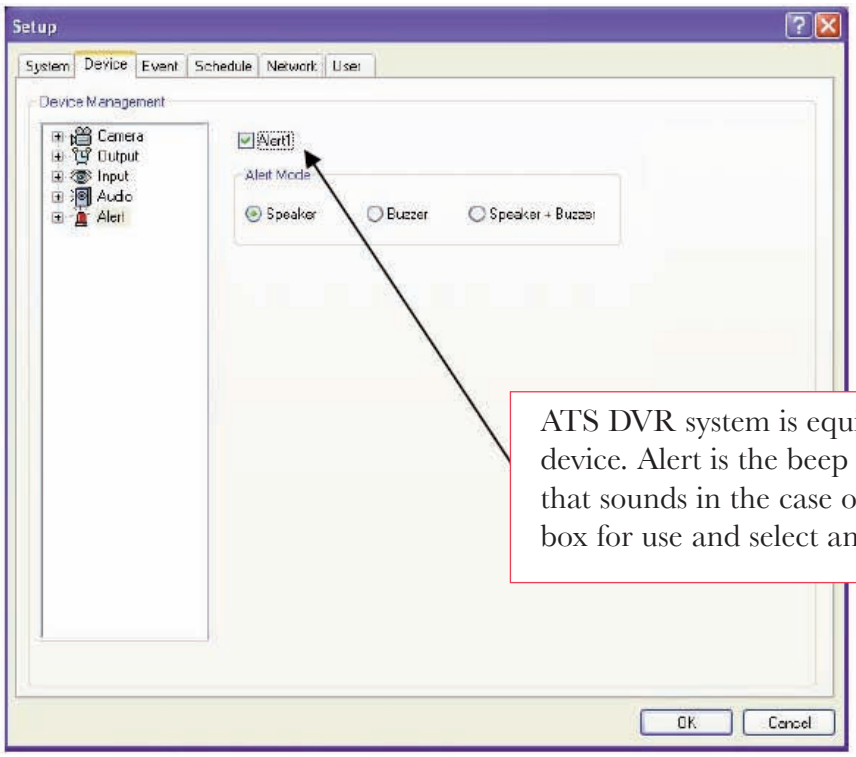

ATS DVR system is equipped with 1 alert device. Alert is the beep inside the system that sounds in the case of event. check the box for use and select an alert mode.

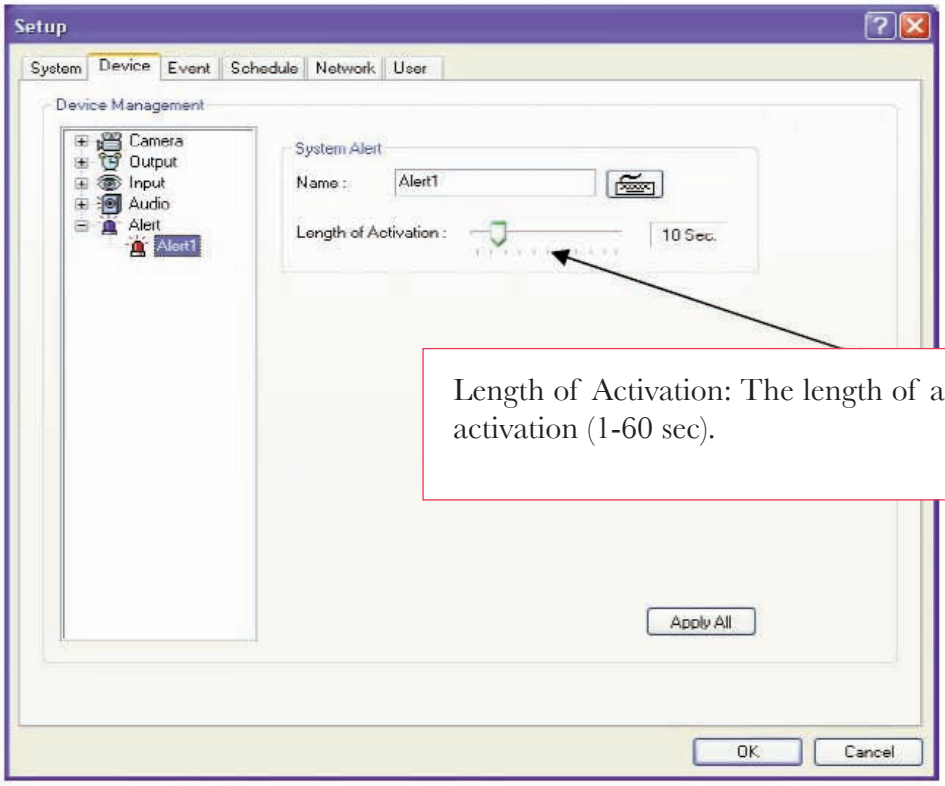

Length of Activation: The length of alert activation (1-60 sec).

EVENT

"Event" consists of 3 different groups: "Input", "Motion Detection" and "No Video Signal". On this menu, devices can be set to respond to different events.

Input

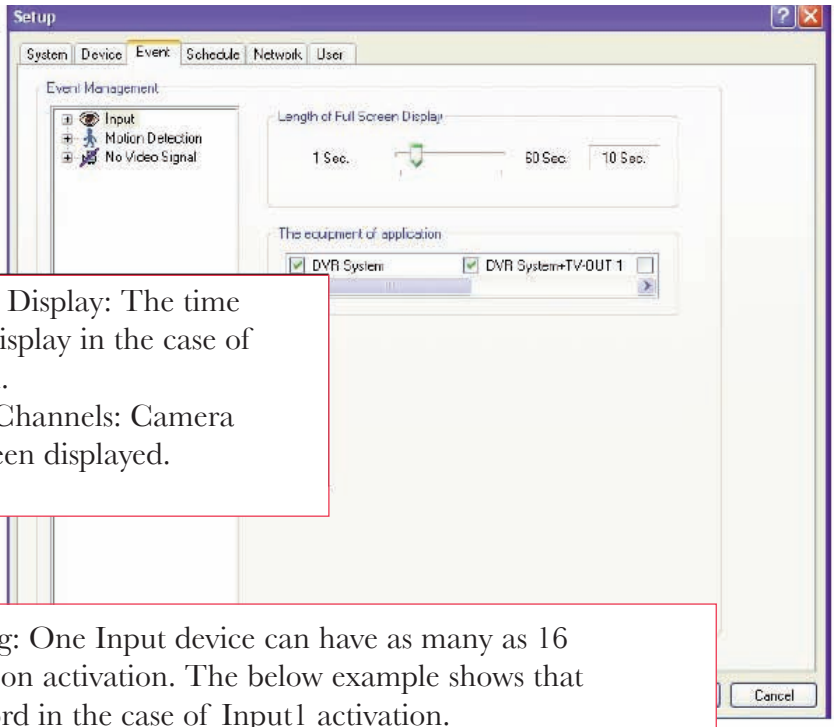

*Length of full Screen Display: The time length for full screen display in the case of input device activation.
* Full Screen Display Channels: Camera channels to be full-screen displayed.

* Link to Recording: One Input device can have as many as 16 recording cameras on activation. The below example shows that Camera 1 will record in the case of Input1 activation.

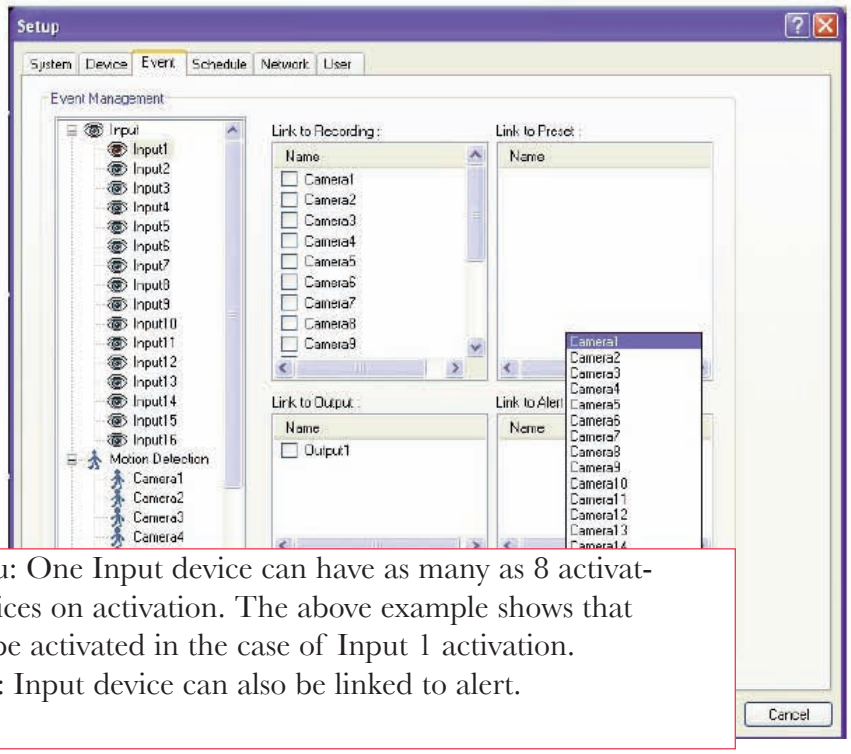

*Link to Outpu: One Input device can have as many as 8 activating output devices on activation. The above example shows that Output 1 will be activated in the case of Input 1 activation.
* Link to Alert: Input device can also be linked to alert.

Motion Detection

THE SAME IDENTICAL CONCEPT AND METHODS AS “INPUT” ARE APPLIED TO “MOTION DETECTION”.

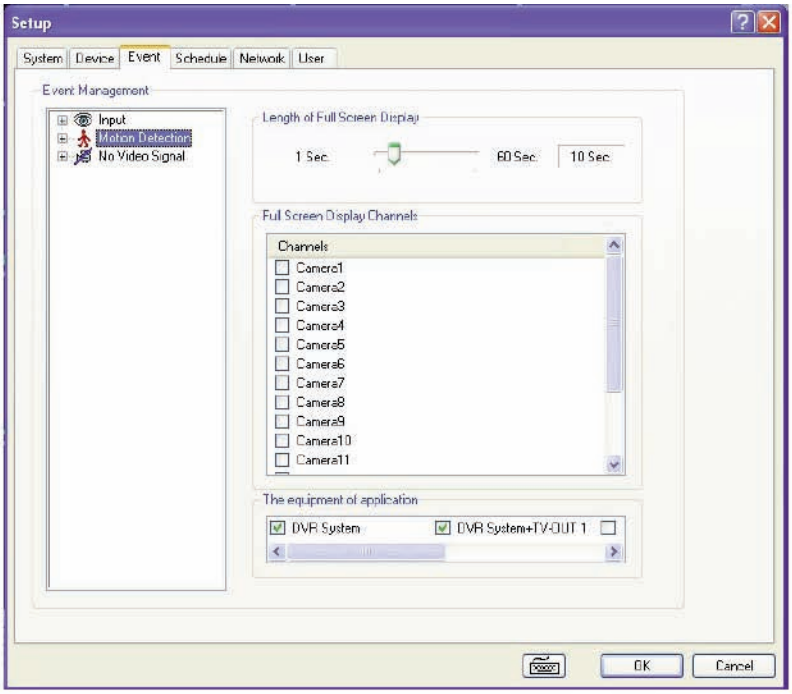

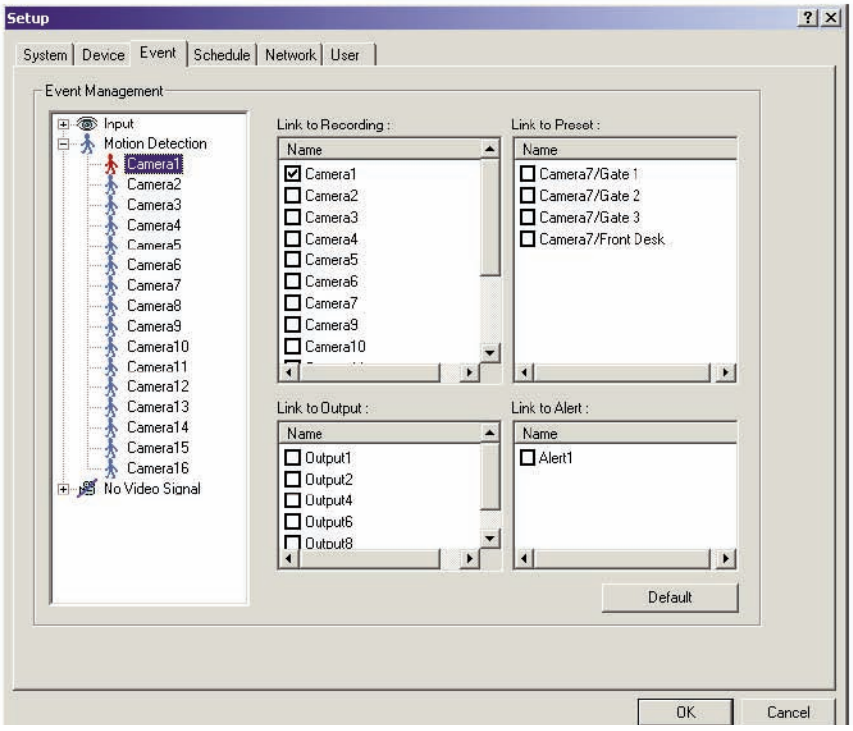

No Video Signal

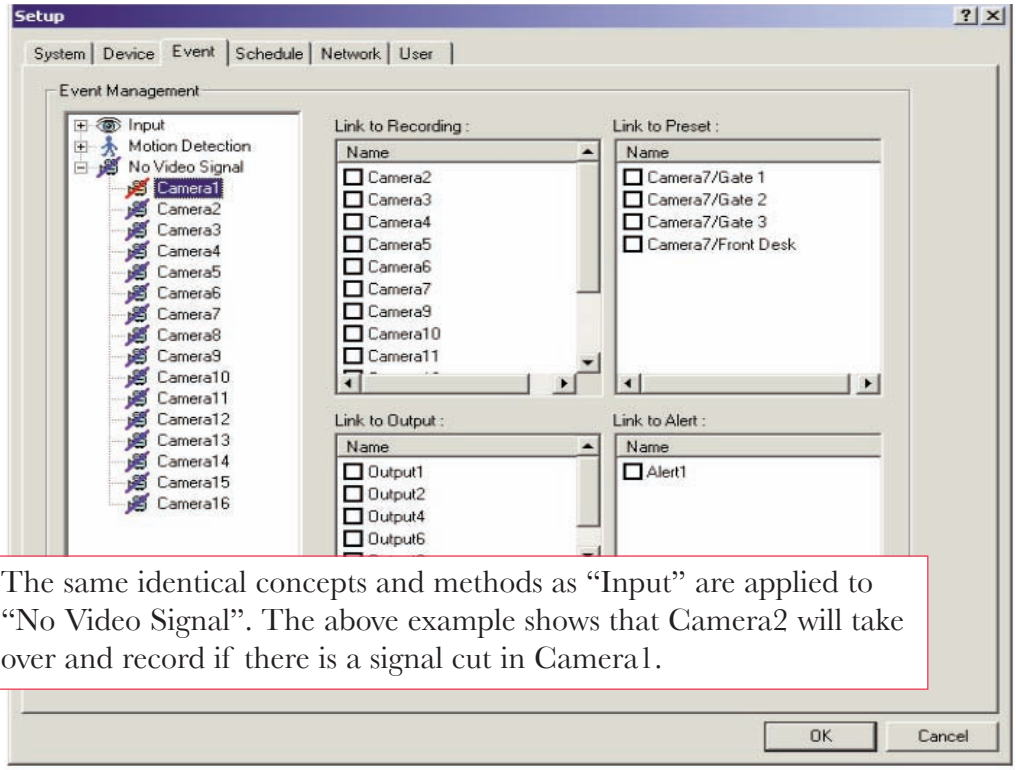

The same identical concepts and methods as "Input" are applied to "No Video Signal". The above example shows that Camera2 will take over and record if there is a signal cut in Camera1.

Schedule

"Schedule" is a place where the different activities of different devices are determined.

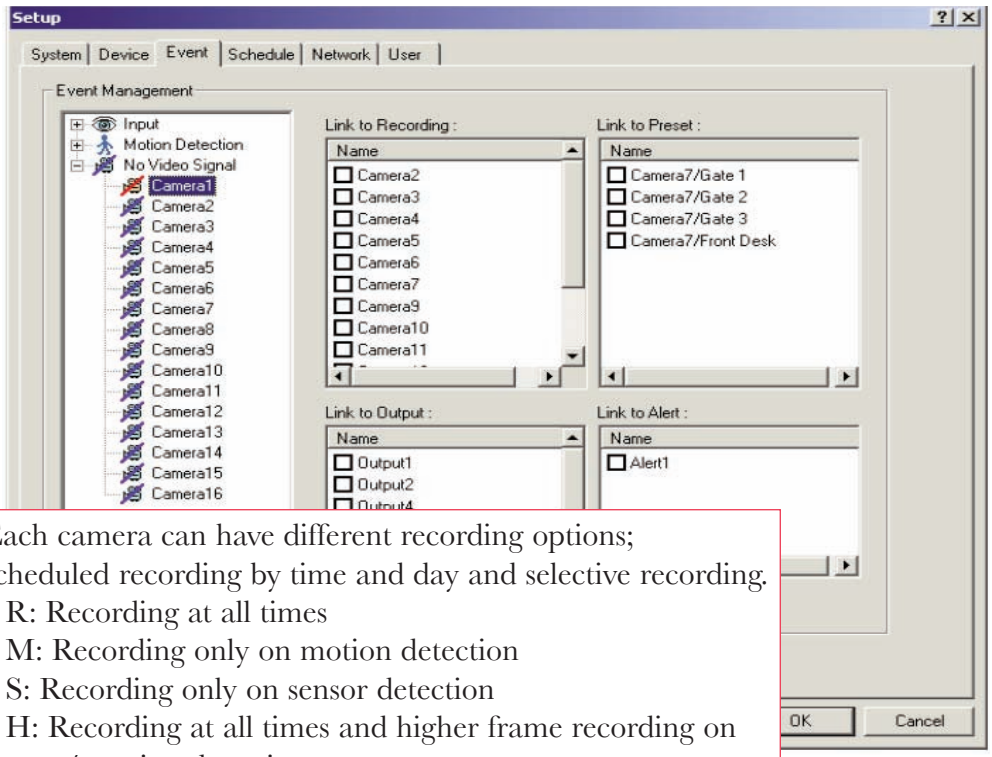

Camera

Each camera can have different recording options; scheduled recording by time and day and selective recording.

* R: Recording at all times
* M: Recording only on motion detection
* S: Recording only on sensor detection
* H: Recording at all times and higher frame recording on sensor/ motion detection.

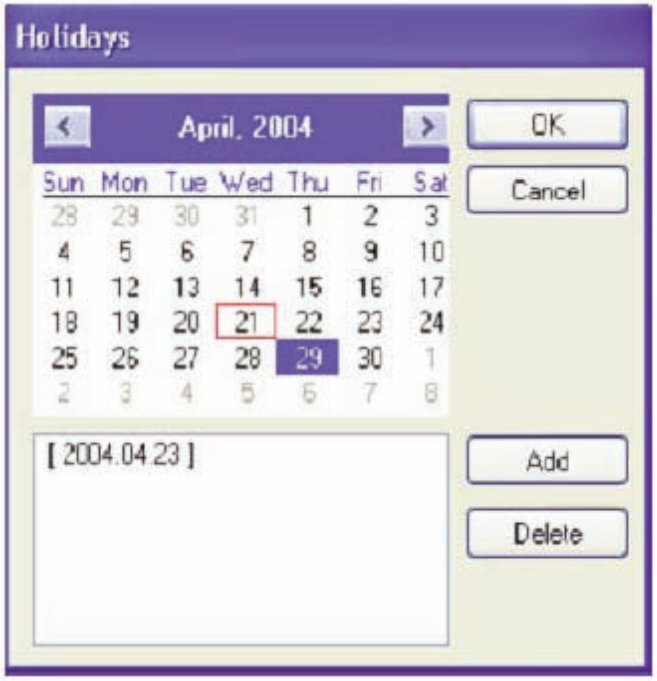

The holiday recording schedule set at the bottom of the "Schedule" table will be applied to selected dates.

Manual (Instant) Recording

It is a function that enables users to react on an emergency situation properly by making ATS start recording immediately.

START "MANUAL RECORDING" BY SELECTING "RECORDING ON". STOP "MANUAL RECORDING" BY SELECTING "RECORDING OFF".

Note:
1. The purple icon indicates that it is on "Manual Recording".
2. Only 'Admin' can use "Manual Recording".

INPUT

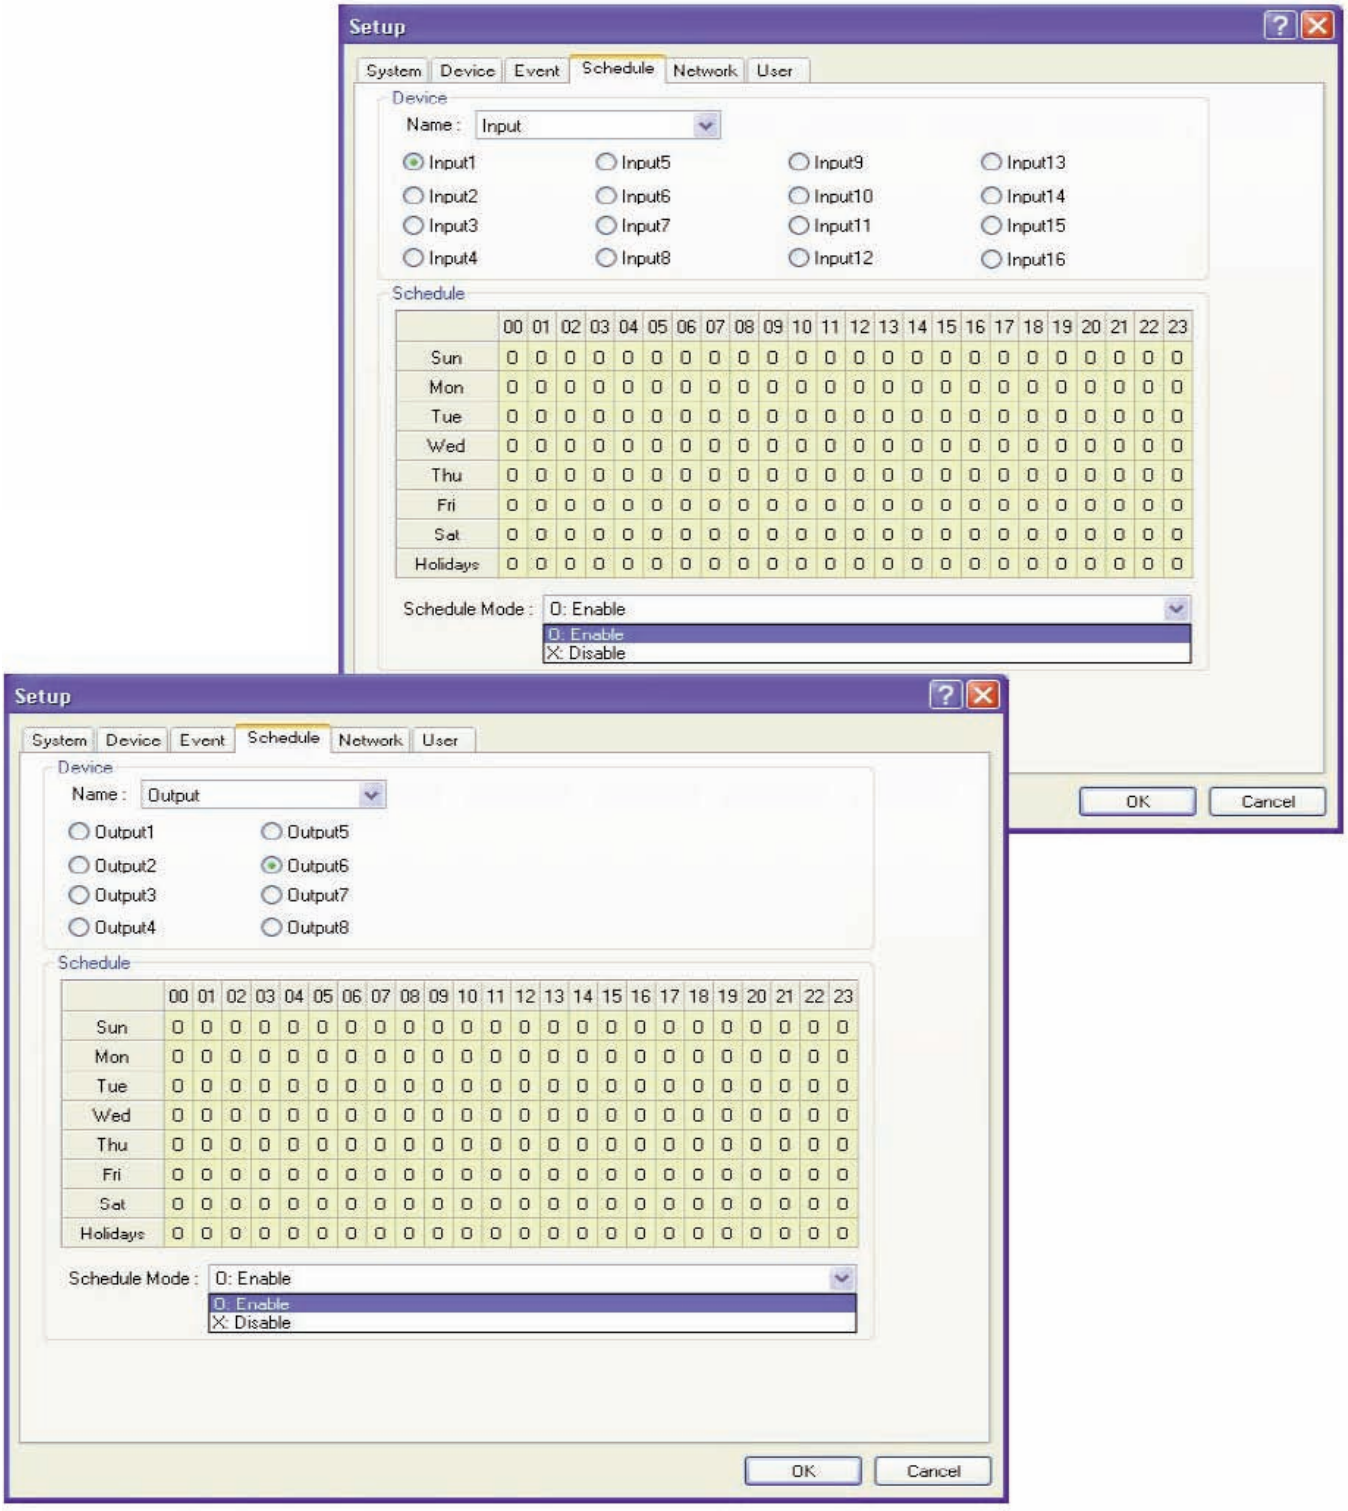
Setup
System
Device
Event
Schedule
Network
User
Device
Name : Input
Input1
Input2
Input3
Input4
Input5
Input6
Input7
Input8
Input9
Input10
Input11
Input12
Input13
Input14
Input15
Input16
Schedule
00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23
Sun
Mon
Tue
Wed
Thu
Fri
Sat
Holidays
Schedule Mode : 0: Enable
0: Enable
X: Disable
OK
Cancel
Setup
System
Device
Event
Schedule
Network
User
Device
Name : Output
Output1
Output2
Output3
Output4
Output5
Output6
Output7
Output8
Schedule
00 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23
Sun
Mon
Tue
Wed
Thu
Fri
Sat
Holidays
Schedule Mode : 0: Enable
0: Enable
X: Disable
OK
Cancel

NETWORK

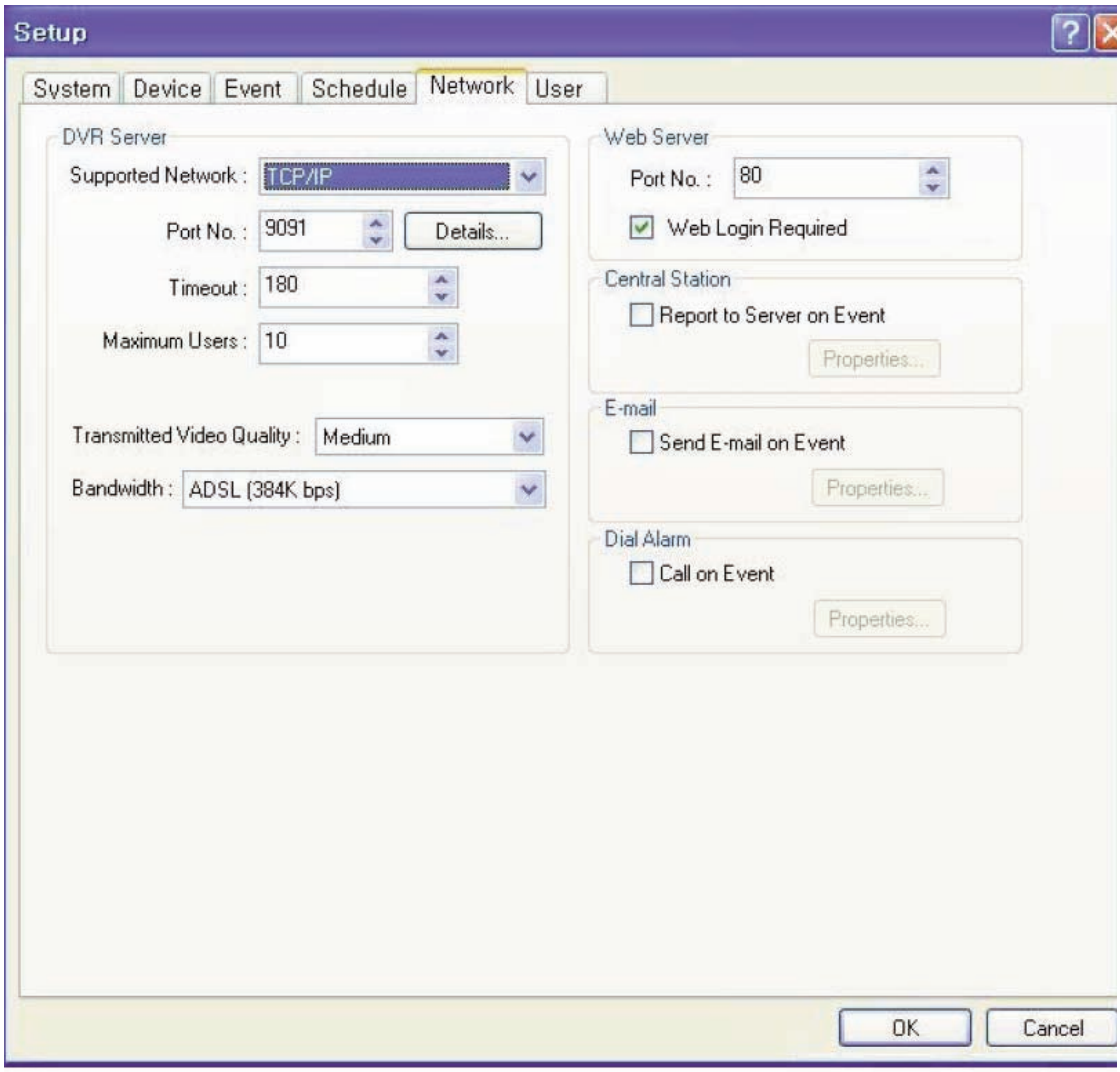

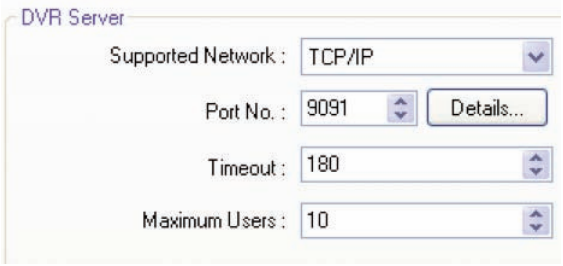

SERVER

*SETUP NETWORK:
1. TCP/ IP - Connecting to DVR Server from Client using Lan or DSL
2. PSTN - Connecting to DVR Server from Client using PSTN or ISDN modem
3. None - Not allowed to connect to DVR Server remotely
* Port No.: The default port number is 9091
*Timeout: The time length of trials to connect to DVR Server from Client
* Maximum Users: The maximum number of users that can be logged in remotely.
* Details: It shows all the port numbers that are available to use.

* Transmitted Video Quality: Video Quality to be transmitted to Client.
As a reminder, the higher video quality gets, the slower network transmission speed becomes. Therefore, it is often recommended to select low video quality when using "Narrowband".
* Bandwidth: Make sure to select the right bandwidth to have the right network performance.

Router in Use: If there is a router in use, follow the steps below:

1. Check the box above.
2. Type in router's IP address.
3. Go to router setup.
4. Register DVR's IP Address
5. Put in all the port numbers under "Details".

Web Server

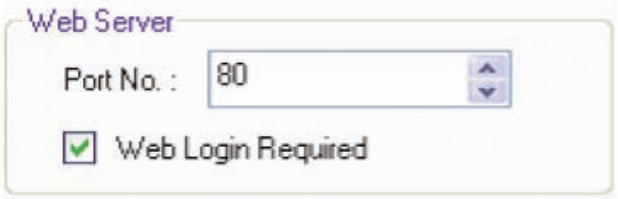

* Port No. : Fixed HTTP Port No.
* Web Login Required: If the box is checked, login is required when connecting to DVR server using web browser. If the box is NOT checked, automatic login as "anonymous" will be done.

Central Station

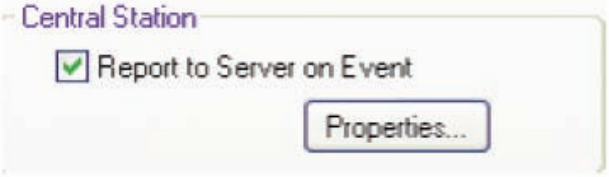

"Central Station" is a function that enables Client with static IP to manage multi DVR sites. Check the box and click on "Properties" for setup.
* Note: "DVR Manager" must be installed on Central Station Server (Client). For more details, refere to Appendix 3.

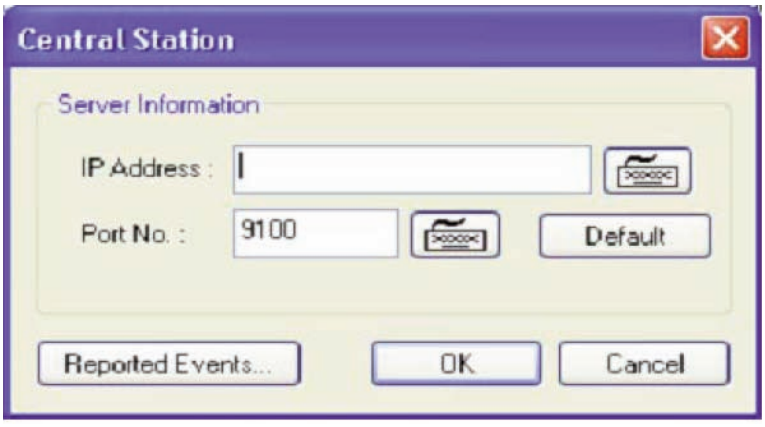

TYPE IN THE IP ADDRESS OF CENTRAL STATION SERVER (CLIENT WITH STATIC IP) AND CLICK ON "REPORTED EVENTS" FOR MORE SETUP.

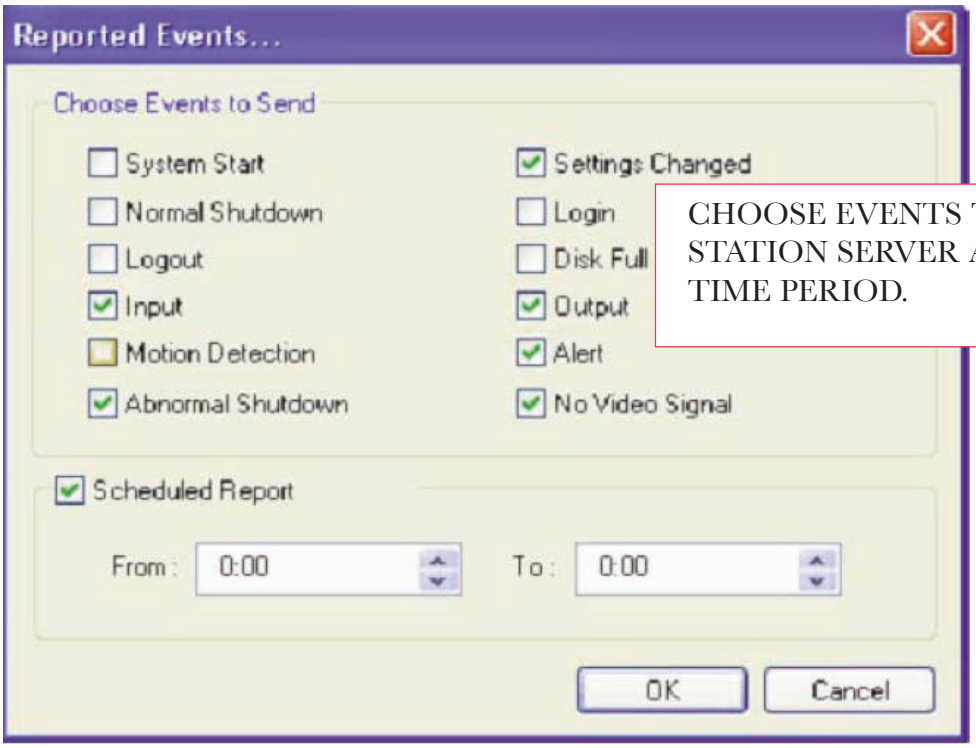

CHOOSE EVENTS TO REPORT TO CENTRAL STATION SERVER AND SET REPORTING TIME PERIOD.

E-MAIL

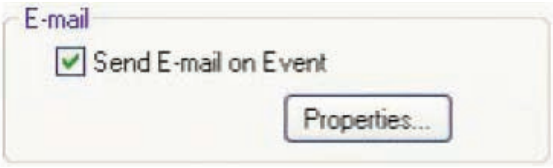

E-MAIL IS A FUNCTION THAT ENABLES ATS DVR SYSTEM TO SEND OUT EMAILS WHEN SELECTED EVENTS OCCUR. CHECK THE BOX AND CLICK ON "PROPERTIES" FOR SETUP.

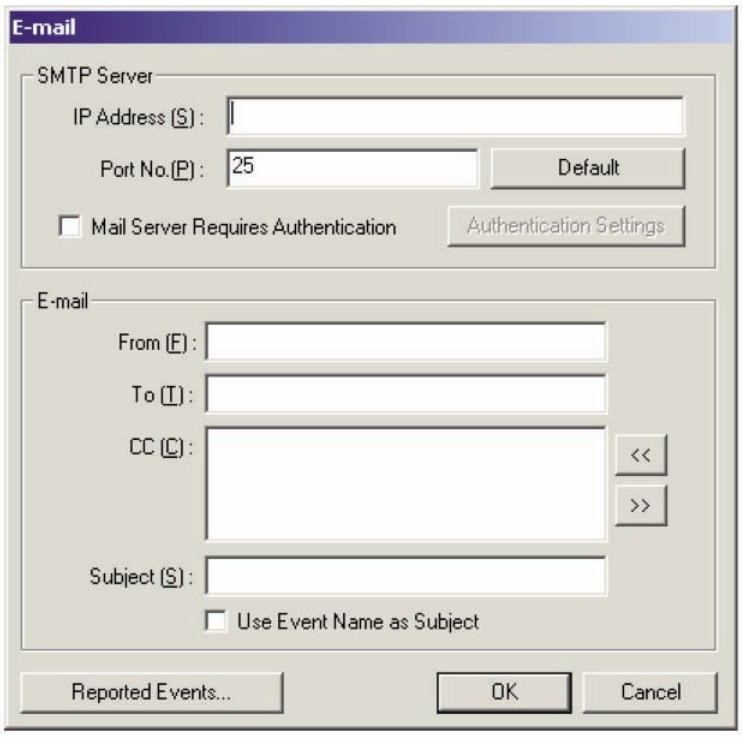

NOTE: SOME E-MAIL SERVERS MAY REQUIRE AUTHENTICATION FOR ID AND PW.

MAKE SURE PUT IN THE RIGHT IP ADDRESS OF SMTP SERVER. THEN, CLICK ON "REPORTED EVENTS" FOR MORE SETUP. THE "REPORTED EVENTS" MENU IS THE SAME AS CENTRAL STATION.

DIAL ALARM

"Dial Alarm" is a function that enables ATS DVR system to call out on selected events. Check the box and click on "Properties" for setup.

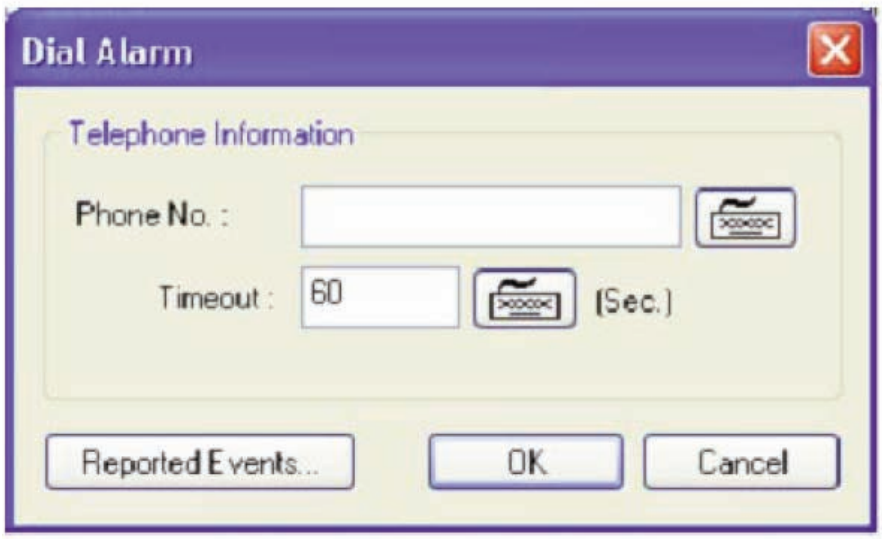

Modem card must be installed inside ATS DVR system to make this function work. Type in phone (mobile) number to report. Click on "Reported Events" (same setup as Central Station) for more setup.

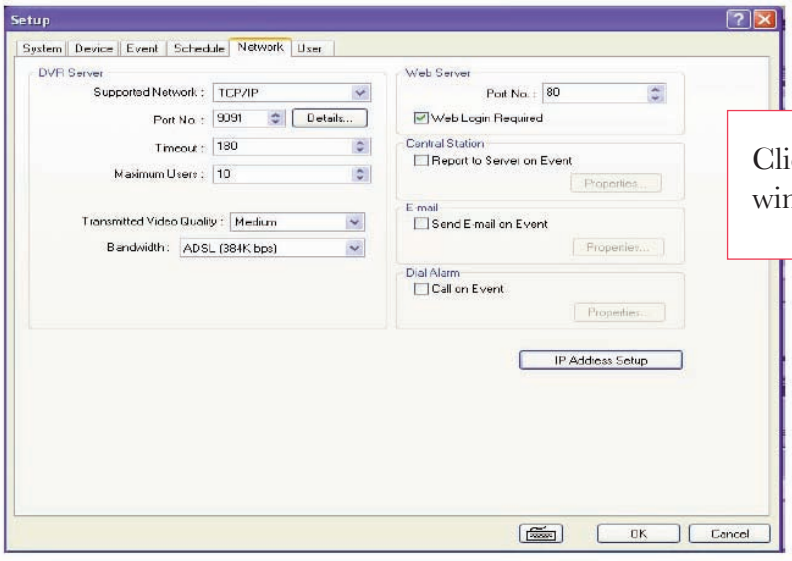

Clicking "IP Address Setup" will open a window for Network Connections as below.

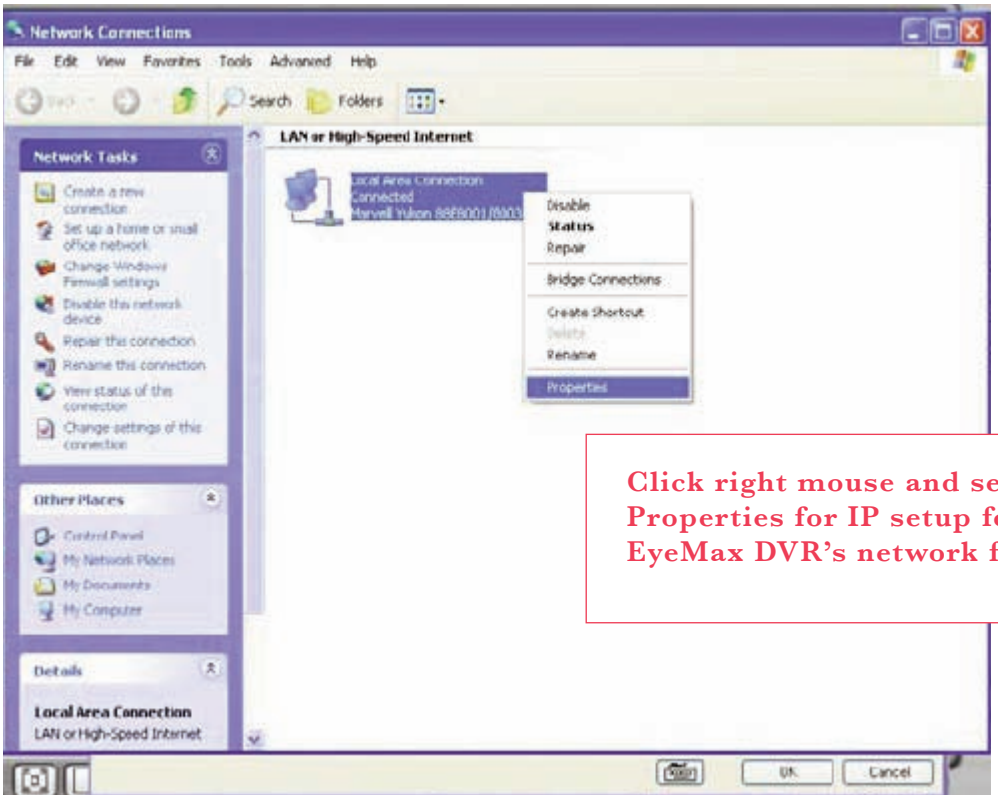

Click right mouse and select Properties for IP setup for EyeMax DVR's network functions.

USER

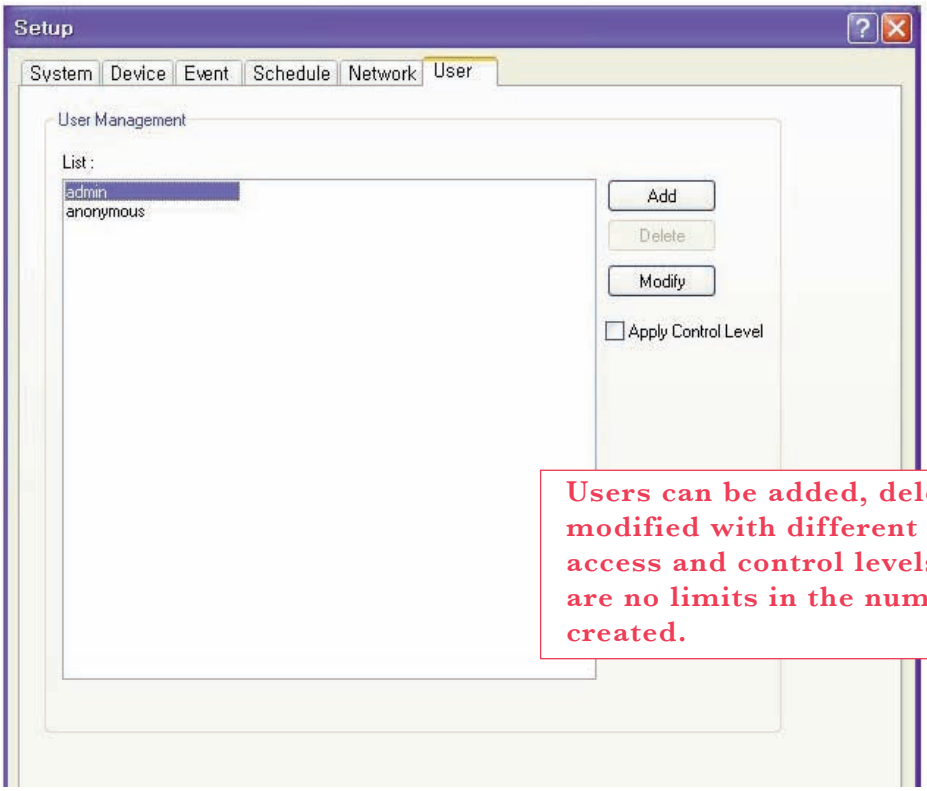

Users can be added, deleted or modified with different authorized access and control levels. There are no limits in the number of users created.

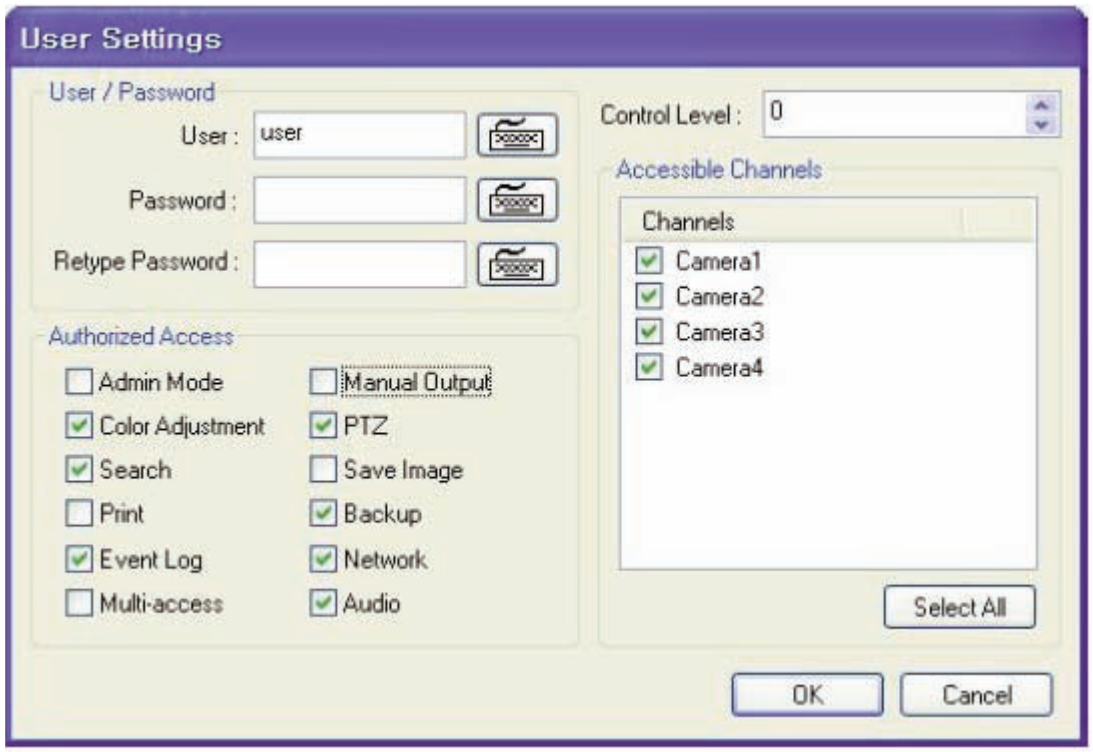

*** Authorized Access: Checked functions will be allowed to access remotely.**
*** Accessible channels: Checked channels will be allowed to view remotely.**
*** Control Level: The lowest number will be allowed to have the first priority to set up, control, etc remotely.**
*** Admin Mode: A user who can go into the setup and program (given the same authorization as "Admin"). Only ONE user with "Admin Mode" can log in remotely.**
*** Network: If checked, remote access authorization will be given.**
*** Multi-access: If checked, multi-users with the same user name can log in remotely at the same time.**

Screen Features

Recording Camera: It shows recording status.
Sensor Detection: It shows sensor detection status.
Motion Detection: It shows motion detection status.
Alarm: It shows alarm activation status.
HDD Capacity: It shows HDD capacity used for recording.
Event: It shows events occurred.
Event Log: It shows all the previous events occurred by date.

Event Log

*** Date: All dates with events will be marked in bold numbers.**
*** List: All events for a certain selected date will be shown.**
*** Delete All: If clicked, all the previous records will be deleted.**
*** Delete: If clicked, only the events for certain selected dates will be deleted.**
*** Refresh: If clicked, events will be updated.**

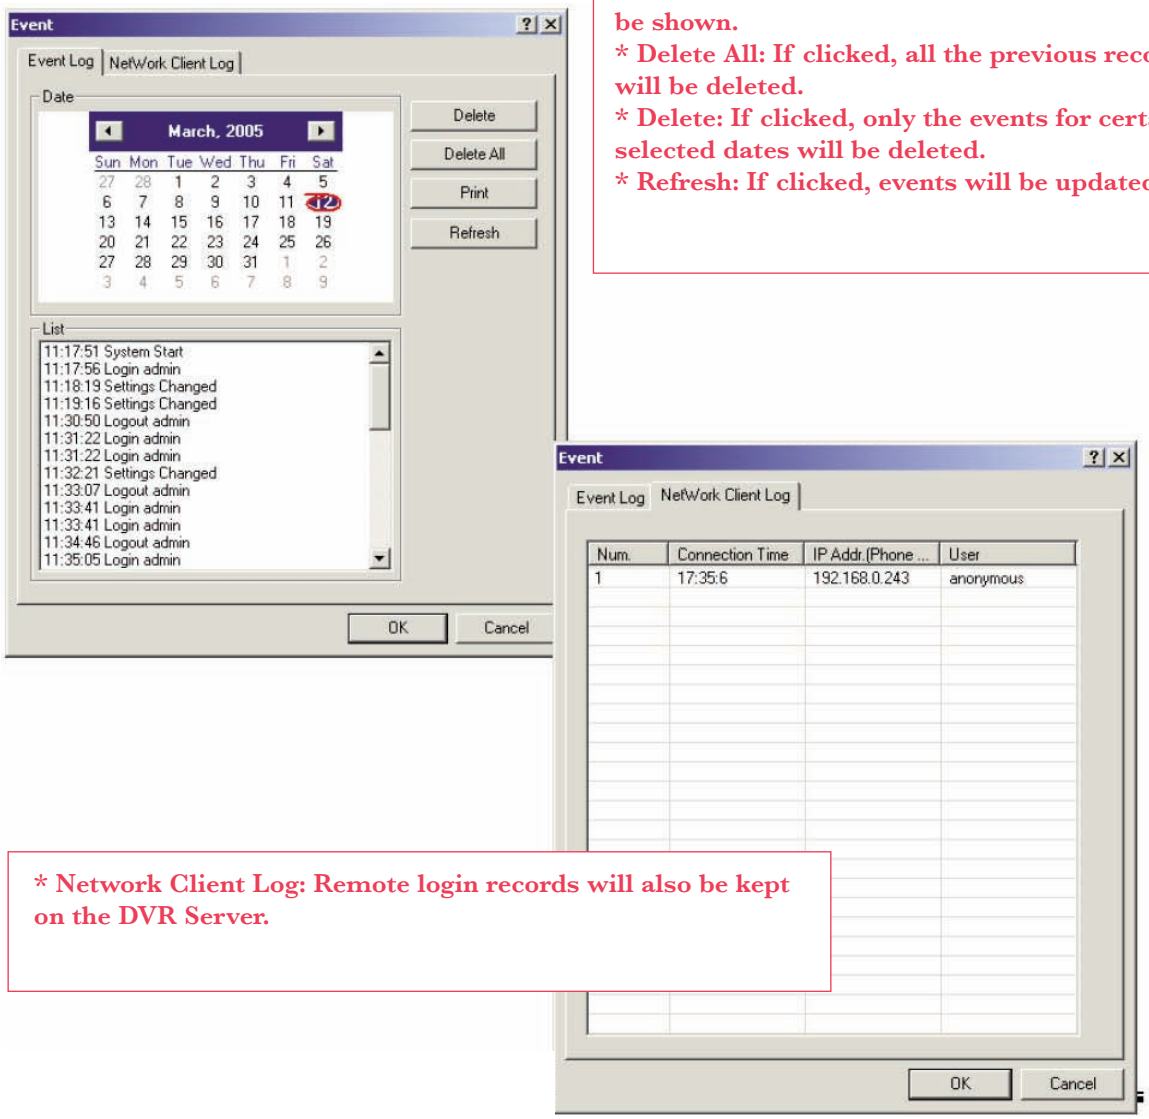

*** Network Client Log: Remote login records will also be kept on the DVR Server.**

PLAYBACK APPLICATION (SEARCH)

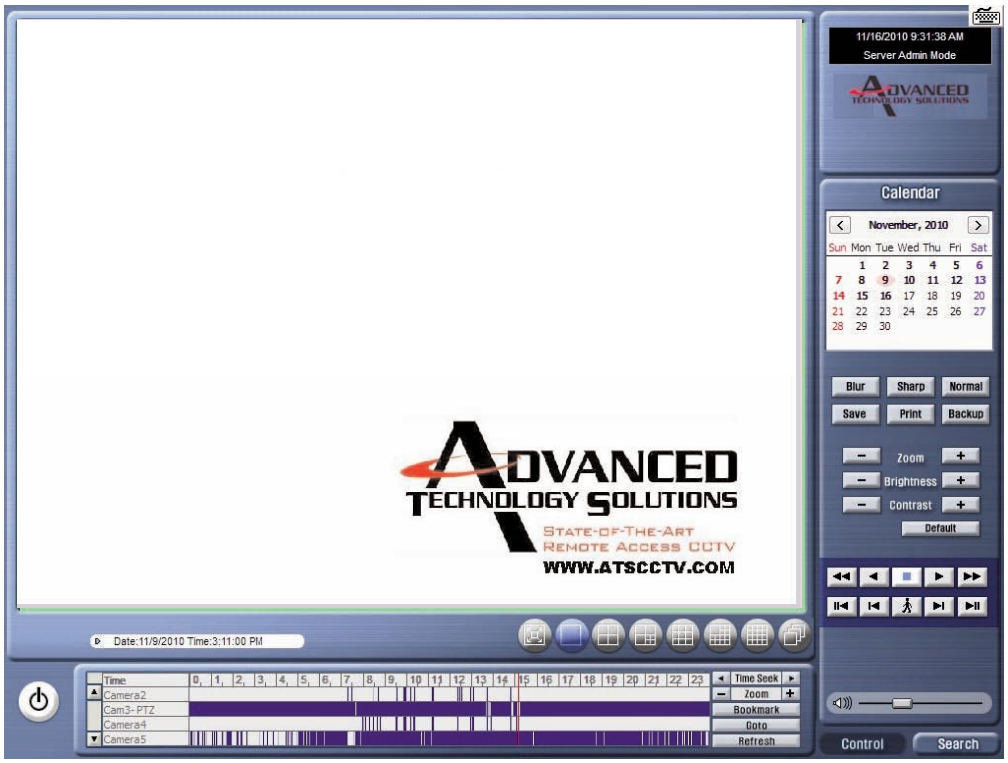

Search Features 1

CALENDAR: All dates with recorded data will e marked in bold numbers.
Blur/Sharp/Normal: Buttons to adjust sharpness of image.
ZOOM: Buttons to adjust contrast.
DEFAULT: Default for Zoom/ Brightness/ Contrast

Search Features 2

Playback

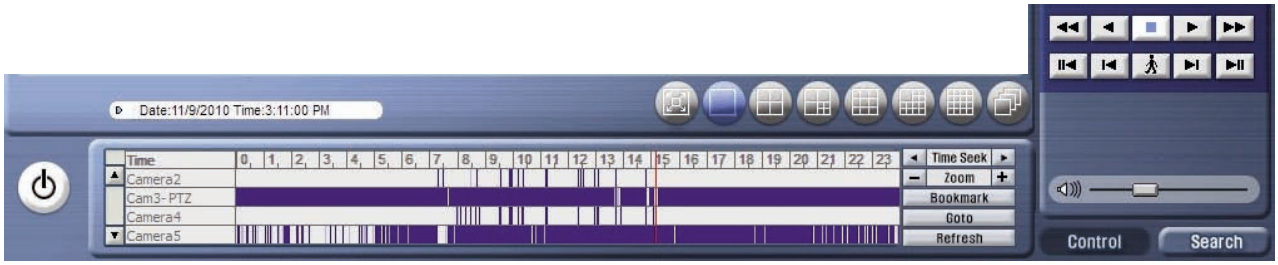

Software Installation

For playback, simply select date, screen mode (1, 4, 9, 16, etc.), time by one click on the time bar and click the play button.

What different colors mean on the time bar:
1. Blue: Recorded data by sensor & motion detection
2. Purple: Recorded data by 24-hour-recording
3. White: No recorded data in all cameras
4. Gray: No recorded data for some cameras
5. Green: Blue + audio
6. Light Green: Purple + audio
7. Orange: Recorded text data (POS)

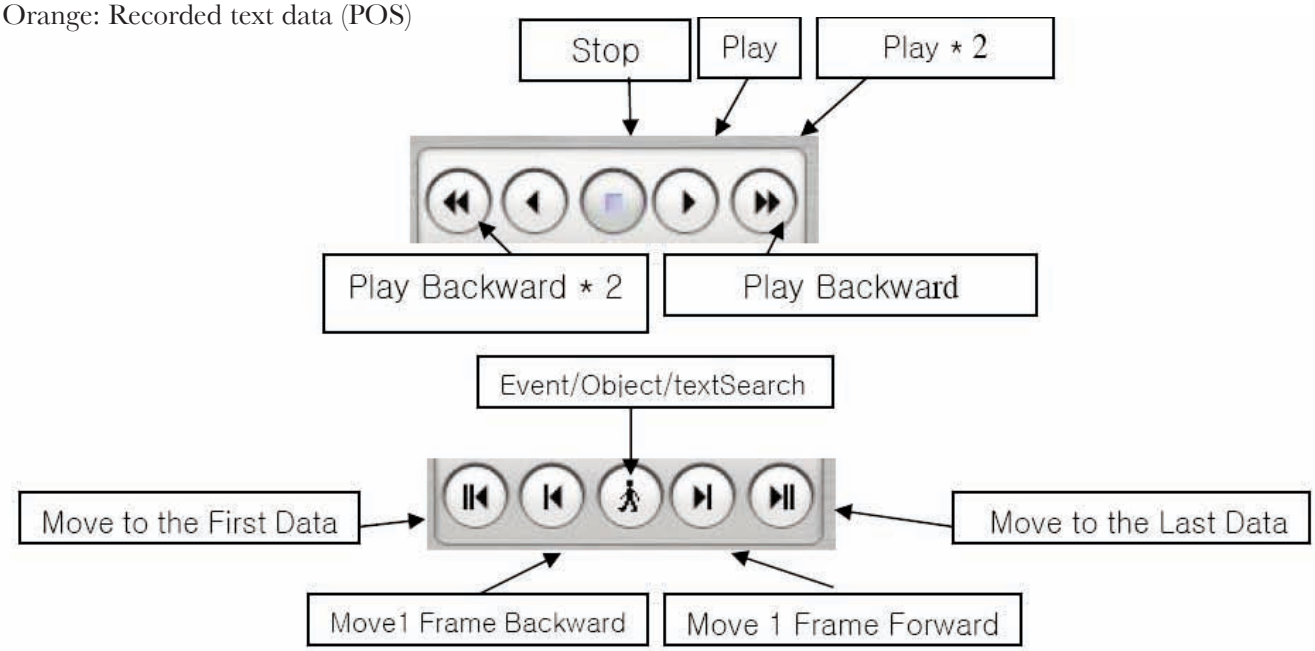

5.2.2 Event/Object/Text Search/PEOPLE COUNT/Access Control Search

[Event Search]

Click the Event/Object Search button and select "Event".

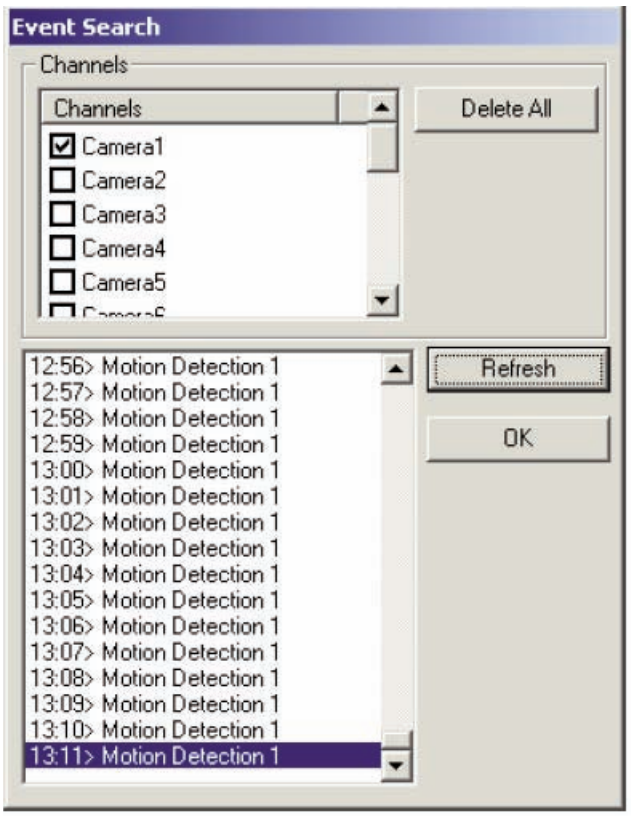

Select channels for Event Search. Select one event from the event list and click "OK", and the selected event will be displayed. Click Refresh to update the list.

(Object Search)

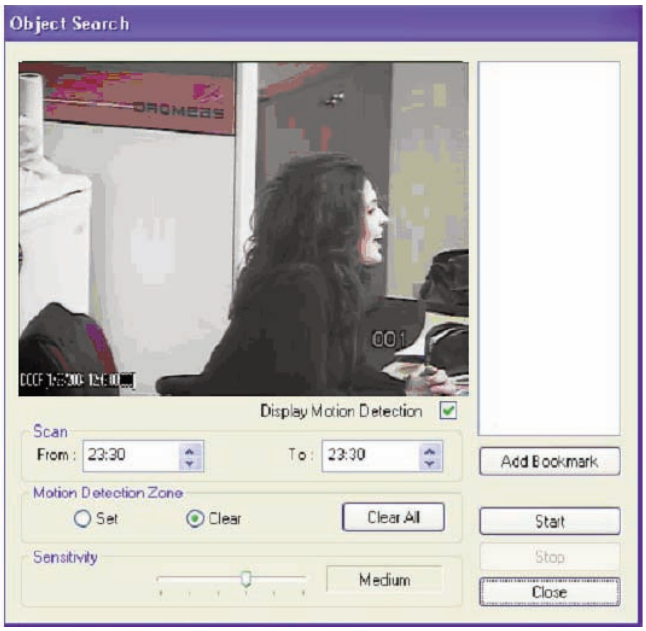

Object Search is only to search certain selected objects for a certain period of time.
Scan: Set the time period for object search
Motion Detection Zone: Select "Set" and mark areas for object search by dragging mouse. "Clear" is used to erase certain areas inside motion detection zones.
Sensitivity: Set motion detection sensitivity level.
Clear All: click on it to clear all the motion detection zones set.

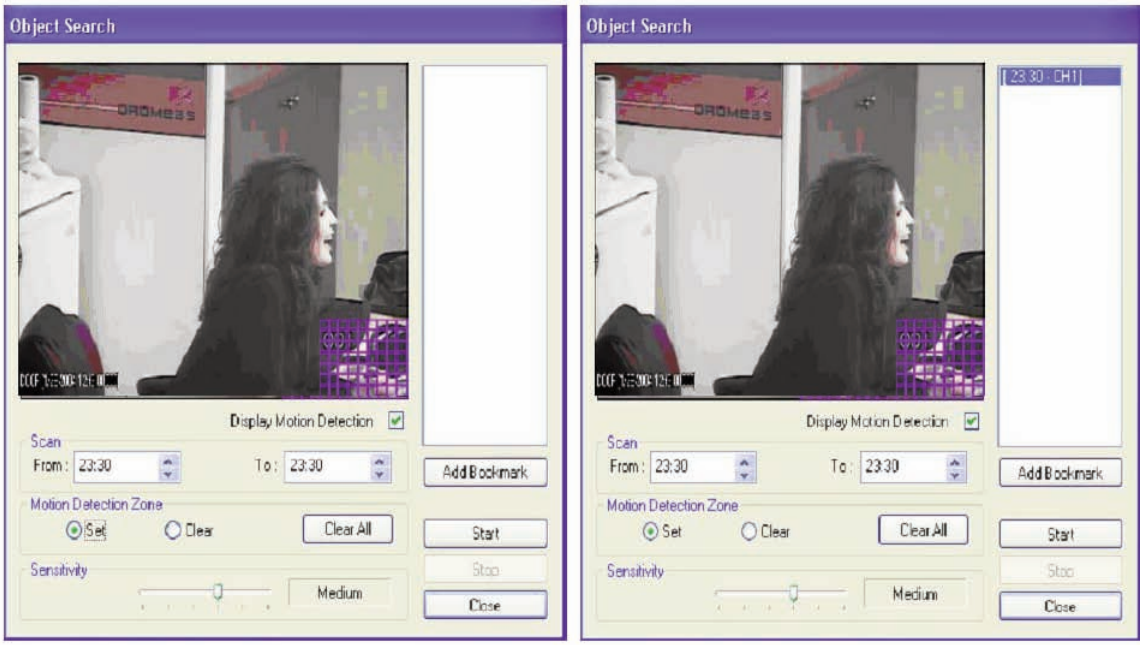

Text Search

It is search POS text data with image according to selected time period and item.

Put in an item (Reference), select time period and click on "Search", and a list with transactions will be displayed.

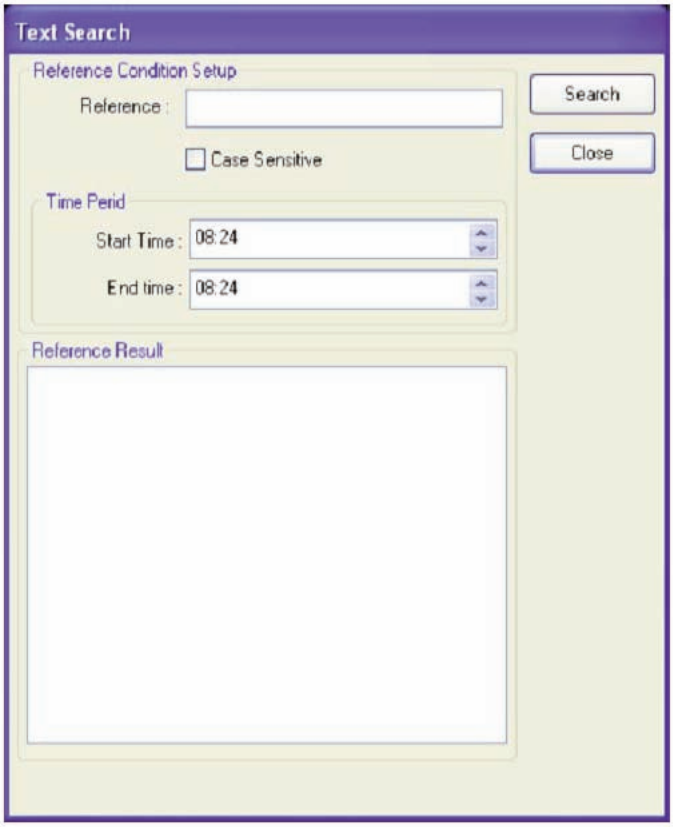

People Count Search

It is to search people count statistics according to selected time period and camera.

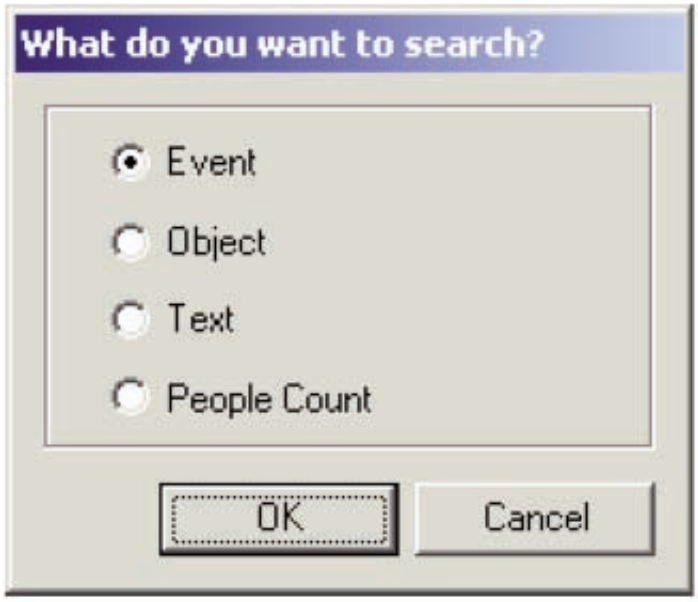

Select date, camera & time, and statistics will be shown as below. Statistics can also be saved as text file.

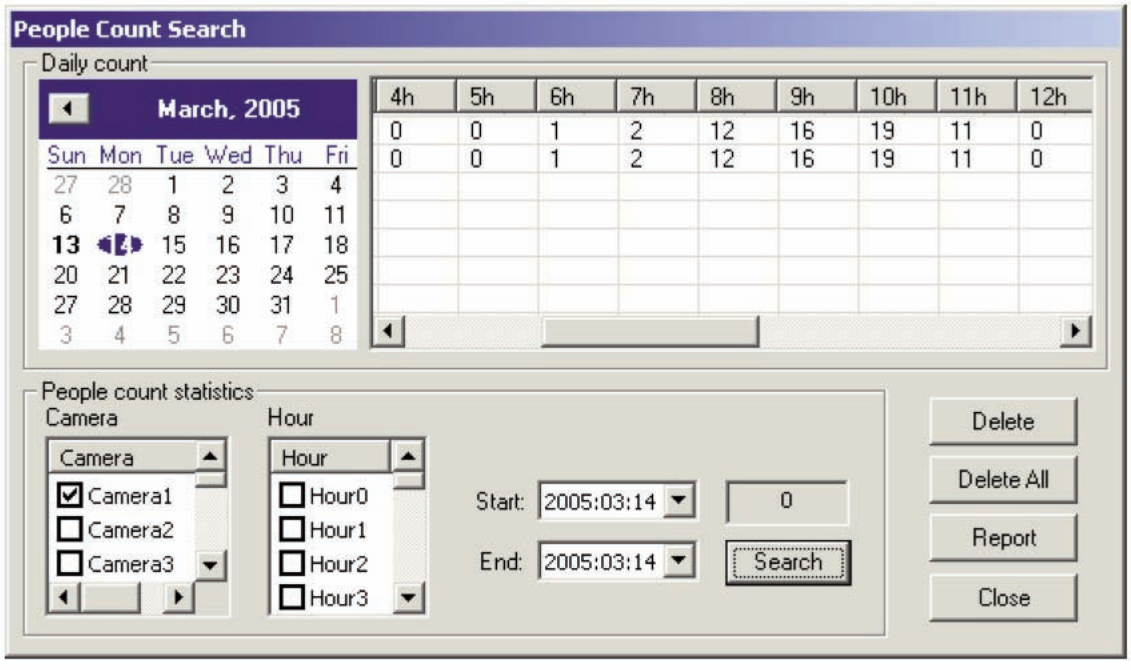

MONITORING AND SEARCHING

It is a feature that enables user to view live video while searching recorded data.

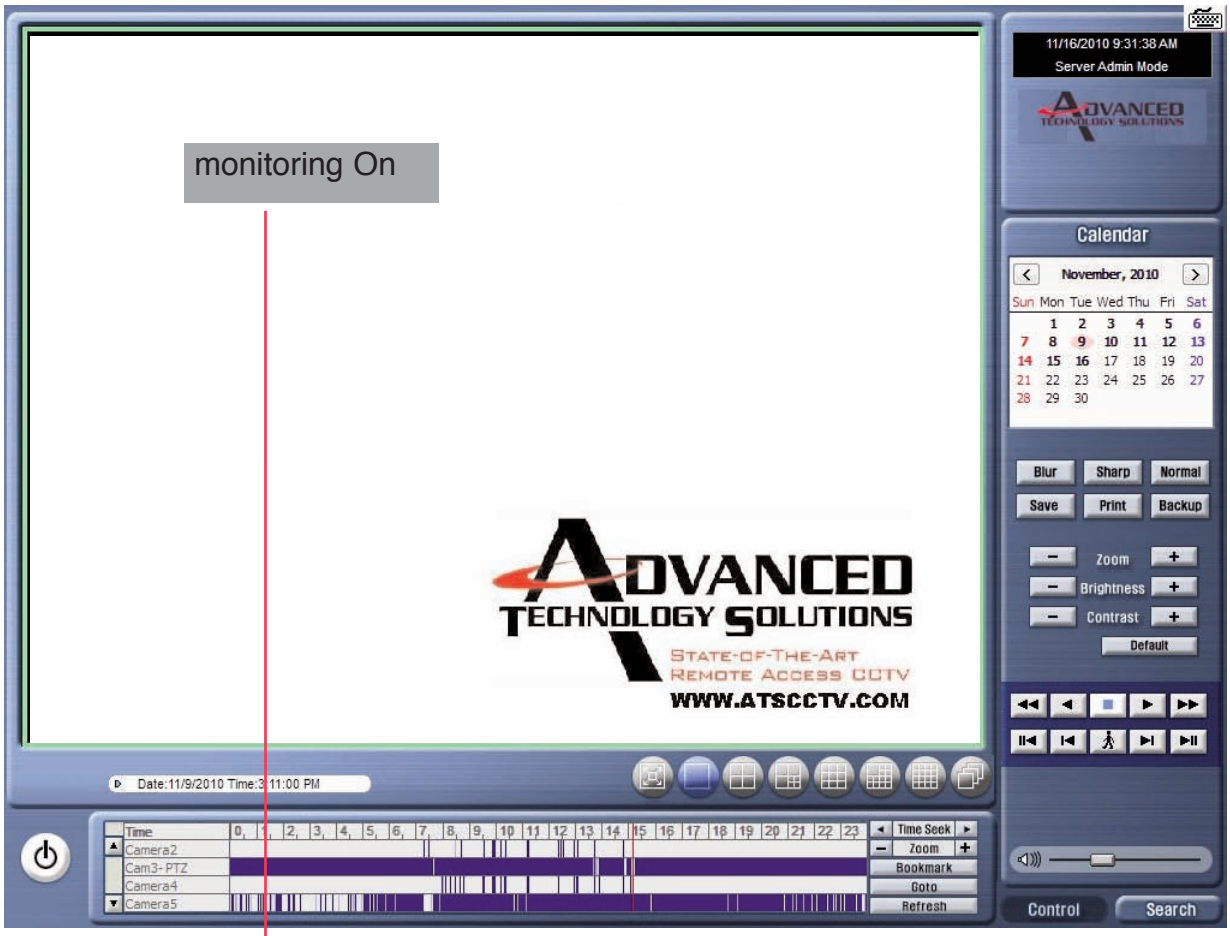

Click the right mouse and select "Monitorying On" to view live video. Click the right mouse again and select "Monitoring Off" to go back to "Search Mode".

Bookmark & Go To

Bookmark (Favorites): Added data from "Object Search" are stored here.

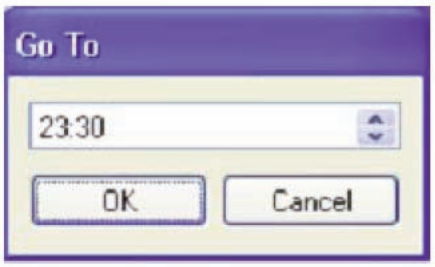

Go To: Select desired time to search and click "OK".

Save

AVI: For saving motion pictures and audio
BMP: For saving images. Watermarked images can be saved.
JPEG: For saving regular still images. Quality is not as good as BMP but less HDD is used.
Save in JPEG with Time Period: For scheduled save in JPEG.

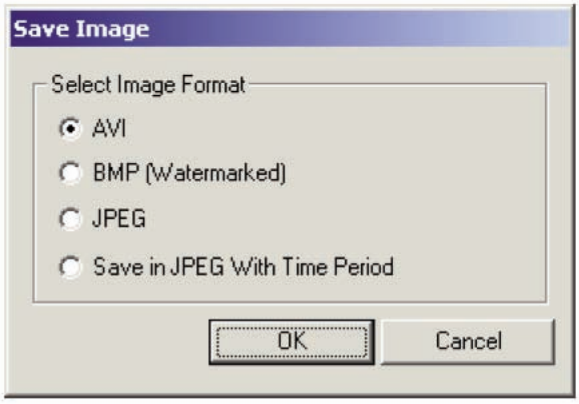

(Save in AVI Format)

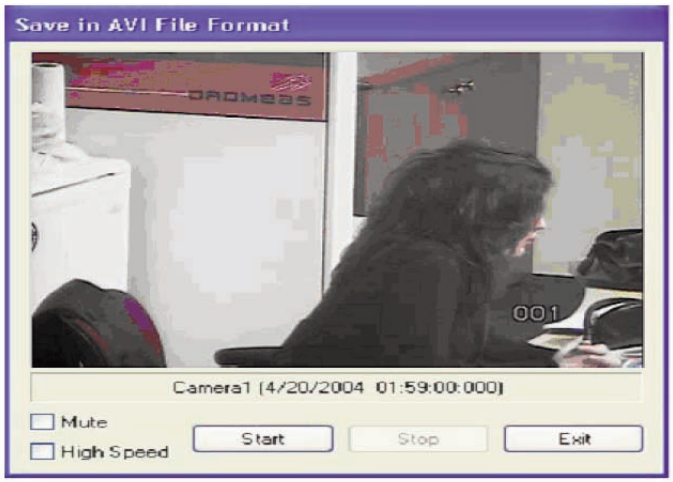

Click "Start" to start saving and "Stop" to stop saving. Mute: Saving video only (no audio) High speed: Saving in high speed.

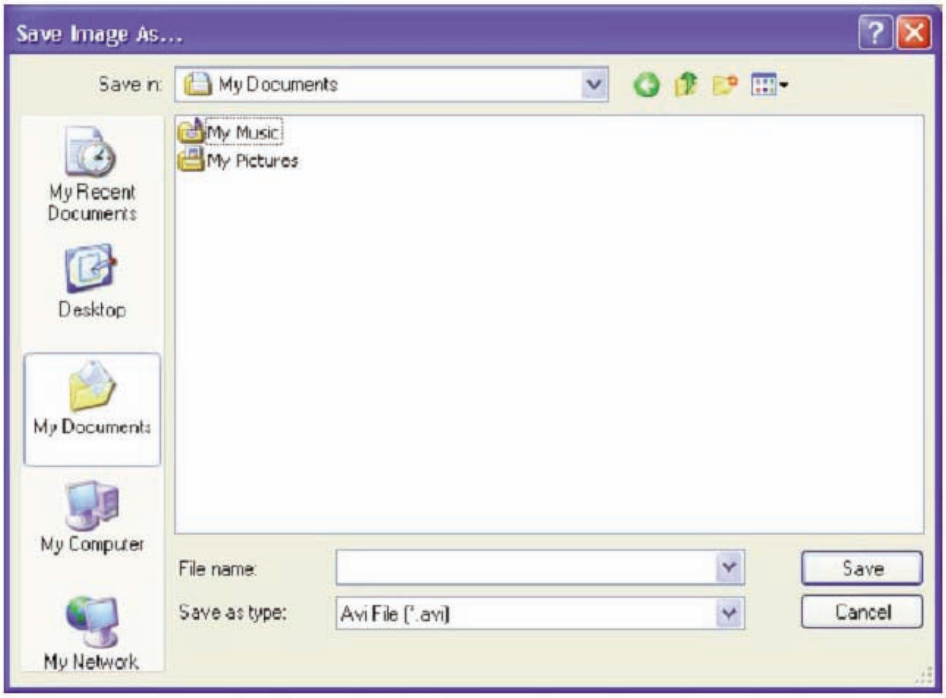

{Save in BMP Format} >>>

Click on "Start" and select "BMP" as you save images. Saved images can be checked using "Watermark Proofer".

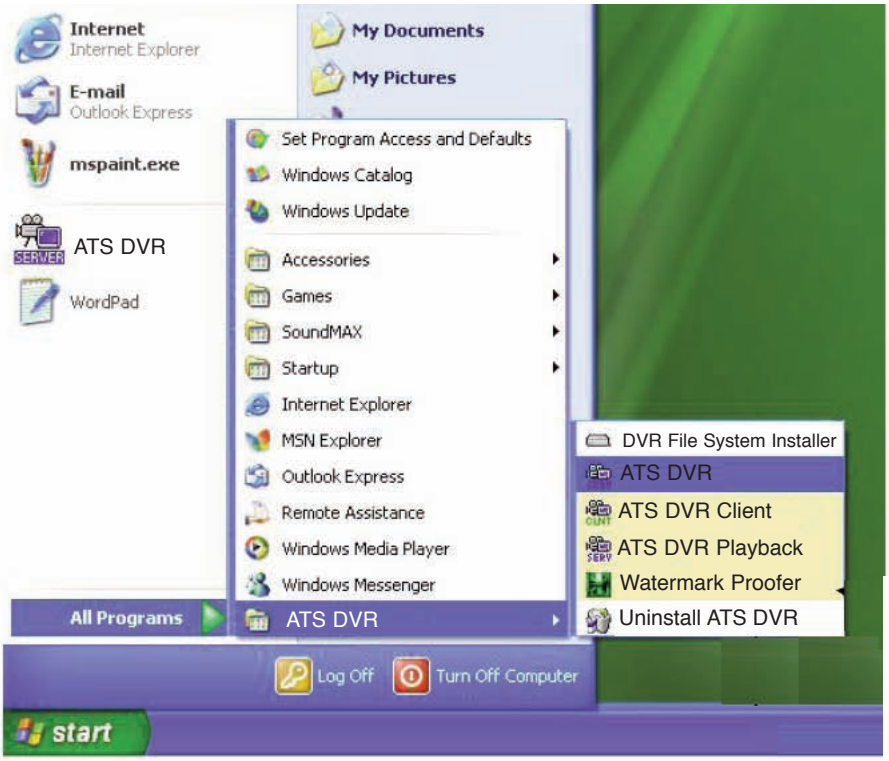

< Execute "Watermark Proofer" and check if certain saved images are forged or not.

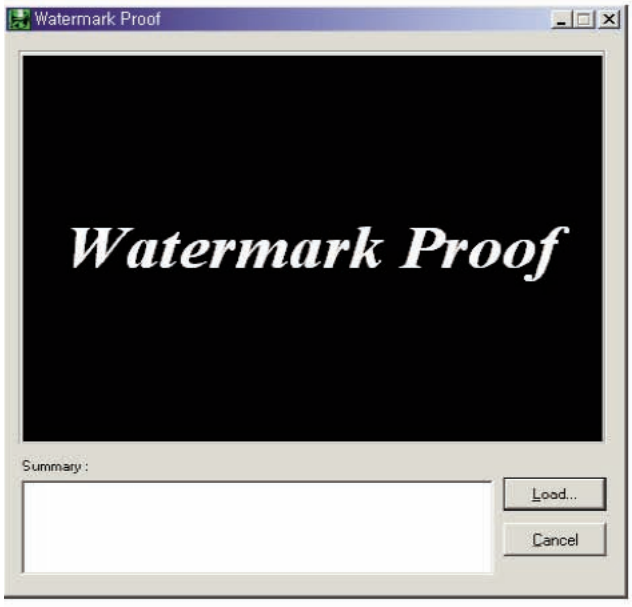

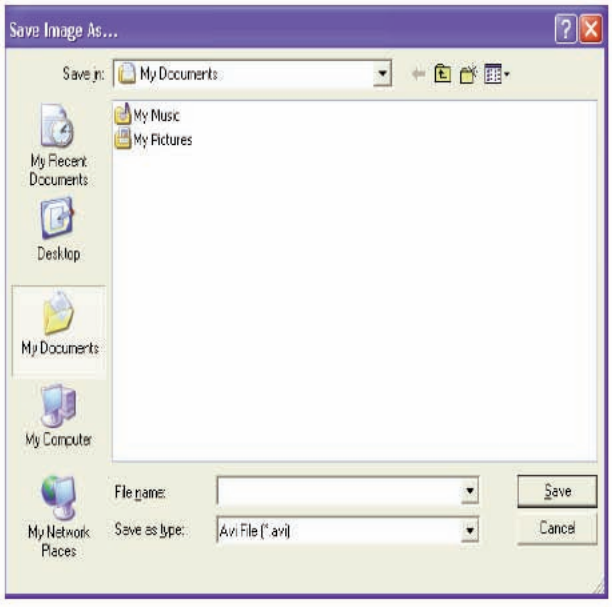

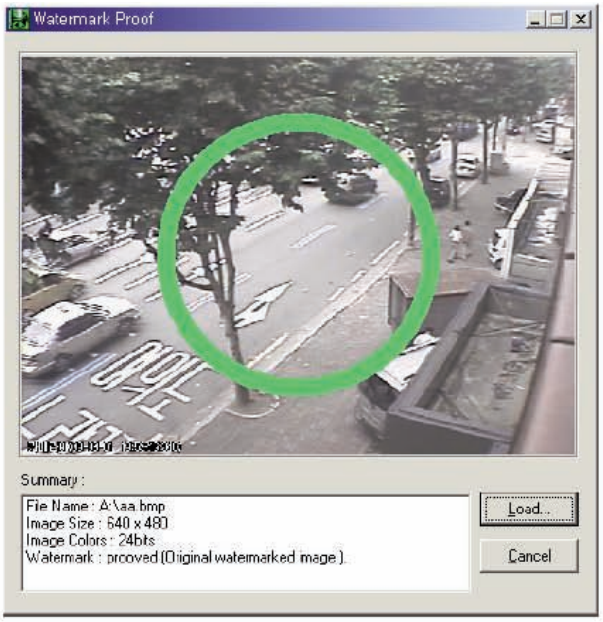

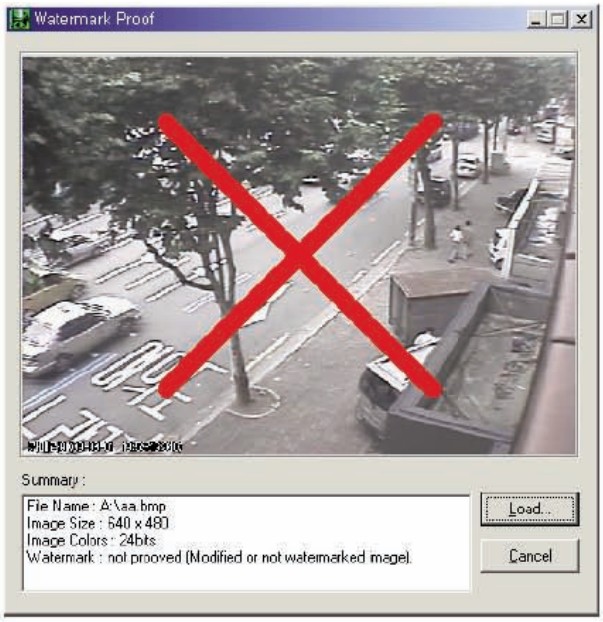

{Save in JPEG Format >>>>>>>>>>

Click "Start" and select "JPEG" as you save images.

{Save in JPEG with time period >>>>

Select time period and select channels to be saved in JPEG.

PRINT

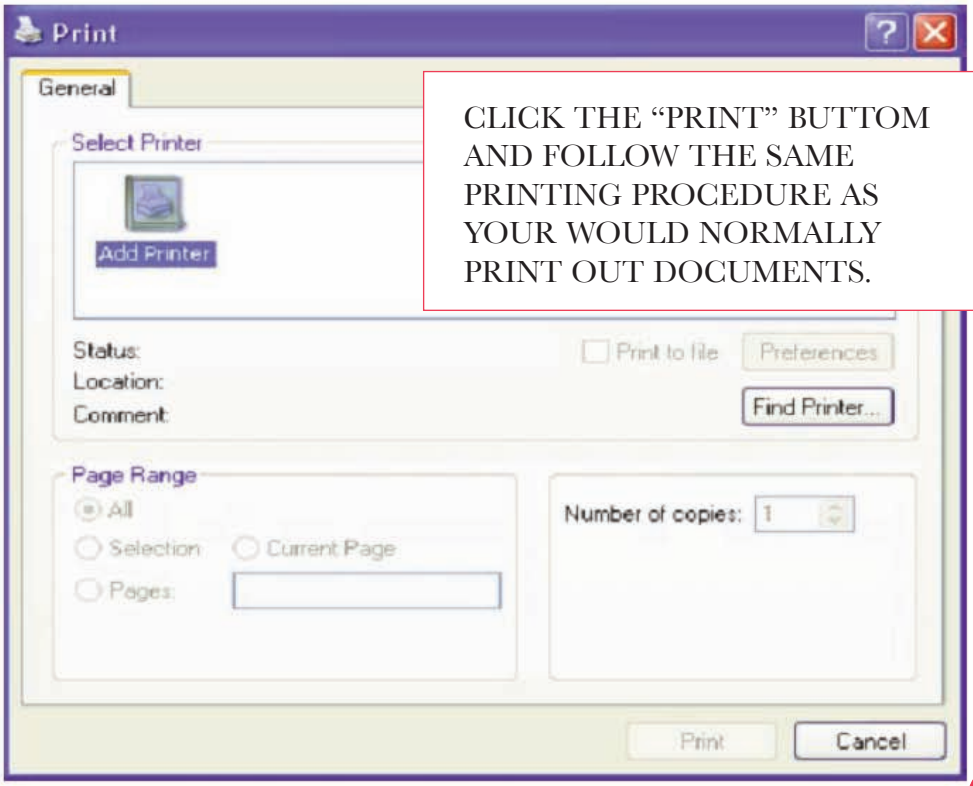

CLICK THE "PRINT" BUTTOM AND FOLLOW THE SAME PRINTING PROCEDURE AS YOUR WOULD NORMALLY PRINT OUT DOCUMENTS.

BACKUP

THE RECORDED DATA CAN BE COPIED FROM THE HARD DISK TO EXTERNAL STORAGE DEVICES, SUCH AS CD-R, DVD.

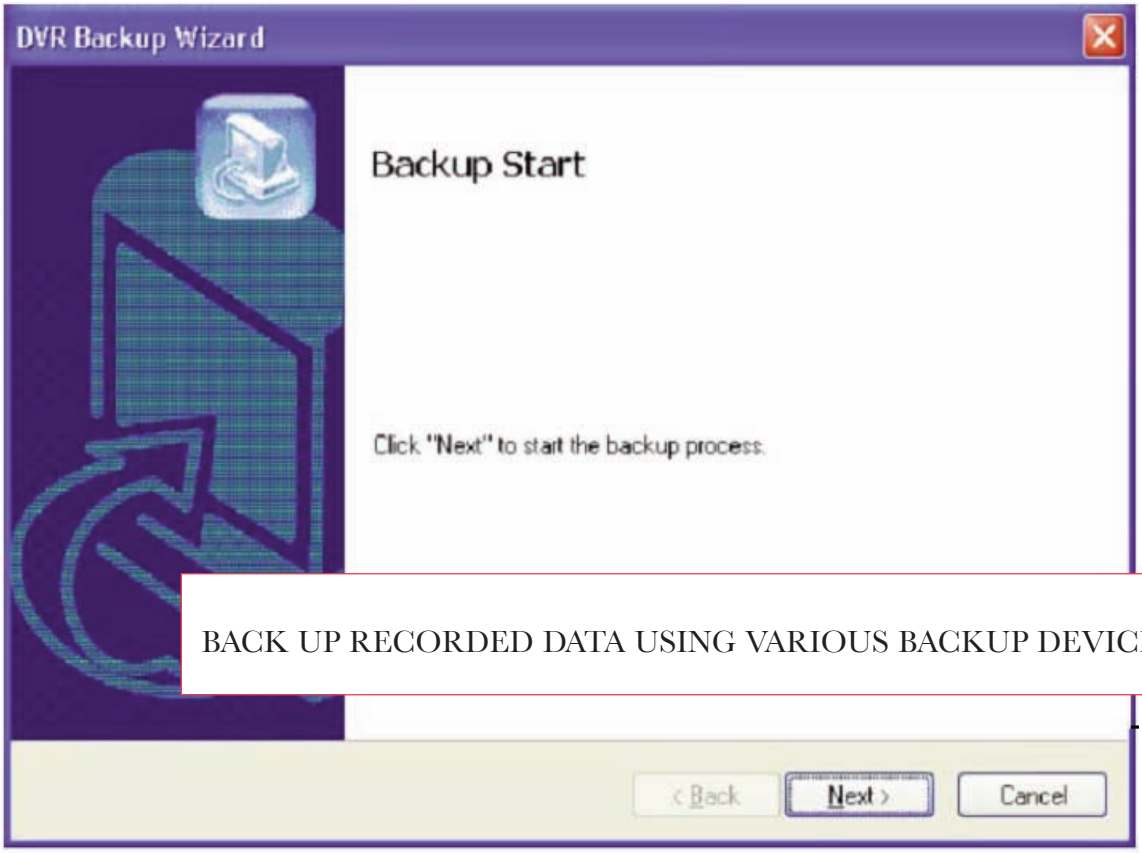

BACK UP RECORDED DATA USING VARIOUS BACKUP DEVICES.

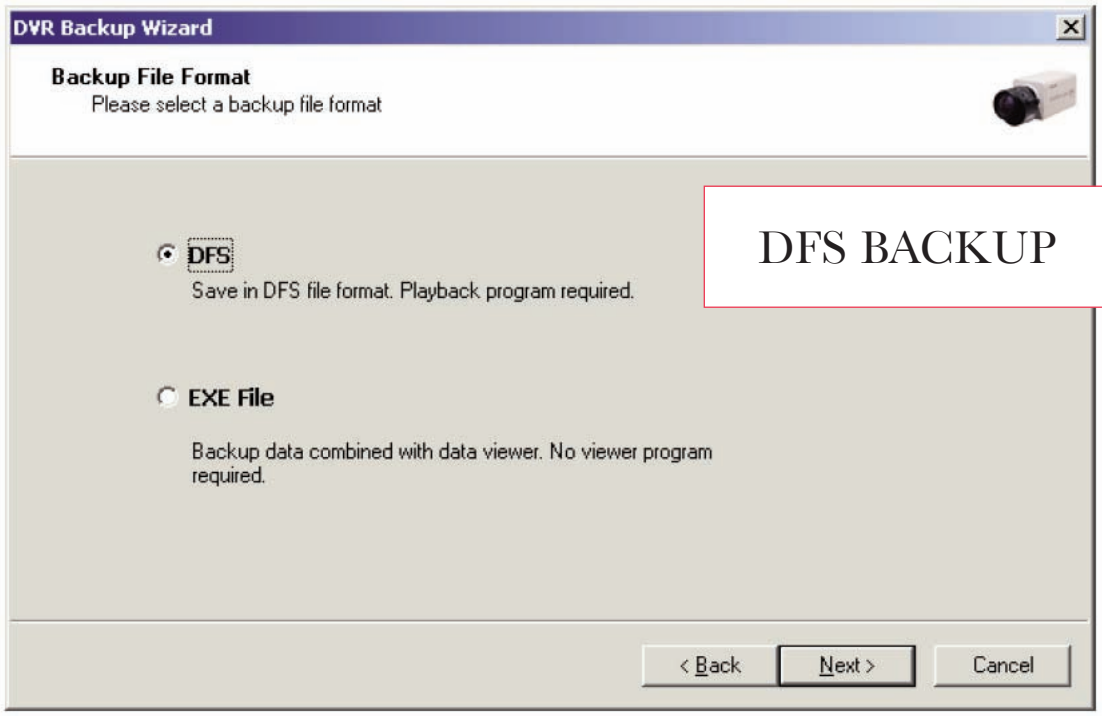
DVR Backup Wizard
Backup File Format
Please select a backup file format
DFS
Save in DFS file format. Playback program required.
EXE File
Backup data combined with data viewer. No viewer program required.
< Back
Next >
Cancel

DFS BACKUP

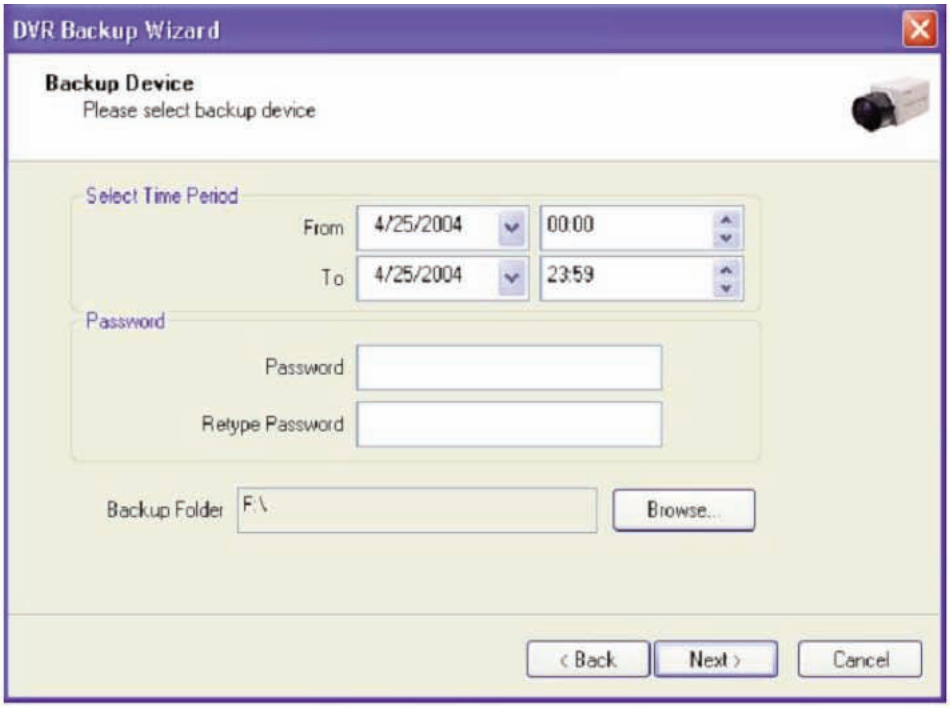

SELECT TIME PERIOD: SPECIFY TIME PERIOD FOR BACKUP. THE MINIMUM PERIOD FOR BACKUP IS 1 MINUTE.
IF PASSWORD IS SET, VIEWING BACKUP DATA WILL E POSSIBLE ONLY WHEN IT IS TYPED IN.
BACKUP FOLDER: CLICK THE "BROWSE" BUTTON, SELECT A DRIVE TO BACK UP AND ENTER A DESIRED FOLDER NAME.

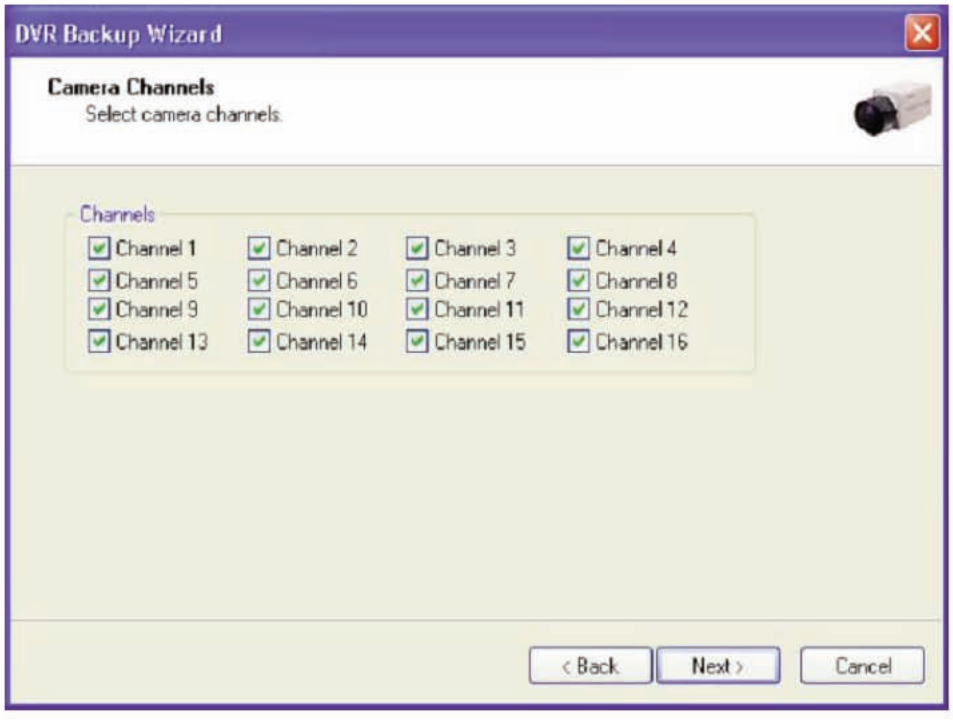

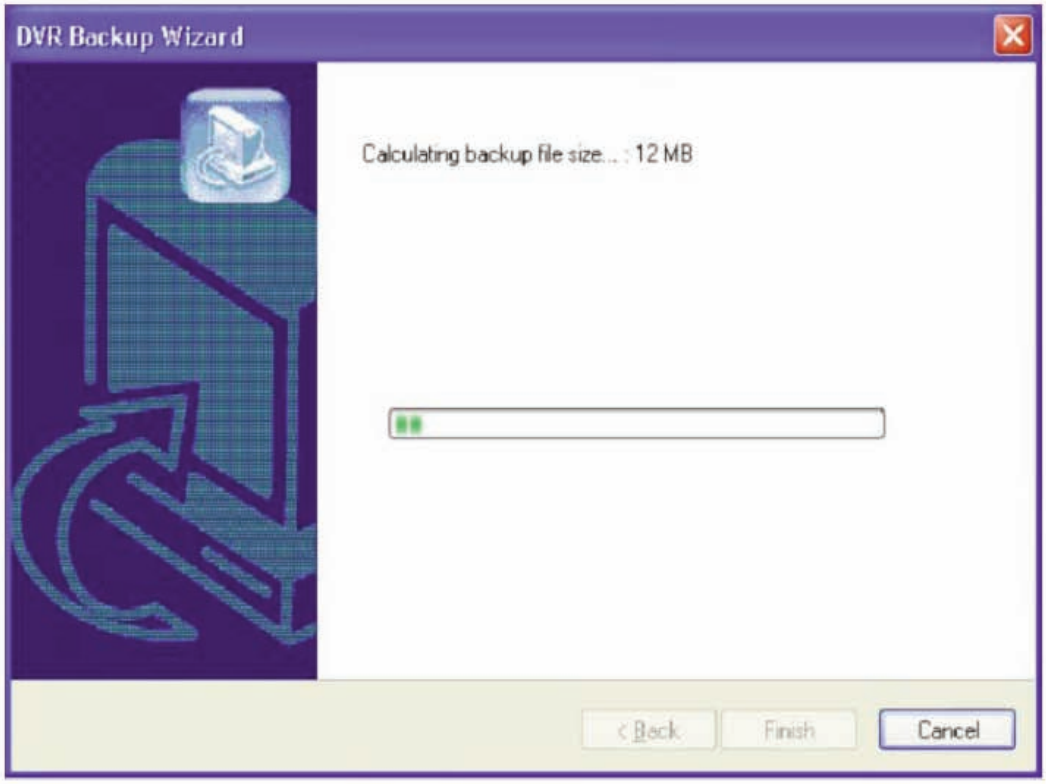
DVR Backup Wizard
Calculating backup file size... : 12 MB
< Back
Finish
Cancel

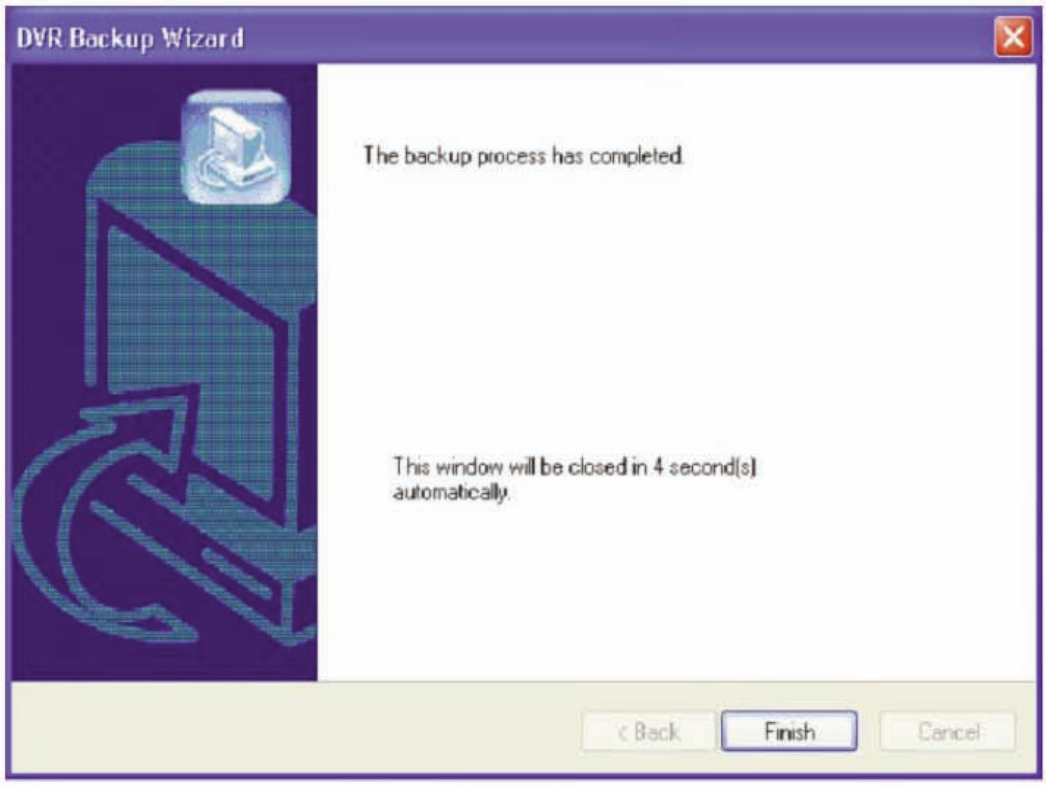
DVR Backup Wizard
The backup process has completed.
This window will be closed in 4 second(s) automatically.
< Back
Finish
Cancel

EXE BACKUP

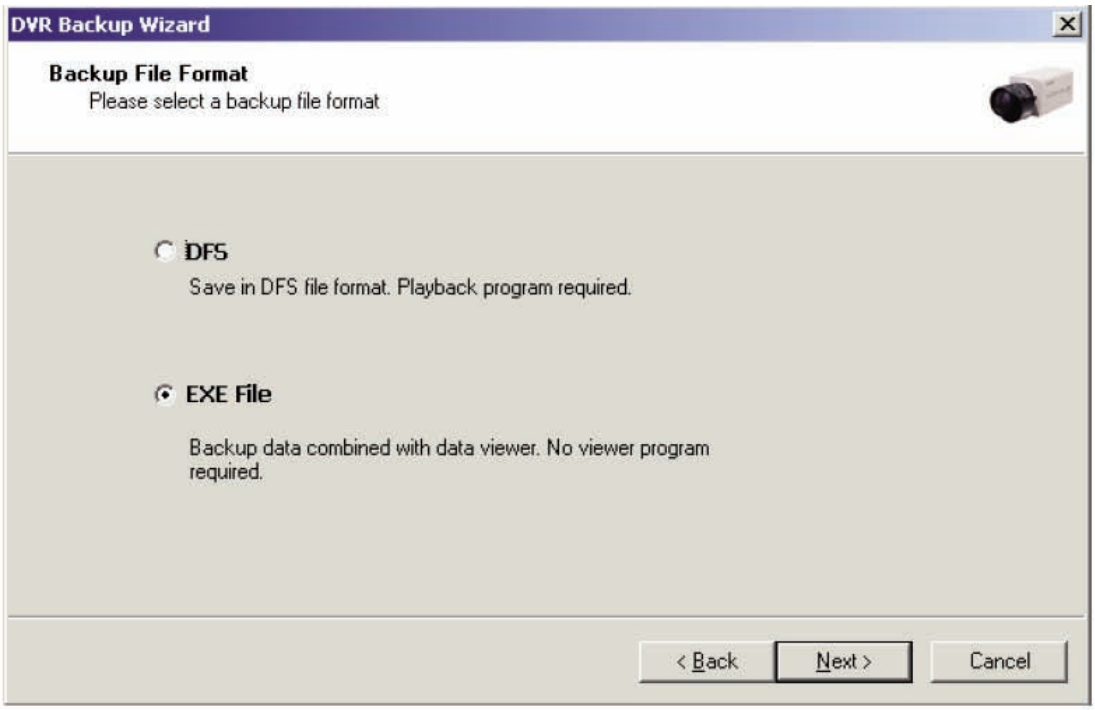
DVR Backup Wizard
Backup File Format
Please select a backup file format
DFS
Save in DFS file format. Playback program required.
EXE File
Backup data combined with data viewer. No viewer program required.
< Back
Next >
Cancel

ANY RECORDED DATA CAN BE SAVED AS ".EXE" FILE. NO VIEWER PROGRAM IS REQUIRED TO SEE SAVED DATA.
NOTE:
1. FILE SIZE IS LIMITED UP TO 1 GB.
2. 1 CHANNEL BACKUP ONLY.

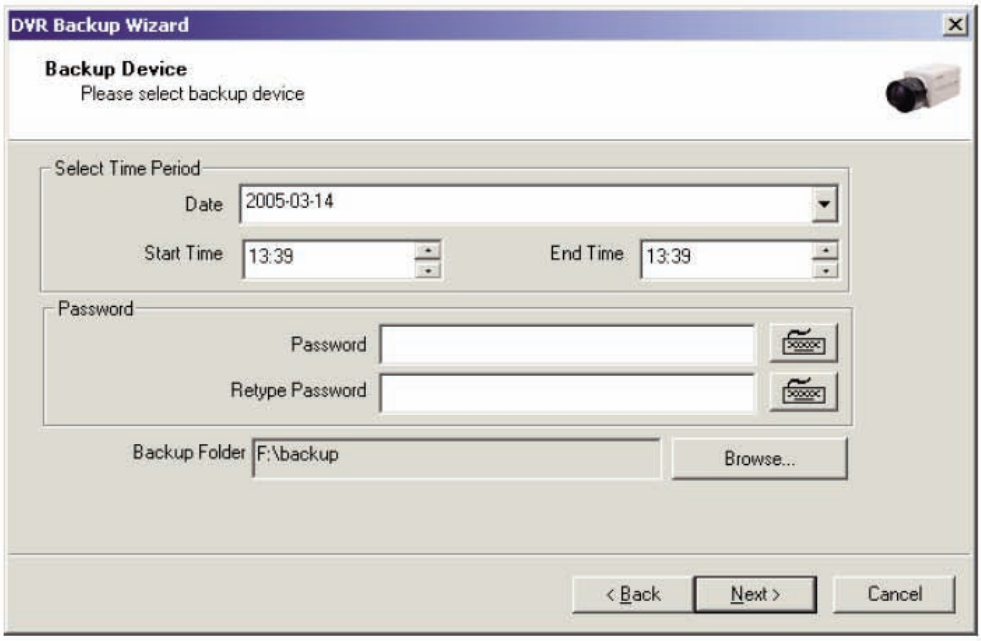

1. SELECT "EXE FILE".
2. SPECIFY TIME PERIOD, PASSWORD, DERIVE, ETC.
3. SELECT ONE CHANNEL TO BACK UP.
4. SPECIFY FILE SIZE UP TO ONE GB. IF IT IS LARGER THAN 1GB, MULTIPLE EXE FILES WILL BE CREATED.
5. TICK THE "ONCE MAKE EXE FILE" BOX TO CREATE ONLY ONE FILE WITH THE FILE SIZE SPECIFIED.
6. DOUBLE-CLICK THE EXE FILE CREATED TO SEE DATA.

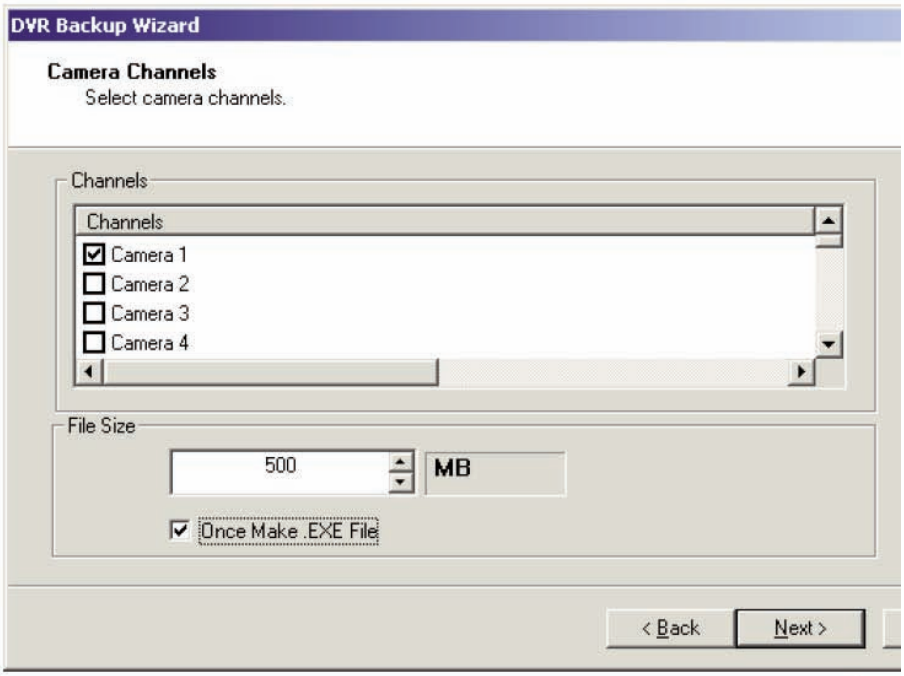

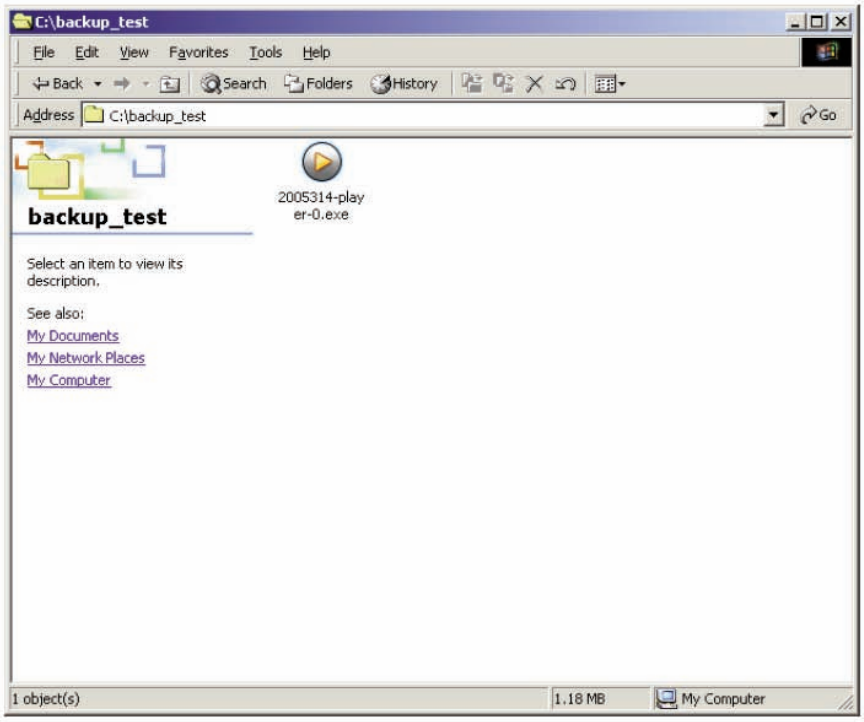

RUN CD BURNER (For Non Windows XP Users)

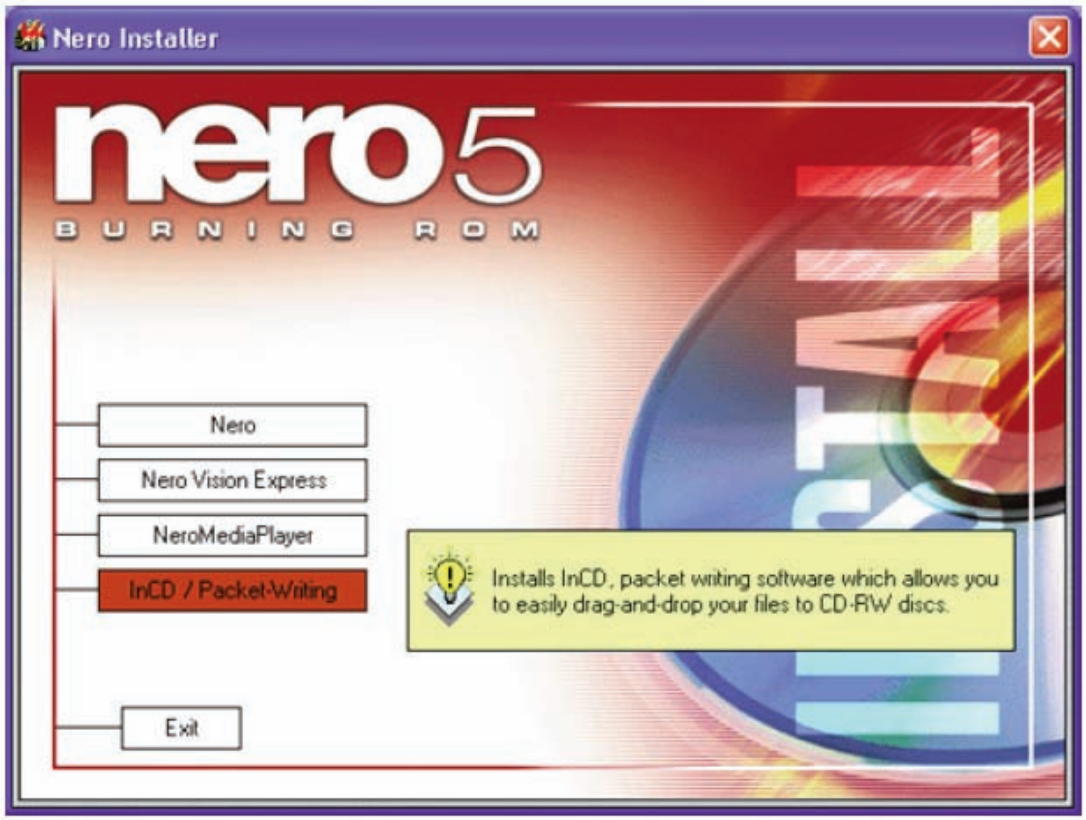

1. Install bundle CD and install INCD.
2. After installing INCD, run "InCDL.exe" which is the INCD Launch Program.
3. Insert a blank RW CD and then start formatting it (If it is a brand-new one, click "Format" instead of "Quick Format".

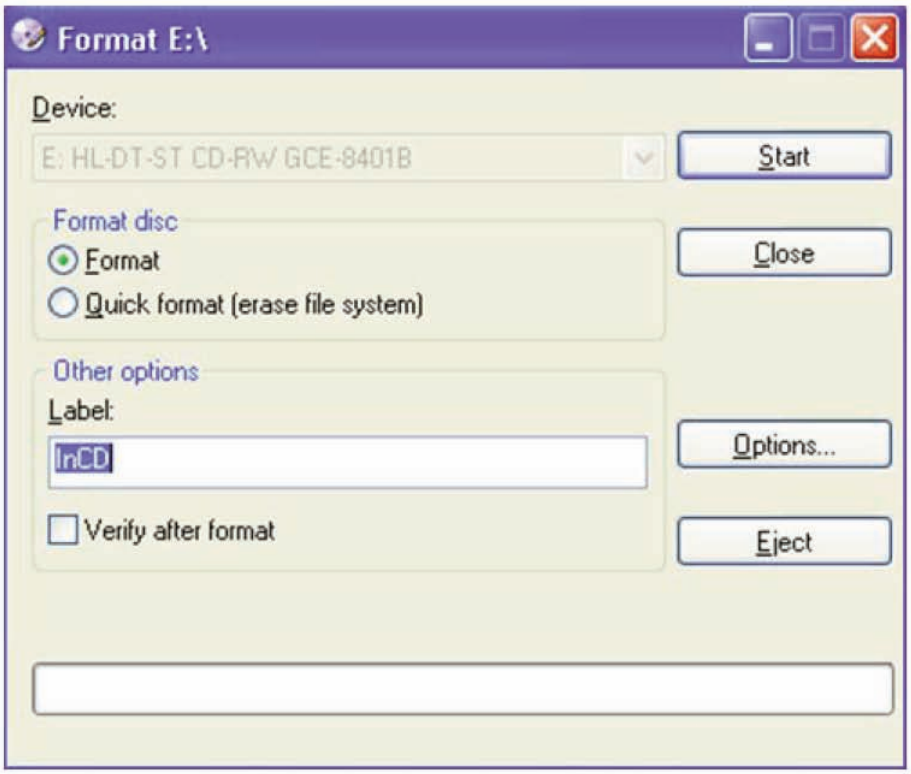
Format E:\
Device:
E: HL-DT-ST CD-RW GCE-8401B
Start
Format disc
Format
Quick format (erase file system)
Close
Other options
Label:
InCD
Options...
Verify after format
Eject

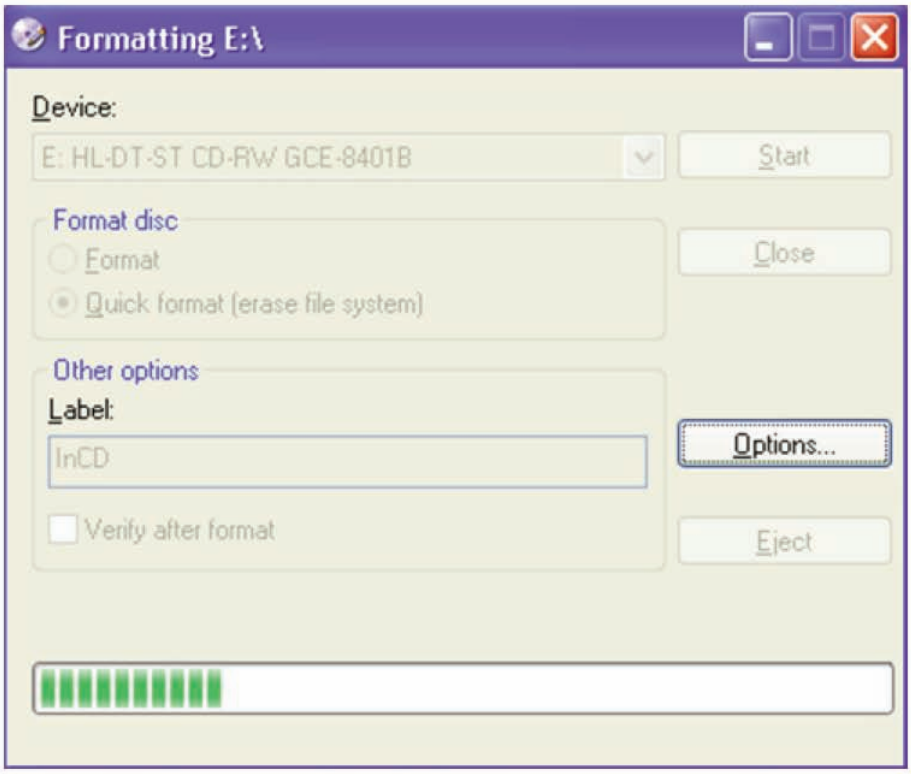
Formatting E:\
Device:
E: HL-DT-ST CD-RW GCE-8401B
Start
Format disc
Format
Quick format (erase file system)
Close
Other options
Label:
InCD
Options...
Verify after format
Eject

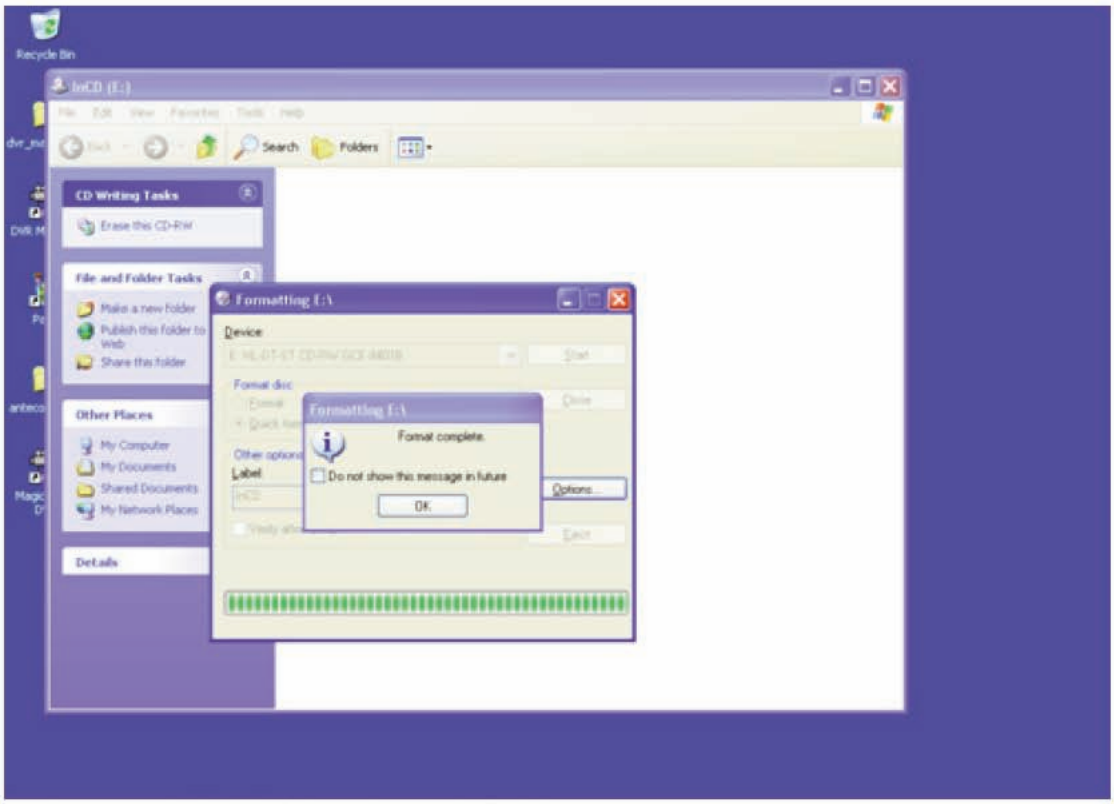

5. Leave the Eyemax Program and insert the blank RW CD which has been formatted.
6. Select "Backup" and click "Next" to start.
7. Select time period & password and click "Browse" to create a folder.

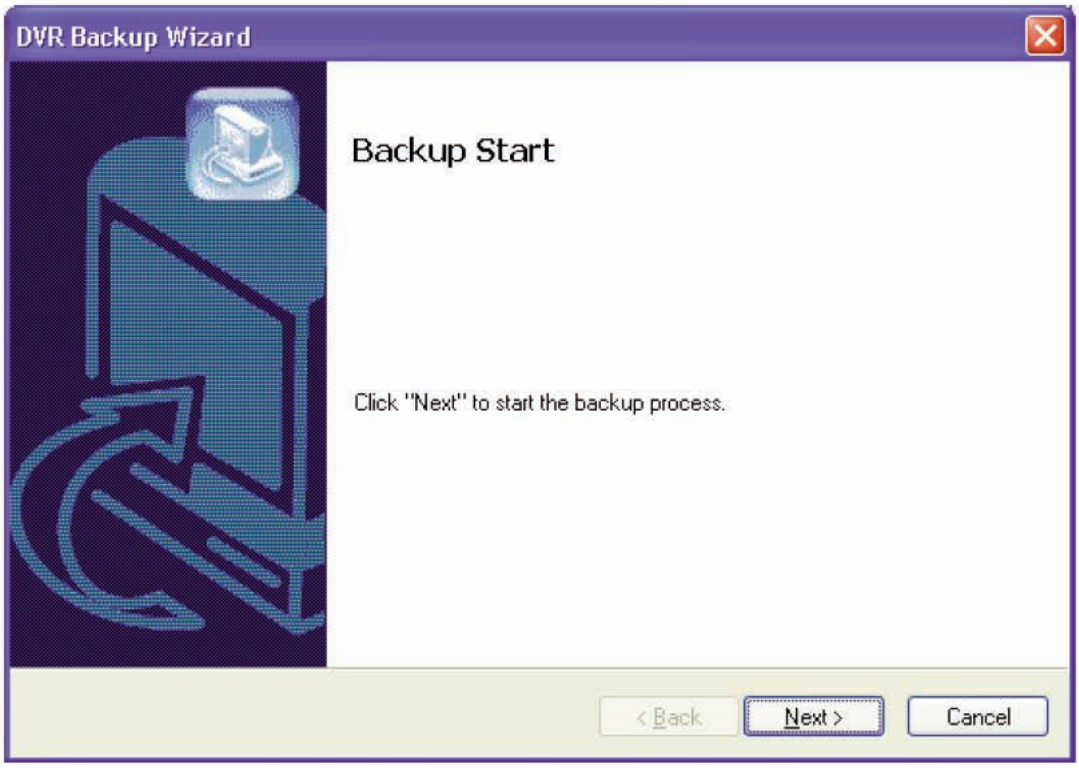

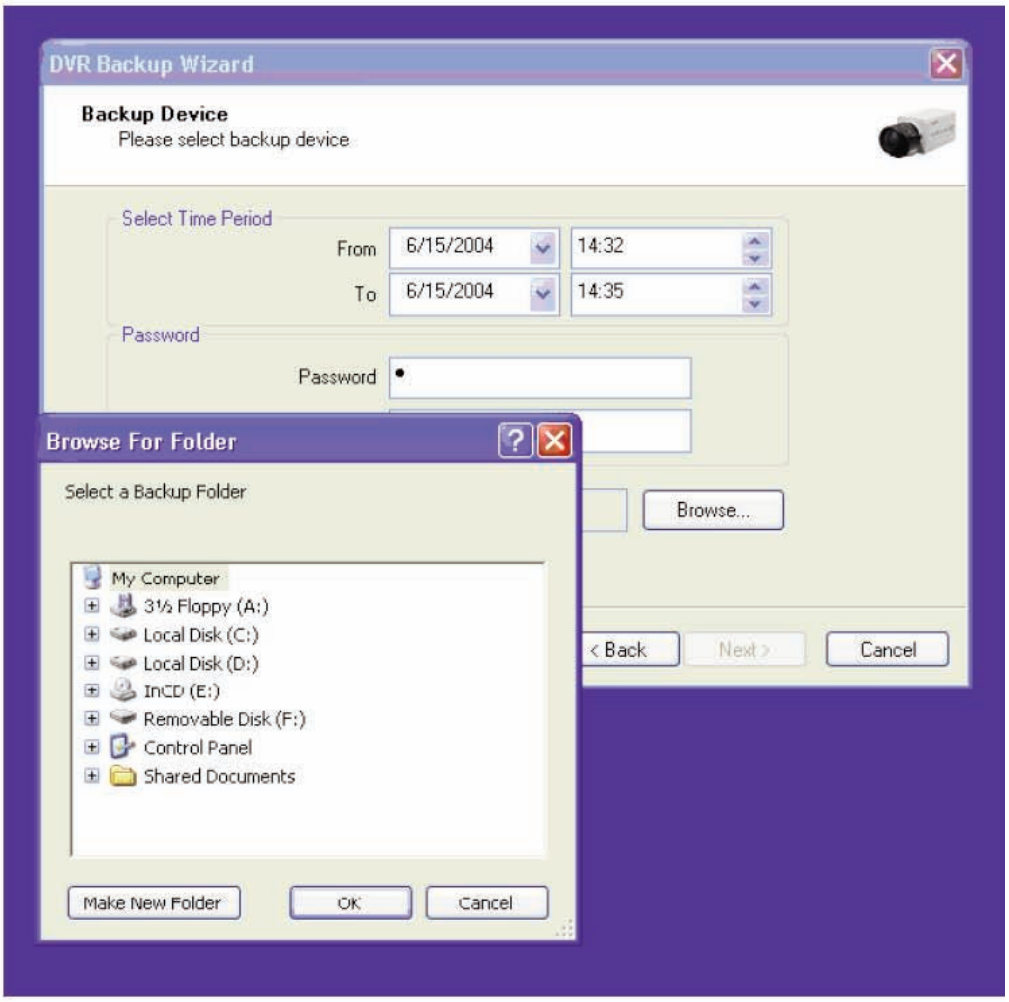
DVR Backup Wizard
Backup Device
Please select backup device
Select Time Period
From
6/15/2004
14:32
To
6/15/2004
14:35
Password
Password
Browse...
< Back
Next >
Cancel
Browse For Folder
Select a Backup Folder
My Computer
3½ Floppy (A:)
Local Disk (C:)
Local Disk (D:)
InCD (E:)
Removable Disk (F:)
Control Panel
Shared Documents
Make New Folder
OK
Cancel

Browse For Folder
Select a Backup Folder
My Computer
3½ Floppy (A:)
Local Disk (C:)
Local Disk (D:)
InCD (E:)
New Folder
Removable Disk (F:)
Control Panel
Shared Documents
Make New Folder
OK
Cancel

Run CD Burner (For WindowsXP Users Only

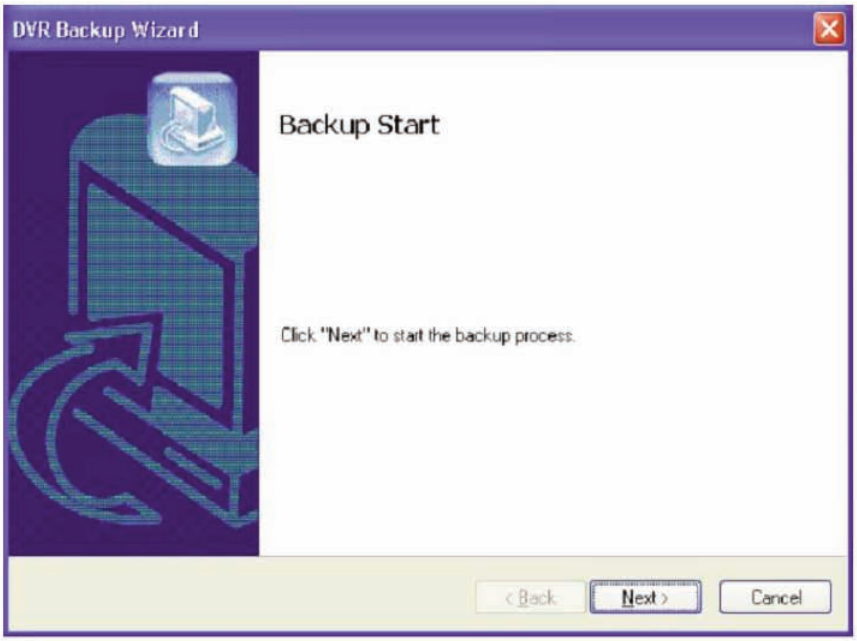

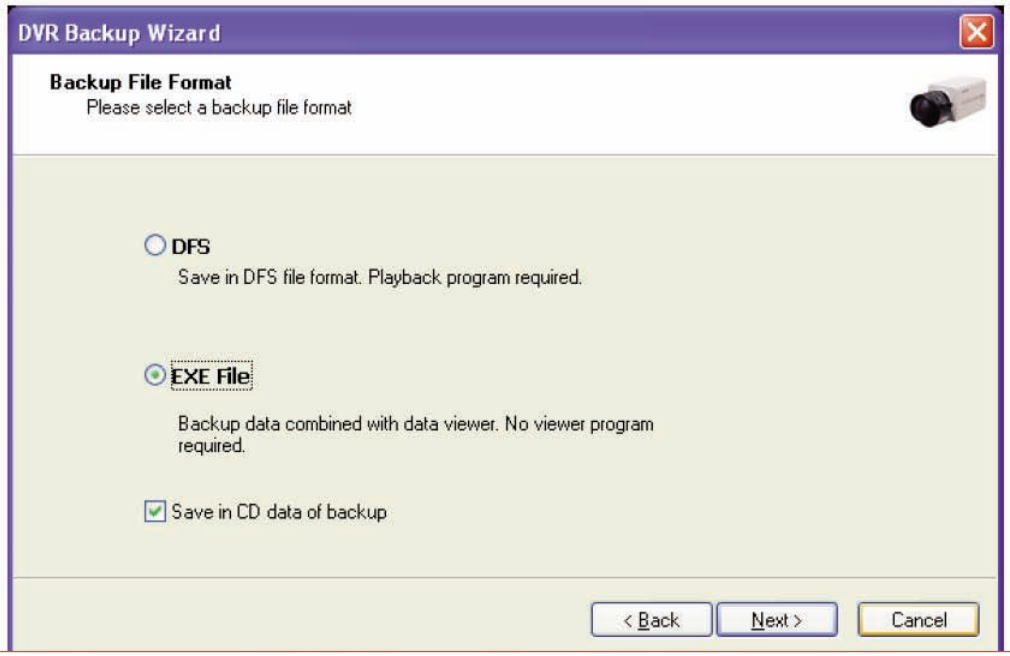
DVR Backup Wizard
Backup File Format
Please select a backup file format
DFS
Save in DFS file format. Playback program required.
EXE File
Backup data combined with data viewer. No viewer program required.
Save in CD data of backup
< Back
Next >
Cancel

Windows XP users can back up data directly in a CD without exiting the ATS Program.
1. Tick the "Save in CD data of backup" box and click "Next".

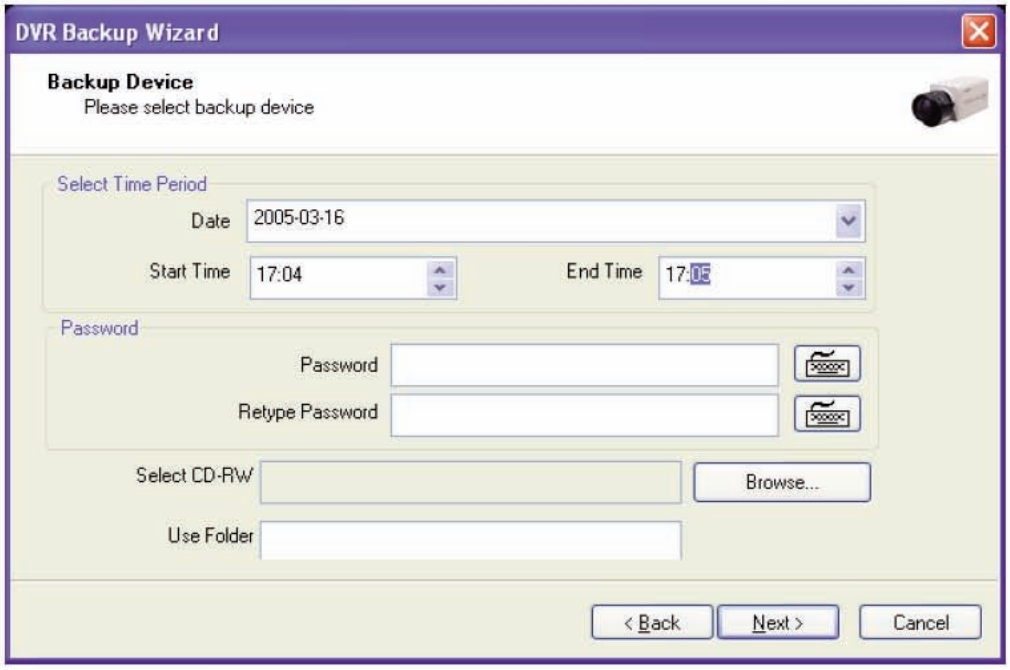

5. Select Time Period: Specify time period and password.
6. Select CD-RW drive.
7. Create folder name if it should be used and click "Next".
8. CD information will be shown as below.

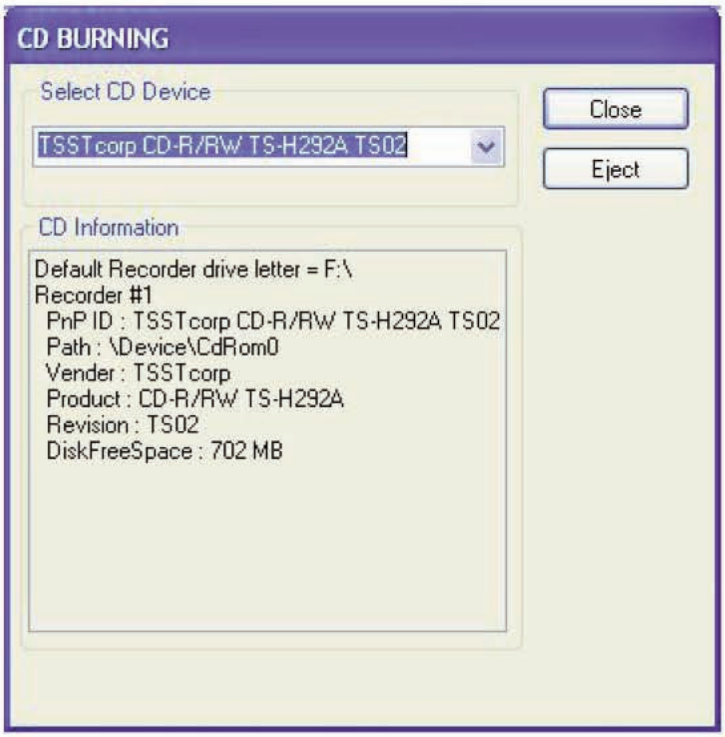

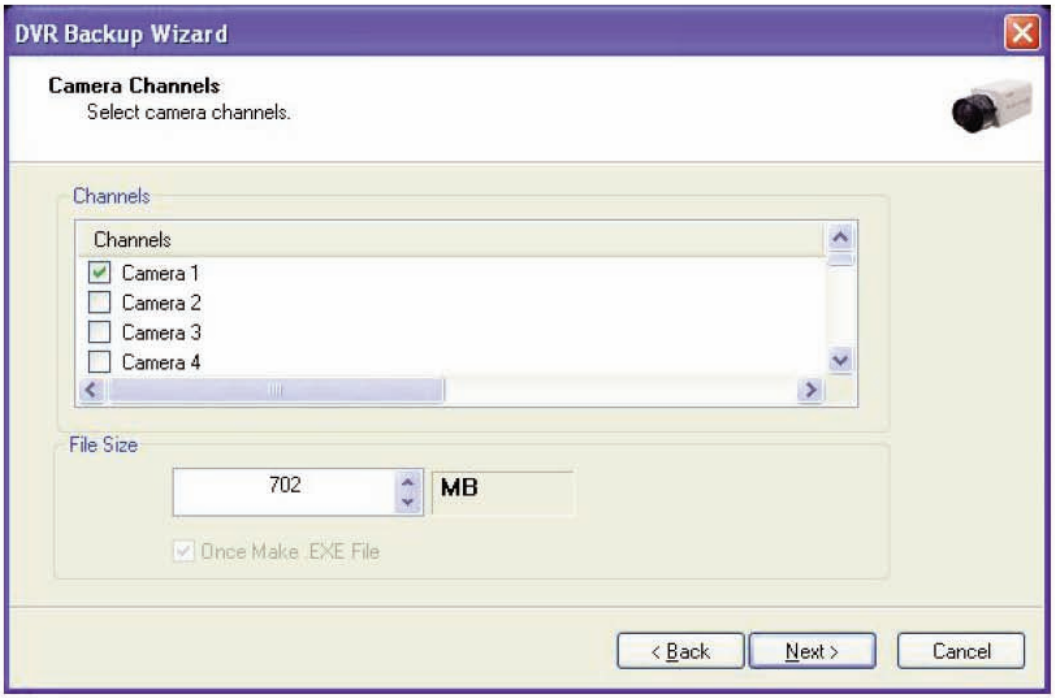

3. Select 1 channel to back up.
4. Identify the maximum file size indicated. An attempt to back up more than the size indicated will result in a failure.

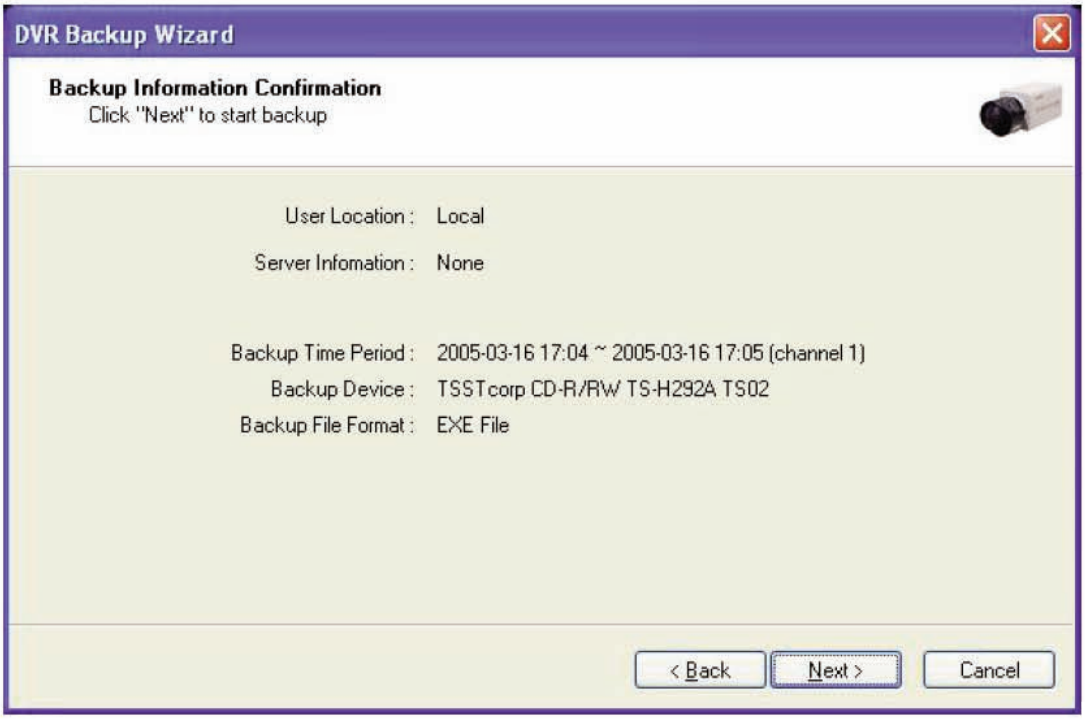
DVR Backup Wizard
Backup Information Confirmation
Click "Next" to start backup
User Location : Local
Server Infomation : None
Backup Time Period : 2005-03-16 17:04 ~ 2005-03-16 17:05 (channel 1)
Backup Device : TSSTcorp CD-R/RW TS-H292A TS02
Backup File Format : EXE File
< Back
Next >
Cancel

After completing the back up, find teh files created in the CD.

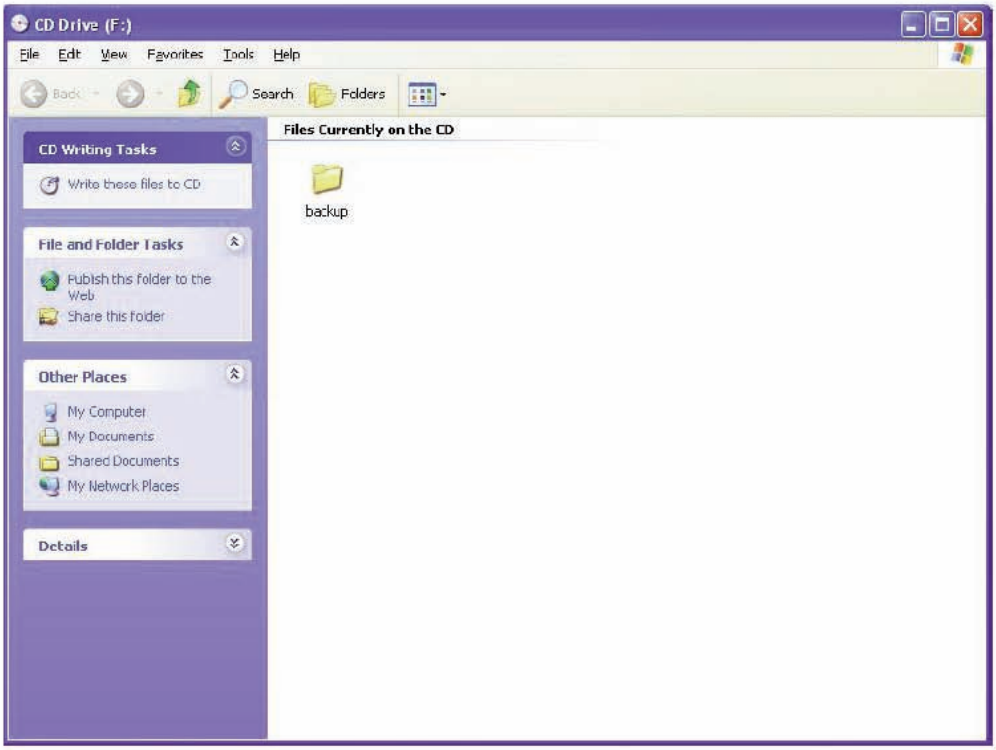

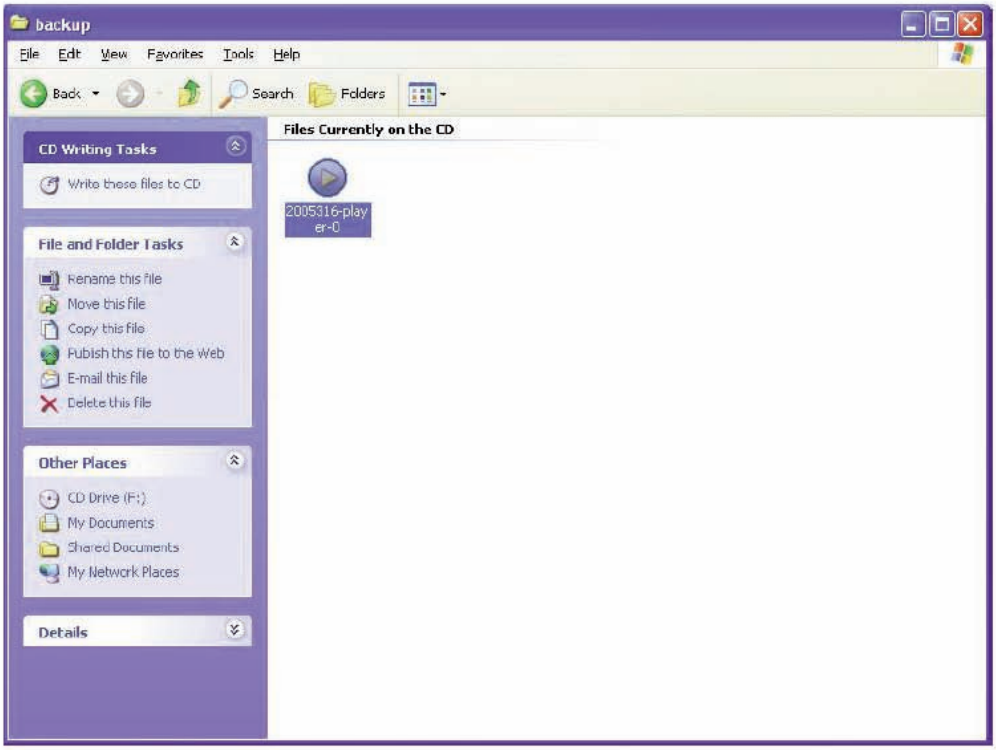

Playback

1. Click the “Start” button and run the “DVR’s Playback Program”.
2. Select a folder (subfolder) to see saved data.

REMOTE MONITORING SYSTEM

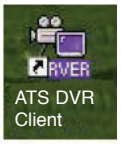

PROGRAM EXECUTION

DOUBLE CICK ON THE "ATS DVR CLIENT" ICON ON THE DESK TOP TO EXECUTE REMOTE MONITORING SYSTEM (CLIENT).

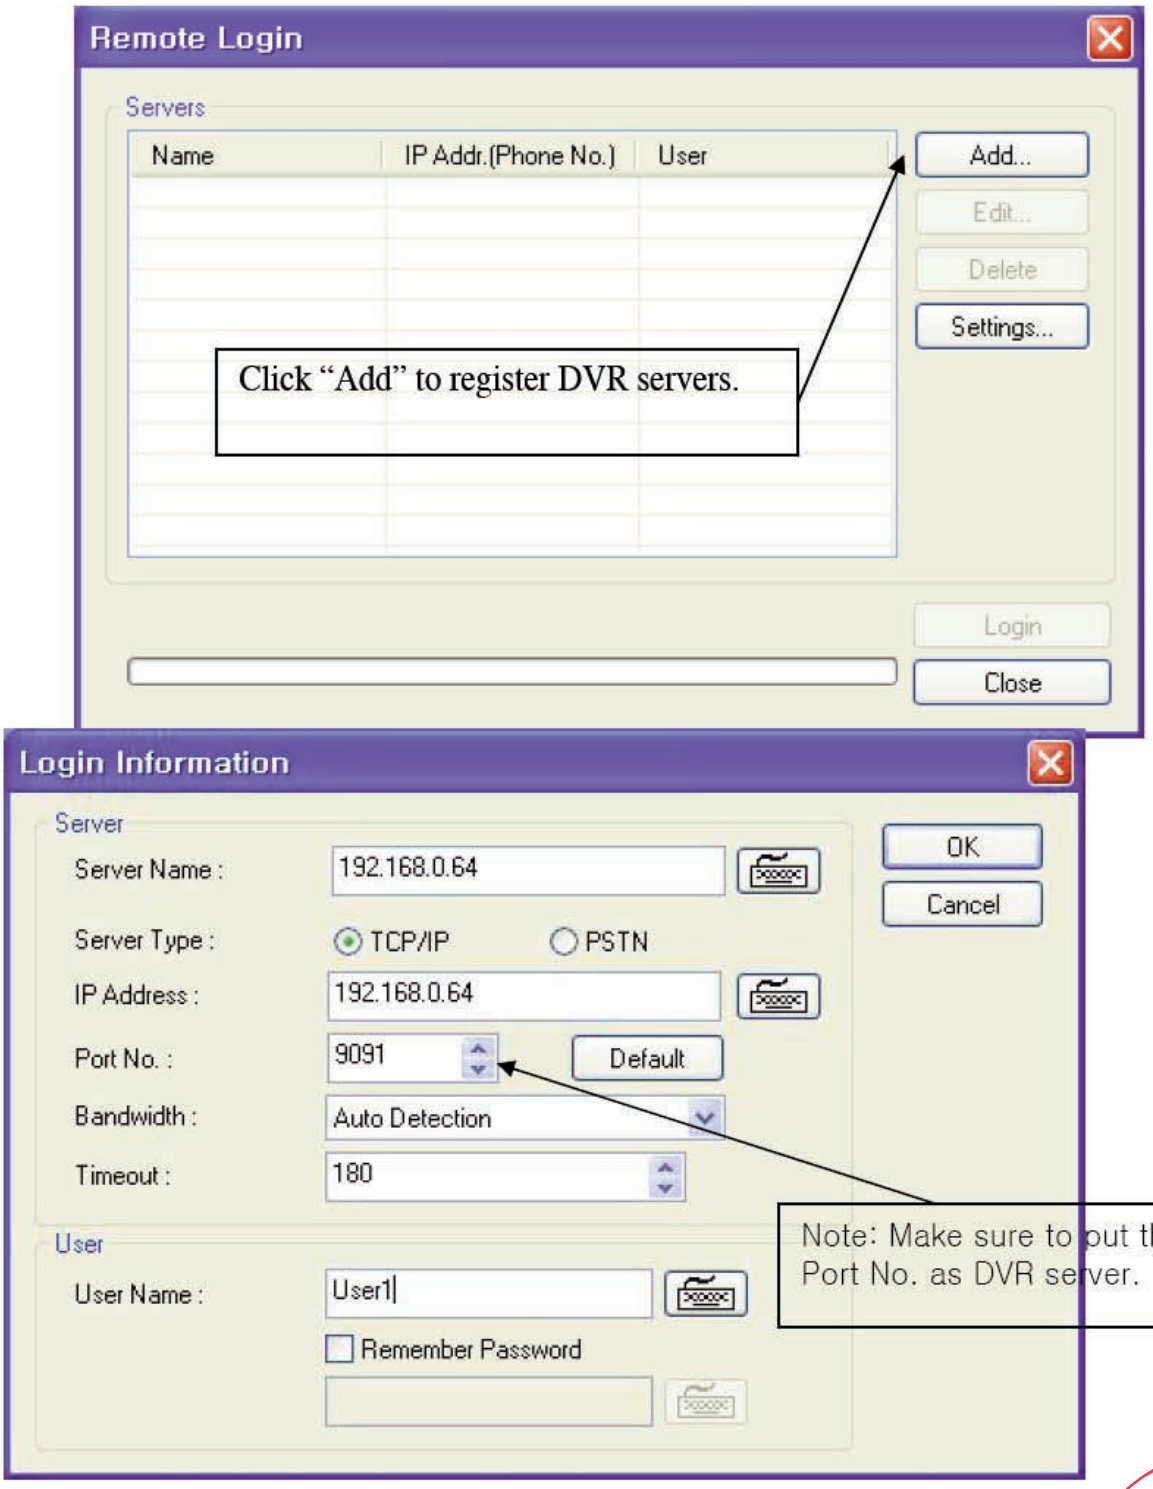

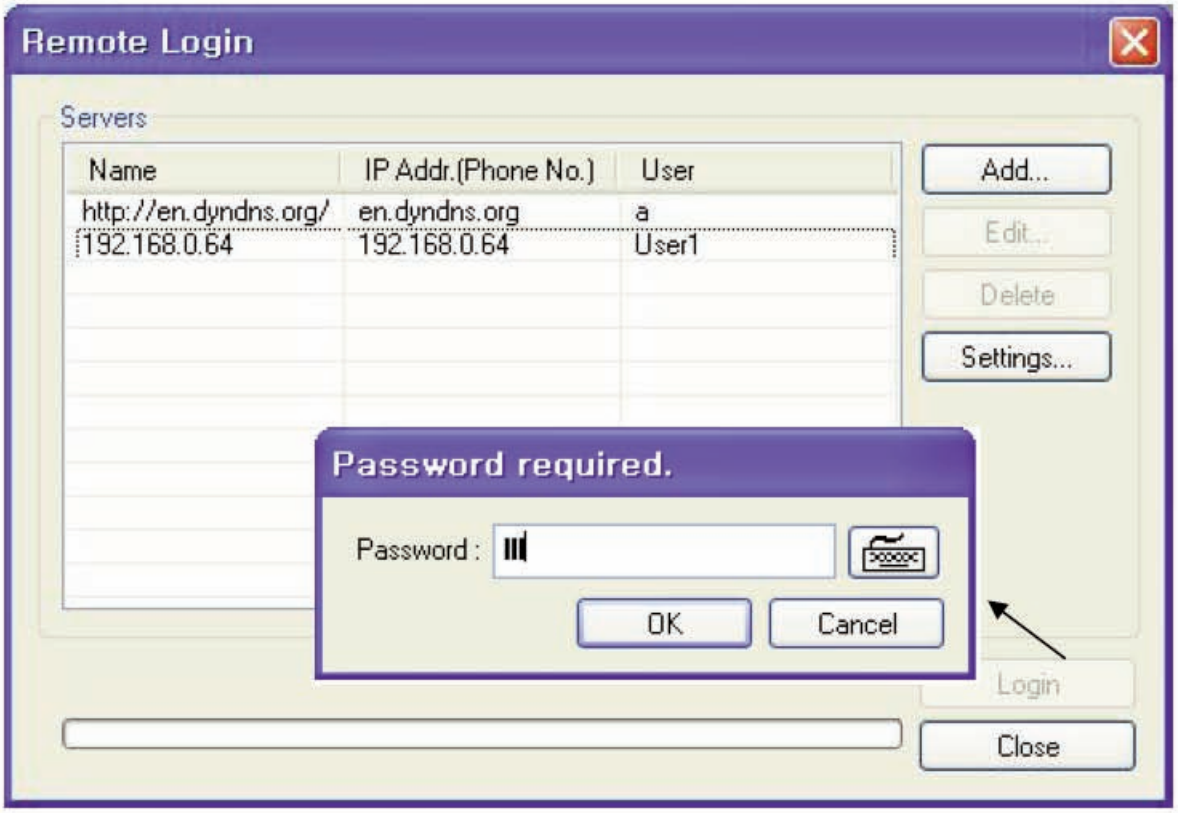

There can be more than one DVR server registered. Select one from "Servers", click on "Login" and type in password to log in.
* Edit: Login info. changes can be made here.
* Delete: Registered servers can be deleted with one click.

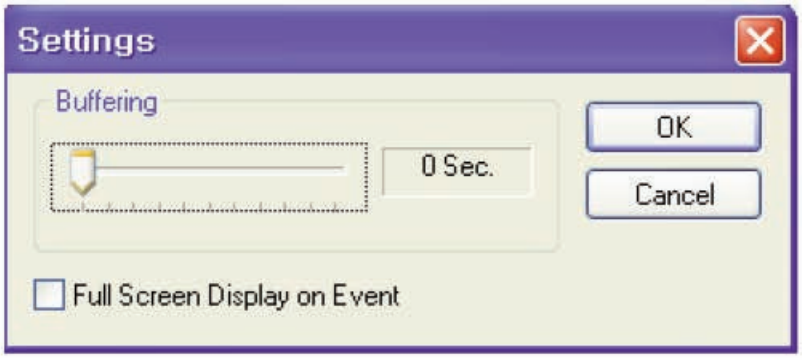

REMOTE SAVE AND BACKUP

THE INSTANT AVI FILE SAVE OF REAL TIME VIDEO CAN BE DOEN REMOTELY.

1. CLICK THE RIGHT MOUSE TO START SAVING.
2. CLICK THE RIGHTR MOUSE TO STOP SAVING.

REMOTE BACK UP CAN ALSO BE DONE.

THE SAME PROCEDURE IS USED AS “DFS BACKUP”.

REAL TIME AUDIO

CLICK THE RIGHT MOUSE AND SELECT "ENABLE AUDIO" TO HEAR REAL TIME AUDIO.

NOTE: CHANGING "SETUP" REMOTELY CAN BE DONE IF REMOTE USER IS "ADMIN" OR "ADMIN MODE".